


# SIEMENS

## AT Command Set

### Siemens Cellular Engines

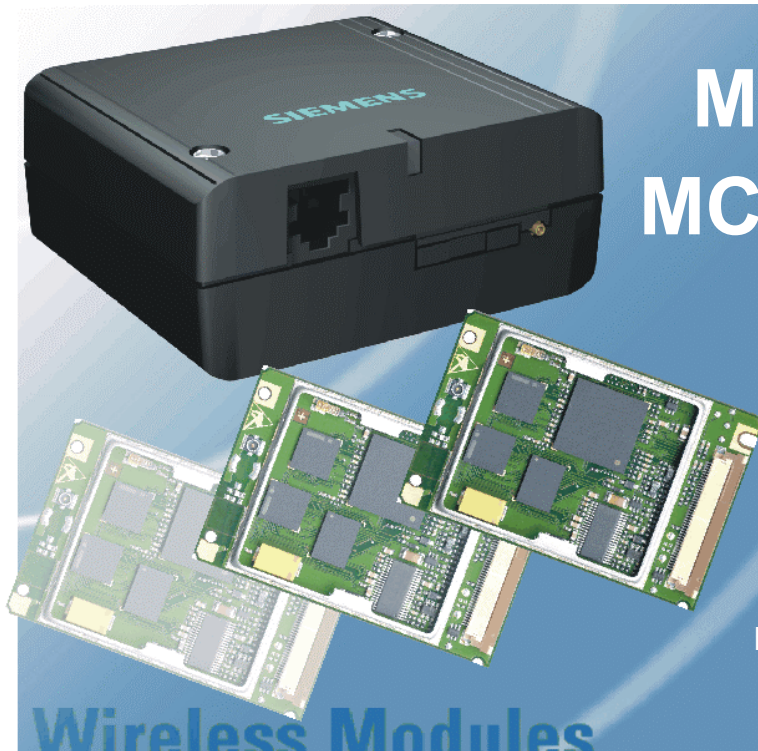

**MC35 Module**  
**MC35 Terminal**

Version: 05.00  
DocID: MC35\_ATC\_01\_V05.00

Wireless Modules

Document Name: **AT Command Set**  
**Siemens Cellular Engines**

Version: **05.00**  
Date: **July 15, 2002**  
Doc Id: **MC35\_ATC\_01\_V05.00**  
Status: **Released**

### General note

With respect to any damages arising in connection with the described product or this document, Siemens shall be liable according to the General Conditions on which the delivery of the described product and this document are based.

This product is not intended for use in life support appliances, devices or systems where a malfunction of the product can reasonably be expected to result in personal injury. Siemens AG customers using or selling this product for use in such applications do so at their own risk and agree to fully indemnify Siemens for any damages resulting from illegal use or resale.

Applications incorporating the described product must be designed to be in accordance with the technical specifications provided in these guidelines. Failure to comply with any of the required procedures can result in malfunctions or serious discrepancies in results.

Furthermore, all safety instructions regarding the use of mobile technical systems, including GSM products, which also apply to cellular phones must be followed.

Handheld applications such as mobile phones or PDAs incorporating the described product must be in accordance with the guidelines for human exposure to radio frequency energy. The Specific Absorption Rate (SAR) of the application must be evaluated and approved to be compliant with national and international safety standards or directives.

Subject to change without notice at any time.

### Copyright

Copying of this document and giving it to others and the use or communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. All rights reserved in the event of grant of a patent or the registration of a utility model or design.

Copyright © Siemens AG 2002

## Contents

<b>0</b>	<b>Version History .....</b>	<b>9</b>
<b>1</b>	<b>Introduction .....</b>	<b>13</b>
1.1	Scope of the document .....	13
1.2	Supported product versions and related documents .....	14
1.3	Conventions .....	15
1.4	AT command syntax .....	15
1.4.1	Using parameters .....	15
1.4.2	Combining AT commands on the same command line .....	16
1.4.3	Entering successive AT commands on separate lines .....	16
1.5	Supported character sets .....	17
1.6	Flow control .....	18
1.6.1	Software flow control (XON/OFF flow control) .....	18
1.6.2	Hardware flow control (RTS/CTS flow control) .....	18
<b>2</b>	<b>Standard V.25ter AT Commands .....</b>	<b>19</b>
2.1	A/ Repeat previous command line .....	19
2.2	+++ Switch from data mode or PPP online mode to command mode .....	19
2.3	AT\Qn Flow control .....	20
2.4	ATA Answer a call .....	20
2.5	ATD Mobile originated call to dial a number .....	21
2.6	ATD<mem><n> Originate call to phone number <n> in memory <mem> .....	23
2.7	ATD<n> Originate call to phone number selected from active memory .....	25
2.8	ATD<str> Originate call to phone number in memory with corresponding field .....	26
2.9	ATDI Mobile originated call to dialable ISDN number <n> .....	27
2.10	ATDL Redial last telephone number used .....	28
2.11	ATE Enable command echo .....	29
2.12	ATH Disconnect existing connection .....	29
2.13	ATI Display product identification information .....	30
2.14	ATI[value] Display additional identification information .....	30
2.15	ATL Set monitor speaker loudness .....	31
2.16	ATM Set monitor speaker mode .....	31
2.17	ATO Switch from command mode to data mode / PPP online mode .....	31
2.18	ATQ Set result code presentation mode .....	32
2.19	ATP Select pulse dialling .....	32
2.20	ATS0 Set number of rings before automatically answering the call .....	32
2.21	ATS3 Write command line termination character .....	33
2.22	ATS4 Set response formatting character .....	33
2.23	ATS5 Write command line editing character .....	33
2.24	ATS6 Set pause before blind dialling .....	34
2.25	ATS7 Set number of seconds to wait for connection completion .....	34
2.26	ATS8 Set number of seconds to wait for comma dial modifier .....	34
2.27	ATS10 Set disconnect delay after indicating the absence of data carrier .....	35
2.28	ATS18 Extended error report .....	35
2.29	ATT Select tone dialling .....	35
2.30	ATV Set result code format mode .....	36
2.31	ATX Set CONNECT result code format and call monitoring .....	36
2.32	ATZ Set all current parameters to user defined profile .....	37
2.33	AT&C Set circuit Data Carrier Detect (DCD) function mode .....	37

2.34	AT&D Set circuit Data Terminal Ready (DTR) function mode .....	38
2.35	AT&F Set all current parameters to manufacturer defaults .....	39
2.36	AT&S Set circuit Data Set Ready (DSR) function mode .....	41
2.37	AT&V Display current configuration .....	42
2.38	AT&W Store current configuration to user defined profile .....	43
2.39	AT+GCAP Request complete TA capabilities list .....	44
2.40	AT+GMI Request manufacturer identification .....	44
2.41	AT+GMM Request TA model identification .....	44
2.42	AT+GMR Request TA revision identification of software status .....	45
2.43	AT+GSN Request TA serial number identification(IMEI) .....	45
2.44	AT+ILRR Set TE-TA local rate reporting .....	46
2.45	AT+IPR Set fixed local rate .....	47
2.45.1	Autobauding .....	48

### **3 AT Commands for FAX.....49**

3.1	AT+FBADLIN Bad Line Threshold .....	49
3.2	AT+FBADMUL Error Threshold Multiplier .....	50
3.3	AT+FBOR Query data bit order .....	50
3.4	AT+FCIG Query or set the Local polling id .....	51
3.5	AT+FCLASS Fax: Select, read or test service class .....	51
3.6	AT+FCQ Copy Quality Checking .....	52
3.7	AT+FCR Capability to receive .....	52
3.8	AT+FDCC Query or set capabilities .....	53
3.9	AT+FDFFC Data Compression Format Conversion .....	54
3.10	AT+FDIS Query or set session parameters .....	55
3.11	AT+FDR Begin or continue phase C data reception .....	56
3.12	AT+FDT Data Transmission .....	56
3.13	AT+FET End a page or document .....	57
3.14	AT+FK Kill operation, orderly FAX abort .....	57
3.15	AT+FLID Query or set the Local Id setting capabilities .....	57
3.16	AT+FMDL Identify Product Model .....	58
3.17	AT+FMFR Request Manufacturer Identification .....	58
3.18	AT+FOPT Set bit order independently .....	58
3.19	AT+FPHCTO DTE Phase C Response Timeout .....	59
3.20	AT+FREV Identify Product Revision .....	59
3.21	AT+FRH Receive Data Using HDLC Framing .....	59
3.22	AT+FRM Receive Data .....	60
3.23	AT+FRS Receive Silence .....	60
3.24	AT+FTH Transmit Data Using HDLC Framing .....	60
3.25	AT+FTM Transmit Data .....	61
3.26	AT+FTS Stop Transmission and Wait .....	61
3.27	AT+FVRFC Vertical resolution format conversion .....	62

### **4 AT Commands originating from GSM 07.07 .....63**

4.1	AT+CACM Accumulated call meter (ACM) reset or query .....	63
4.2	AT+CALA Set alarm time .....	64
4.3	AT+CAMM Accumulated call meter maximum (ACMmax) set or query .....	67
4.4	AT+CAOC Advice of Charge information .....	68
4.5	AT+CBST Select bearer service type .....	69
4.6	AT+CCFC Call forwarding number and conditions control .....	70
4.6.1	Examples: Call forwarding .....	71
4.7	AT+CCLK Real Time Clock .....	73
4.8	AT+CCUG: Closed User Group .....	74
4.9	AT+CCWA Call waiting .....	75
4.10	AT+CEER Extended error report .....	77

4.11	AT+CFUN Set phone functionality .....	78
4.11.1	Wake up the ME from SLEEP mode .....	81
4.12	AT+CGMI Request manufacturer identification .....	82
4.13	AT+CGMM Request model identification .....	82
4.14	AT+CGMR Request revision identification of software status .....	82
4.15	AT+CGSN Request product serial number identification (IMEI) identical to GSN .....	83
4.16	AT+CHLD Call hold and multiparty .....	83
4.17	AT+CHUP Hang up call .....	84
4.18	AT+CIMI Request international mobile subscriber identity .....	84
4.19	AT+CIND Indicator control .....	85
4.20	AT+CLCC List current calls of ME .....	87
4.21	AT+CLCK Facility lock .....	88
4.21.1	Examples: Enabling / disabling PIN 1 authentication .....	90
4.21.2	Examples: Phone lock .....	91
4.21.3	Examples: Call barring .....	93
4.22	AT+CLIP Calling line identification presentation .....	94
4.23	AT+CLIR Calling line identification restriction (by *# sequence) .....	95
4.24	AT+CLVL Loudspeaker volume level .....	96
4.25	AT+CMEE Report mobile equipment error .....	97
4.26	AT+CMER Mobile equipment event reporting .....	98
4.27	AT+CMUT Mute control .....	100
4.28	AT+CMUX Enter multiplex mode .....	101
4.28.1	Restricted use of AT commands in Multiplex mode .....	102
4.29	AT+COPN Read operator names .....	104
4.30	AT+COPS Operator selection .....	105
4.31	AT+CPAS Mobile equipment activity status .....	107
4.32	AT+CPBR Read current phonebook entries .....	108
4.33	AT+CPBS Select phonebook memory storage .....	109
4.34	AT+CPBW Write phonebook entry .....	110
4.35	AT+CPIN Enter PIN .....	111
4.35.1	What to do if PIN or password authentication fails? .....	114
4.36	AT+CPIN2 Enter PIN2 .....	116
4.37	AT+CPUC Price per unit and currency table .....	118
4.38	AT+CPWD Change password .....	119
4.39	AT+CR Service reporting control .....	122
4.40	AT+CRC Set Cellular Result Codes for incoming call indication .....	123
4.41	AT+CREG Network registration .....	124
4.42	AT+CRLP Select radio link protocol param. for orig. non-transparent data call .....	126
4.43	AT+CRSM Restricted SIM access .....	127
4.44	AT+CSCS Set TE character set .....	128
4.45	AT+CSNS Single Numbering Scheme .....	129
4.46	AT+CSQ Signal quality .....	130
4.47	AT+CSSN Supplementary service notifications .....	131
4.48	AT+CUSD Unstructured supplementary service data .....	132
4.49	AT+VTD=<n> Tone duration .....	133
4.50	AT+VTS DTMF and tone generation (<Tone> in {0-9, *, #, A, B, C, D}) .....	133
4.51	AT+WS46 Select wireless network .....	134

## 5 AT commands originating from GSM 07.05 for SMS ..... 135

5.1	AT+CMGC Send an SMS command .....	135
5.2	AT+CMGD Delete SMS message .....	136
5.3	AT+CMGF Select SMS message format .....	136
5.4	AT+CMGL List SMS messages from preferred store .....	137
5.5	AT+CMGR Read SMS message .....	140
5.6	AT+CMGS Send SMS message .....	143
5.7	AT+CMGW Write SMS message to memory .....	145
5.8	AT+CMSS Send SMS message from storage .....	147



5.9	AT+CNMA New SMS message acknowledge to ME/TE, only phase 2+ .....	148
5.10	AT+CNMI New SMS message indications .....	149
5.11	AT+CPMS Preferred SMS message storage .....	152
5.12	AT+CSCA SMS service centre address .....	154
5.13	AT+CSCB Select cell broadcast messages.....	155
5.14	AT+CSDH Show SMS text mode parameters .....	156
5.15	AT+CSMP Set SMS text mode parameters.....	157
5.16	AT+CSMS Select Message Service .....	158
<b>6</b>	<b>GPRS AT commands in accordance with GSM 07.07 .....</b>	<b>159</b>
6.1	Commands specific to MTs supporting GPRS .....	159
6.1.1	AT+CGATT GPRS attach and detach .....	159
6.1.2	AT+CGACT PDP context activate or deactivate.....	160
6.1.3	AT+CGDATA Enter data state .....	161
6.1.4	AT+CGDCONT Define PDP Context.....	162
6.1.5	AT+CGQMIN Quality of Service Profile (Minimum acceptable) .....	164
6.1.6	AT+CGQREQ Quality of Service Profile (Requested).....	168
6.1.7	AT+CGSMS Select service for MO SMS messages .....	172
6.1.8	AT^SGAUTH Set type of authentication for PPP connection .....	173
6.2	Modem compatibility commands to MTs supporting GPRS .....	174
6.3	ATD *99# Request GPRS service .....	174
6.3.1	ATD *98# Request GPRS IP service .....	175
6.3.2	ATH Manual rejection of a network request for PDP context activation .....	176
6.4	Using GPRS AT commands (examples).....	177
6.4.1	Miscellaneous AT commands .....	177
6.5	Using the GPRS dial command ATD .....	179
<b>7</b>	<b>AT Commands for SIM Application Toolkit (GSM 11.14).....</b>	<b>180</b>
7.1	AT^SSTA Remote-SAT Interface Activation.....	181
7.2	^SSTN Remote-SAT Notification .....	182
7.3	AT^SSTGI Remote-SAT Get Information .....	183
7.4	AT^SSTR Remote-SAT Response .....	184
<b>8</b>	<b>Siemens defined AT commands for enhanced functions .....</b>	<b>185</b>
8.1	AT+CXXCID Display card ID (identical to AT^SCID).....	185
8.2	AT^MONI Monitor idle mode and dedicated mode .....	186
8.3	AT^MONP Monitor neighbour cells.....	188
8.4	AT^SACM Advice of charge and query of ACM and ACMmax .....	189
8.5	AT^SBC Battery charging / discharging and charge control .....	190
8.6	AT^SCID Display SIM card identification number.....	193
8.7	AT^SCKS Set SIM connection presentation mode and query SIM connection status .....	194
8.8	AT^SCNI List Call Number Information .....	195
8.9	AT^SCTM Set critical operating temperature presentation mode or query temperature.....	196
8.10	AT^SDLD Delete the "last number redial" memory.....	198
8.11	AT^SHOM Display Homezone.....	198
8.12	AT^SLCD Display Last Call Duration.....	198
8.13	AT^SLCK Facility lock.....	199
8.14	AT^SMGL List SMS messages from preferred storage.....	201
8.15	AT^SMGO Set or query SMS overflow presentation mode or query SMS overflow .....	202
8.16	AT^SMSO Switch off mobile station .....	203
8.17	AT^SMGR Read SMS message without set to REC READ .....	203
8.18	AT^SM20 Set M20 Compatibility .....	204
8.19	AT^SNFA Set or query microphone attenuation.....	205

8.20	AT^SNFD Set audio parameters to manufacturer default values .....	206
8.21	AT^SNFI Set microphone path parameters .....	207
8.22	AT^SNFM Mute microphone .....	208
8.23	Audio programming model .....	208
8.24	AT^SNFO Set audio output (= loudspeaker path) parameter .....	209
8.25	AT^SNFPT Call progress tones .....	210
8.26	AT^SNFS Select audio hardware set .....	211
8.27	AT^SNFV Set loudspeaker volume .....	212
8.28	AT^SNFW Write audio setting in non-volatile store .....	212
8.29	AT^SPBC Search the first entry in the sorted telephone book .....	213
8.30	AT^SPBG Read entry from active telephone book via sorted index .....	214
8.31	AT^SPBS Steps the selected phonebook alphabetically .....	215
8.32	AT^SPIC Display PIN counter .....	216
8.33	AT^SPLM Read the PLMN list .....	217
8.34	AT^SPLR Read entry from the preferred operators list .....	218
8.35	AT^SPLW Write an entry to the preferred operators list .....	219
8.36	AT^SPWD Change password for a lock .....	220
8.37	AT^SRTC Select, query, test ring tone parameters .....	222
8.38	AT^SSCONF SMS Configuration .....	224
8.39	AT^SSDA Set Display Availability .....	225
8.40	AT^SSYNC Configure SYNC Pin .....	226
8.41	AT^STCD Display Total Call Duration .....	228

## 9 APPENDIX .....229

9.1	Summary of ERRORS and Messages .....	229
9.1.1	Summary of CME ERRORS related to GSM 07.07 .....	229
9.1.2	Summary of GPRS-related CME ERRORS .....	230
9.1.3	Summary of CMS ERRORS related to GSM 07.05 .....	231
9.1.4	Summary of Unsolicited Result Codes (URC) .....	234
9.1.5	Result codes .....	237
9.1.6	Cause Location ID for the extended error report (AT+CEER) .....	237
9.1.7	GSM release cause for L3 Radio Resource (RR) (AT+CEER) .....	238
9.1.8	SIEMENS release cause for L3 Radio Resource (RR) (AT+CEER) .....	238
9.1.9	GSM release cause for Mobility Management (MM) (AT+CEER) .....	239
9.1.10	SIEMENS release cause for L3 Mobility Management (MM) (AT+CEER) .....	240
9.1.11	GSM release cause for L3 Call Control (CC) (AT+CEER) .....	240
9.1.12	SIEMENS release cause for L3 Call Control (CC) (AT+CEER) .....	241
9.1.13	SIEMENS release cause for L3 Advice of Charge (AOC) (AT+CEER) .....	242
9.1.14	GSM release cause for Supplementary Service call (AT+CEER) .....	242
9.1.15	Siemens release cause for Call related Supplementary Services (CRSS) (AT+CEER) ...	243
9.1.16	GSM release cause for Session Management (SM) (AT+CEER) .....	243
9.1.17	SIEMENS release cause for Session Management (SM) (AT+CEER) .....	244
9.1.18	SIEMENS release cause for GPRS API (AT+CEER) .....	244
9.1.19	SIEMENS release cause for Embedded Netcore (AT+CEER) .....	245
9.2	Summary of PIN requiring AT Commands .....	246
9.3	AT commands available before entering the SIM PIN .....	248
9.4	Standard GSM service codes .....	250
9.4.1	Additional notes on ^SCCFC, ^SCCWA, ^SCLCK .....	252
9.5	GSM and UCS2 alphabet tables .....	254

## Figures

Figure 1: AT audio programming model.....	208
---	-----

## Tables

Table 1: Product specific use of AT commands.....	13
Table 2: Types of AT commands and responses.....	15
Table 3: Illegal combinations of AT commands .....	16
Table 4: Character definitions depending on alphabet (examples).....	17
Table 5: Factory settings .....	39
Table 6: Summary of AT commands available in Alarm mode .....	66
Table 7: Wake-up events in NON-CYCLIC and CYCLIC SLEEP mode .....	81
Table 8: Availability of AT commands on virtual channels .....	102
Table 9: Summary of AT commands with different behaviour in Multiplex mode .....	103
Table 10: Timing algorithm of incorrect password input.....	114
Table 11: Summary of AT commands available in Charge-only and Alarm mode .....	192
Table 12: Operating modes of the ME indicated by status LED (if <mode> = 1):.....	227
Table 13: Summary of URCs.....	234
Table 14: Summary of Fax Class 2 URCs defined by EIA PN-2388 .....	236
Table 15: GSM service codes .....	250



## 0 Version History

This chapter reports modifications and improvements over previous versions of the document.

"AT Command Set" Version **MC35-ATC\_01\_V04.00 => MC35-ATC\_01\_V05.00**

Chapter	Page	AT command	What is new
1.5	17	Character sets	Chapter revised and associated character set tables in Chapter 9.5 updated.
1.6	18	Flow control	How to use flow control.
2.3	20	AT\Q<n>	Further details added: Using RTS/CTS handshake. Restoring AT\Q settings.
2.12	29	ATH	Notes on Multiplex mode and GPRS operation corrected
2.35	39	AT&F	Added further commands to list of factory settings
2.45	47	AT+IPR	Added note on minimum bit rate.
4.6	70	AT+CCFC	Added note on applicability of <class> according to GSM02.04.
4.9	75	AT+CCWA	AT+CHLD can be used to put an active call on hold and accept a waiting voice call. Not for data or fax calls. Added notes on applicability of different <class>es.
4.11	78	AT+CFUN	Chapter revised.
4.16	83	AT+CHLD	Removed note on GPRS. Added notes: AT+CHLD for voice calls only. Further information on Call Waiting.
4.19	85	AT+CIND	Revised Chapter.
4.21 8.13	88 199	AT+CLCK AT^SLCK	Corrected description of "FD" lock: PIN2 is requested as password (it is not sufficient to have done PIN2 authentication before). Added notes on applicability of different <class>es and <fac>s.
4.21.2	91	AT+CLCK	Modified examples.
4.24	96	AT+CLVL	Added information on related AT commands AT^SNF0, AT^SNFV, AT^SNFS
4.26	98	AT+CMER	Revised Chapter.
4.27	100	AT+CMUT	Added information on related AT commands AT^SNF0, AT^SNFM, AT^SNFS
4.28.1	102f	AT+CMUX	AT\Q3 (hardware flow control) is recommended. Notes regarding execution of ATH on different channels corrected.
4.36	116	AT+CPIN2	Added more details on validity of CPIN2 authentication.
4.44	128	AT+CSCS	Further details added: Using RTS/CTS handshake. Restoring AT\Q settings.
4.49 4.50	133 133	AT+VTD AT+VTS	Revised chapters.
5.4 5.5	137 140	AT+CMGL AT+CMGR	Removed all information on CB messages. Added note regarding AT^SSCONF.
5.7	145	AT+CMGW	Parameter <length> corrected (only required for PDU, not for text mode). Result code after failure of storing a message to the

			SIM card (ME returns OK or ERROR depending on setting of AT^SM20). Statement about sending e-mails via SMS corrected: If not recognized by provider, @ may be replaced with “*”.
5.10	149	AT+CNMI	Notes regarding AT^SSCONF and AT^SMGO added. Note regarding the handling of Class 0 short messages added.
5.11	152	AT+CPMS	<mem3> now offers the choice between “MT” and “SM” <mem1>, <mem2> and <mem3> are now stored non-volatile. Added notes on handling <mem3>.
6.1.7	172	AT+CGSMS	Modified parameter <service>=2 (GPRS preferred): No SMS via GPRS during a circuit switched call.
6.1.8	173	AT^SGAUTH	Notes added: Parameter cannot be stored with AT&W. Default value after power-up is <auth>=3 (PAP and CHAP).
6.3.2	176	ATH	Notes on deactivation of PDP context and GPRS connection removed.
8.2	186f	AT^MONI	Response example b): Parameter C1 corrected. <chann> and <rs> explained in greater detail References for 3GPP TS 05.05 and 05.08 added Notes modified: If the radio cell changes during a connection, the parameters PWR and RXLev of the ‘Serving Cell’ part will not be updated, and updating the Cell ID takes 1 or 2 seconds.
8.3	188	AT^MONP	<chann> and <rs> explained in greater detail Notes modified: During a connection new neighbour cells can be added, but their parameters C1 and C2 will be updated after the call.
8.15	202	AT^SMGO	Added note: Indication of URC requires AT+CNMI=3,1. SMS indication during data transfer via Break (100ms)
8.19 - 8.28	205 - 212	AT^SNF...	All Chapters revised.
8.25	210	AT^SNFPT	New AT command: Call progress tones
8.37	222	AT^SRTC	New AT command: Select, query, test ringing tones
8.38	224	AT^SSCONF	New AT command: Configuring recipient address parameters in SMS result codes and in +CDS URCs.
9.1.3	231	CMS errors	Note and example added: Mapping of CME and CMS errors if SIM PIN authentication has not been done.
9.1.4	234	URCs	Added: URCs will be output after command execution. Added list of Fax Class 2 URCs.
9.1.5	237	Result codes	Removed 3 result codes “CONNECT...”, and preserved those which include “CONNECT .../RLP”
		Added to List of PIN1 requiring AT commands: AT+CPIN2, AT^SSDA	
9.3	248f	Added to List of PIN1 independent AT commands: AT+VTS, AT^SNFPT, AT^SRTC, AT^SSCONF	

**"AT Command Set" Version MC35-ATC\_01\_V03.02 => MC35-ATC\_01\_V04.00**

Chapter	Page	AT command	What is new
2.2	19	+++	Chapter revised.
2.5	21	ATD	Parameters "G" and "g" for Closed User Group added.
2.17	31	ATO	Chapter revised.
4.8	74	AT+CCUG	New AT command: Closed User Group.
4.9	75	AT+CCWA	New AT command: Call Waiting.
4.19	85	AT+CIND	New AT command: Indicator control.
4.21	88	AT+CLCK	Under parameter "PS" lock, the following statement has been removed: "ME may remember numbers of previously used cards."
4.26	98	AT+CMER	New AT command: Mobile equipment event reporting.
8.2	186f	AT^MONI	Statement regarding RING line revised.
8.3	188	AT^MONP	
8.19	205	AT^SNFA	New AT command: Set or query microphone attenuation
8.39	225	AT^SSDA	New AT command: Set Display Availability
9.1.4	234	+CIEV: <text> added to list of URCs	
9.2 - 9.3	246f - 248f	AT+CCUG, AT+CCWA, AT+CMER, AT^SSDA	Added to Chapter 9.2 (PIN 1 required).
		AT+CIND AT^SNFA	Added to Chapter 9.3 (PIN1 independent)

**"AT Command Set" Version MC35-ATC\_01\_V02.00 => MC35-ATC\_01\_V03.02**

Chapter	Page	AT command	What is new
1.4.2	16	Note regarding sequential order of concatenated commands added.	
4.5	69	AT+CBST	Command syntax corrected: Parameter <speed> is mandatory.
4.6	70	AT+CCFC	New <class> parameters added.
4.11	78	AT+CFUN	SLEEP mode described in greater detail
4.21	88	AT+CLCK	New <class> parameters added.
4.35.1	114	AT+CPIN	Timing algorithm of incorrect password corrected
4.46	130	AT+CSQ	Note added: Realistic BER values can be obtained only if there is a call in progress.
5.11	152	AT+CPMS	Difference between SM, ME and MT storage explained.
6.1.8	173	AT^SGAUTH	New command to specify protocol for PPP authentication
8.2	186f	AT^MONI	Channel numbers are now issued in the form of 4-digit numbers. Therefore, the examples on page 186 have been updated.  Frequency hopping will now be indicated with "h" (instead of the previously used "0").

			Notes modified: If during a connection the radio cell is changed, the parameters <b>LAC</b> , <b>Cell</b> , <b>NCC BCC</b> , <b>PWR</b> and <b>RXL</b> of the 'Serving Cell' part will not be updated.
8.7	194	AT^SCKS	Notes regarding empty SIM card tray modified.
8.9	196	AT^SCTM	Chapter revised due to improved presentation of temperature shutdown URCs.
9.2 - 9.3	246f - 248f	AT+CXXCID AT^SCID	Both commands now independent of PIN authentication
		AT^SGAUTH	Command added to list of PIN independent commands
9.1 - 9.1.19	229 - 245f	Lists of result codes restructured.	
9.1.12	241	Notification number 300 added: "Called party barred incoming call"	
9.4	250f	*# codes	Chapter revised. Further examples added.
9.4.1	252f		

# 1 Introduction

## 1.1 Scope of the document

This document presents the AT Command Set for the Siemens cellular engines

### **MC35 Module**

### **MC35 Terminal**

The AT commands detailed in this document are supported by both products. Where differences occur, they are noted in the chapter that refers to the command. In the present version, the only exceptions concern these commands:

Table 1: Product specific use of AT commands

<b>AT command</b>	<b>MC35 Module</b>	<b>MC35 Terminal</b>
AT+CALA, Chapter 4.2	Alarm mode and reminder call fully applicable	Does not support Alarm mode. Please ignore any information relating to the subject. The reminder call can be used as described.
AT^SSYNC, Chapter 8.40	SYNC pin may be assigned different functions: <mode> 0 or 1.	SYNC pin supports only <mode>=1 (LED status).
AT^SBC, Chapter 8.5	All functions fully applicable	Command not applicable.

MC35 and MC35 Terminal feature basic SIM Application Toolkit (SAT) functionality which enables SIM cards to run additional network based applications, such as value added services, online banking, information services etc. To give you an idea, Chapter 7 provides a brief overview. In greater detail, the SAT functions and the required AT commands are described in [4].

## 1.2 Supported product versions and related documents

Please note that this AT Command Set is intended for MC35 Version 05.00

### *Related documents*

- [1] MC35 Hardware Interface Description, Version 05.00
- [2] Release Notes: MC35, Version 05.00
- [3] MC35 GPRS Startup User's Guide
- [4] MC35 Remote-SAT User's Guide, as of Version 04.00
- [5] MC35 Multiplexer User's Guide, Version 05.00
- [6] Application Note 16: Updating MC35 Firmware, as of Version 02.00
- [7] MC35 Terminal Hardware Interface Description
- [8] TC35 MC35 Terminal User's Guide
- [9] Application Note 02: Audio Interface Design
- [10] Multiplex Driver Developer's Guide for Windows 2000 and Windows XP
- [11] Multiplex Driver Installation Guide for Windows 2000 and Windows XP

*Prior to using MC35 / MC35T or upgrading to a new firmware release, be sure to carefully read the latest product information provided in the Release Notes.*

To visit the Siemens Website you can use the following link:

<http://www.siemens.com/wm>



### 1.3 Conventions

Throughout the document, the GSM engines are referred to as ME (Mobile Equipment), MS (Mobile Station), TA (Terminal Adapter), DCE (Data Communication Equipment) or facsimile DCE (FAX modem, FAX board). When the Siemens product names are required to distinguish the two models, MC35 is short for the engine type and MC35T for the terminal.

To control your GSM engine you can simply send AT Commands via its serial interface. The controlling device at the other end of the serial line is referred to as TE (Terminal Equipment), DTE (Data Terminal Equipment) or plainly 'the application' (probably running on an embedded system).

### 1.4 AT command syntax

The "AT" or "at" prefix must be set at the beginning of each command line. To terminate a command line enter <CR>.

Commands are usually followed by a response that includes "<CR><LF><response><CR><LF>". Throughout this document, only the responses are presented, <CR><LF> are omitted intentionally.

Table 2: Types of AT commands and responses

Test command	AT+CXXX=?	The mobile equipment returns the list of parameters and value ranges set with the corresponding Write command or by internal processes.
Read command	AT+CXXX?	This command returns the currently set value of the parameter or parameters
Write command	AT+CXXX=<...>	This command sets user-definable parameter values.
Execution command	AT+CXXX	The execution command reads non-variable parameters affected by internal processes in the GSM engine.

#### 1.4.1 Using parameters

- Default parameters are underlined throughout this document.
- Optional parameters are enclosed in square brackets. If optional parameters are omitted, the current settings are used until you change them.
- Optional parameters or subparameters can be omitted unless they are followed by other parameters. If you want to omit a parameter in the middle of a string it must be replaced by a comma. Example:  
 AT+CPBW=,<number>,<type>,<text> writes a phonebook entry to the first free memory location.  
 AT+CPBW=<index>,<number>,<type>,<text> writes a phonebook entry to the memory location specified by <index>.
- When the parameter is a character string, e.g. <text> or <number>, the string must be enclosed in quotation marks, e.g. "Charlie Brown" or "+49030xxx". Symbols within quotation marks will be recognized as strings.
- All spaces will be ignored when using strings without quotation marks.
- It is possible to omit the leading zeros of strings which represent numbers.
- In case of using V.25ter commands without giving an optional parameter, its value is assumed to be 0.

### 1.4.2 Combining AT commands on the same command line

You may enter several AT commands on the *same* line. This eliminates the need to type the "AT" or "at" prefix before each command. Instead, it is only needed once at the beginning of the command line. Use a semicolon as command delimiter.

The command line buffer accepts a maximum of 391 characters. If this number is exceeded none of the commands will be executed and TA returns ERROR.

The table below lists the AT commands you cannot enter together with other commands on the same line. Otherwise, the responses may not be in the expected order.

Table 3: Illegal combinations of AT commands

V.25ter commands	With	FAX commands, <b>Prefix AT+F</b>
GSM 7.07 commands	With	Siemens commands, <b>Prefix AT^S</b>
GSM 7.05 commands (SMS)	---	To be used standalone
Commands starting with AT&	---	To be used standalone
AT+IPR	---	To be used standalone

**Note:** When concatenating AT commands please keep in mind that the sequence of processing may be different from the sequential order of command input. Therefore, if the consecutive order of the issued commands is your concern, avoid concatenating commands on the same line.

### 1.4.3 Entering successive AT commands on separate lines

When you enter a series of AT commands on *separate* lines, leave a pause between the preceding and the following command until OK appears. This avoids sending too many AT commands at a time without waiting for a response for each.

## 1.5 Supported character sets

The ME supports two character sets: GSM 03.38 (7 bit, also referred to as SMS alphabet) and UCS2 (16 bit, refer to ISO/IEC 10646). See Chapter 4.44 for information about selecting the character set. Character tables are provided in Chapter 9.5.

Due to the constraints described below it is recommended to prefer the USC2 alphabet in any external application.

If the GSM alphabet is selected all characters sent over the serial line are in the range from 0 ... 127.

**CAUTION:** GSM alphabet is not ASCII alphabet!

Several problems resulting from the use of the GSM alphabet:

1. "@" character with GSM alphabet value 0 is not printable by an ASCII terminal program (e.g. Microsoft® Hyperterminal®).
2. "@" character with GSM alphabet value of binary 0 will terminate any C string!  
This is because the \0 is defined as C string end tag. Therefore, the GSM Null character may cause problems on application level when using a 'C'-function as „strlen()“. This can be avoided if it is represented by an escape sequence as shown in Table 4.  
By the way, this may be the reason why even network providers often replace "@" with "@=" in their SIM application.
3. Other characters of the GSM alphabet are misinterpreted by an ASCII terminal program. For example, GSM "ö" (as in "Börse") is assumed to be "I" in ASCII, thus resulting in "B|rse". This is because both alphabets mean different characters with values hex. 7C or 00 and so on.
4. In addition, decimal 17 and 19 which are used as XON/XOFF control characters when software flow control is activated, are interpreted as normal characters in the GSM alphabet.

When you write characters differently coded in ASCII and GSM (e.g. Ä, Ö, Ü), you need to enter escape sequences. Such a character is translated into the corresponding GSM character value and, when output later, the GSM character value can be presented. Any ASCII terminal then will show wrong responses.

Table 4: Character definitions depending on alphabet (examples)

GSM 03.38 character	GSM character hex. value	Corresponding ASCII character	ASCII Esc sequence	Hex Esc sequence
Ö	5C	\	\5C	5C 35 43
"	22	"	\22	5C 32 32
ò	08	BSP	\08	5C 30 38
@	00	NULL	\00	5C 30 30

**CAUTION:** Often, the editors of terminal programs do not recognize escape sequences. In this case, an escape sequence will be handled as normal characters. The most common workaround to this problem is to write a script which includes a decimal code instead of an escape sequence. This way you can write, for example, short messages which may contain differently coded characters.

## 1.6 Flow control

Flow control is essential to prevent loss of data or avoid errors when, in a data or fax call, the sending device is transferring data faster than the receiving side is ready to accept. When the receiving buffer reaches its capacity, the receiving device should be capable to cause the sending device to pause until it catches up.

There are basically two approaches to regulate data flow: software flow control and hardware flow control. The High Watermark of the input / output buffer should be set to approximately 60% of the total buffer size. The Low Watermark is recommended to be about 30%. The data flow should be stopped when the capacity rises close to the High Watermark and resumed when it drops below the Low Watermark. The time required to cause stop and go results in a hysteresis between the High and Low Watermarks.

In Multiplex mode, it is recommended to use hardware flow control. For details please refer to [5].

### 1.6.1 Software flow control (XON/OFF flow control)

Software flow control sends different characters to stop (XOFF, decimal 19) and resume (XON, decimal 17) data flow. The only advantage of software flow control is that three wires would be sufficient on the serial interface.

### 1.6.2 Hardware flow control (RTS/CTS flow control)

Hardware flow control sets or resets the RTS/CTS wires. This approach is faster and more reliable, and therefore, the better choice. When the High Watermark is reached, CTS is set inactive until the transfer from the buffer has completed. When the Low Watermark is passed, CTS goes active once again.

To achieve smooth data flow, ensure that the RTS/CTS lines are present on your application platform. The application should include options to enable RTS/CTS handshake with the GSM engine. This needs to be done with the AT command AT\Q3 - it is not sufficient to set RTS/CTS handshake in the used Terminal program only.

The default setting of the GSM engine is AT\Q0 (no flow control) which must be altered to AT\Q3 (RTS/CTS hardware handshake on). The setting is stored volatile and must be restored each time after the GSM engine was switched off. For further details refer to Chapter 2.3.

AT\Q has no read command. To verify the current setting of AT\Q, simply check the settings of the active profile with AT&V.

Often, fax programs run an initialization procedure when started up. The initialization commonly includes enabling RTS/CTS hardware handshake, eliminating the need to set AT\Q3 once again. However, before setting up a CSD call, you are advised to check that RTS/CTS handshake is set.

RTS/CTS hardware handshake must also be set if you want to take advantage of the CYCLIC SLEEP modes. For further details refer to Chapter 4.11, AT+CFUN.

**Note:** After deactivating the RTS line, the ME may still send up to 32 bytes. This can be easily handled if the buffer of the host application is sufficiently sized, and if a hysteresis is implemented in its Rx buffer as mentioned in Chapter 1.6. A total buffer capacity of 256 bytes has been proved to work well.

## 2 Standard V.25ter AT Commands

These AT Commands are related to ITU-T (International Telecommunication Union, Telecommunication sector) V.25ter document.

MC35 supports the registers S0-S29. You can change S0,S3,S4,S5,S6,S7,S8,S10,S18 by using the appropriate ATSn commands. All the other registers are read-only and for internal usage only!

### 2.1 A/ Repeat previous command line

Execute command	Response
A/	Repeats previous command line. Line does not need to end with terminating character.  Parameter
Reference	Note
V.25ter	<ul style="list-style-type: none"> <li>After beginning with the character "a" or „A“, a second character "t" ,"T" or "/" has to follow. In case of using a wrong second character, it is necessary to start again with character "a" or "A".</li> <li>If autobauding is active (see <b>+IPR</b>, pg. 46) A/ (and a/) cannot be used.</li> </ul>

### 2.2 +++ Switch from data mode or PPP online mode to command mode

Execute command	Response
+++	<p>This command is only available during a CSD call or a GPRS connection. The +++ character sequence causes the TA to cancel the data flow over the AT interface and switch to command mode. This allows you to enter AT commands while maintaining the data connection to the remote device or, accordingly, the GPRS connection.</p> <p><b>OK</b></p> <p>To prevent the +++ escape sequence from being misinterpreted as data, it must be preceded and followed by a pause of at least 1000 ms. The +++ characters must be entered in quick succession, all within 1000 ms.</p>
Reference	Note:
V.25ter	<ul style="list-style-type: none"> <li>To return from command mode to data or PPP online mode: Enter ATO as described in Chapter 2.17.</li> </ul>

## 2.3 AT\Qn Flow control

Execute command AT\Q<n>	<p>Response</p> <p><b>OK</b></p> <p>Parameter</p> <table><tr><td>&lt;n&gt;</td><td><u>0</u></td><td>AT\Q0</td><td>No flow control</td></tr><tr><td></td><td>1</td><td>AT\Q1</td><td>XON/XOFF software flow control</td></tr><tr><td></td><td>2</td><td>AT\Q2</td><td>Only CTS by DCE</td></tr><tr><td></td><td>3</td><td>AT\Q3</td><td>RTS/CTS hardware flow control Required for the following procedures: incoming or outgoing data calls, fax calls, GPRS connections, CYCLIC SLEEP modes set with AT+CFUN. Often, the initialization routine of Fax programs includes enabling RTS/CTS handshake, eliminating the need to issue AT\Q3 once again.</td></tr></table>	<n>	<u>0</u>	AT\Q0	No flow control		1	AT\Q1	XON/XOFF software flow control		2	AT\Q2	Only CTS by DCE		3	AT\Q3	RTS/CTS hardware flow control Required for the following procedures: incoming or outgoing data calls, fax calls, GPRS connections, CYCLIC SLEEP modes set with AT+CFUN. Often, the initialization routine of Fax programs includes enabling RTS/CTS handshake, eliminating the need to issue AT\Q3 once again.
<n>	<u>0</u>	AT\Q0	No flow control														
	1	AT\Q1	XON/XOFF software flow control														
	2	AT\Q2	Only CTS by DCE														
	3	AT\Q3	RTS/CTS hardware flow control Required for the following procedures: incoming or outgoing data calls, fax calls, GPRS connections, CYCLIC SLEEP modes set with AT+CFUN. Often, the initialization routine of Fax programs includes enabling RTS/CTS handshake, eliminating the need to issue AT\Q3 once again.														
Reference	<p>Note</p> <p>Line state refers to RS-232 levels.</p> <p>The setting of AT\Q is stored volatile and must be restored each time after the GSM engine was switched off. Also, there is no way to store AT\Q to the user defined profile.</p> <p>See also Chapter 1.6 for general information on flow control.</p>																

## 2.4 ATA Answer a call

Execute command ATA	<p>TA causes remote station to go off-hook (e.g. answer call).</p> <p>Note1: Any additional commands on the same command line are ignored.</p> <p>Note2: This command may be aborted generally by receiving a character during execution. It can't be aborted in some connection setup states, such as handshaking.</p> <p>Response</p> <p>Response in case of data call, if successfully connected: <b>CONNECT&lt;text&gt;</b> TA switches to data mode. Note: &lt;text&gt; output only if +ATX parameter setting with value &gt; 0.</p> <p>Response in case of voice call, if successfully connected: <b>OK</b></p> <p>When TA returns to command mode after call release: <b>OK</b></p> <p>Response if no connection: <b>NO CARRIER</b></p> <p>Parameter</p>
Reference V.25ter	<p>Note</p> <p>See also AT+ATX and Chapter 9.1.5 for &lt;text&gt;</p>



## 2.5 ATD Mobile originated call to dial a number

Execute command ATD[<n>] [<mgsm>];	<p>This command can be used to set up outgoing <i>voice, data or fax calls</i>. It also serves to control <i>supplementary services</i>.</p> <p>Note:</p> <p>The command may be aborted generally when receiving an ATH command during execution. It can't be aborted in some connection setup states, such as handshaking.</p> <p>Two different call setup options can be determined for voice calls: TA returns OK either after dialing was completed or after call has been established. Setting is made with AT^SM20 (see Chapter 8.18). In data connections, call setup always terminates when call has been established.</p> <p>Response</p> <p>If no dialtone (parameter setting ATX2 or ATX4): <b>NO DIALTONE</b></p> <p>If busy (parameter setting ATX3 or ATX4): <b>BUSY</b></p> <p>If a connection cannot be set up: <b>NO CARRIER</b></p> <p>If successfully connected and non-voice call: <b>CONNECT&lt;text&gt;</b> TA switches to data state. Note: &lt;text&gt; output only if +ATX parameter setting with value &gt; 0.</p> <p>When TA returns to command mode after call release: <b>OK</b></p> <p>If successfully connected and voice call: <b>OK</b></p> <p>Parameter</p> <p>&lt;n&gt; String of dialling digits and optionally V.25ter modifiers (dialling digits): 0-9, *, #, +, A, B, C V.25ter modifiers: these are ignored: ,(comma), T, P, !, W, @</p> <p>Emergency call: &lt;n&gt; = 112 worldwide number (no SIM needed)</p> <p>&lt;mgsm&gt; String of GSM modifiers: I Activates CLIR (disables presentation of own phone number to called party) i Deactivates CLIR (enables presentation of own phone number to called party) G Activate Closed User Group explicit invocation for this call only. g Deactivate Closed User Group explicit invocation for this call only.</p> <p>&lt;;&gt; Only required to set up voice calls. TA remains in command mode.</p>
--	--

Reference	Note
V.25ter/GSM 07.07	<ul style="list-style-type: none"><li>• Before setting up a data call, check that RTS/CTS handshake is enabled. See Chapters 1.6 and 2.3.</li><li>• Parameter "I" and "i" only if no *# code is within the dial string.</li><li>• &lt;mgsn&gt; is not supported for data calls.</li><li>• &lt;n&gt; is default for last number that can be dialled by ATDL.</li><li>• See also +ATX and chapter 9.1.5 for &lt;text&gt;.</li><li>• The *# codes can only be used with voice calls (i.e. if "v" is appended).</li><li>• If ATD is used with a USSD command (e.g. ATD*100#;) an AT+CUSD=1 is executed implicitly (see AT+CUSD, pg. 132).</li><li>• Parameter 'G' or 'g' will be ignored if Closed User Group was already activated, or accordingly, deactivated with AT+CCUG command.</li></ul>

## 2.6 ATD<mem><n> Originate call to phone number <n> in memory <mem>

This command allows you to dial a phone number from a specific phonebook. To initiate a call, enter a two letter abbreviation for the phonebook <mem>, followed by the memory location <n> of the desired entry. The location range of each phonebook can be queried by AT+CPBR (see Chapter 4.32).

<p>Execute command</p> <p>ATD&lt;mem&gt; &lt;n&gt;[&lt;mgsms&gt;];]</p>	<p>TA attempts to set up an outgoing call to the specified number.</p> <p>Note: This command may be aborted generally by receiving a character during execution. Abortion is not possible during some states of connection setup such as handshaking.</p> <p>Response</p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p> <p>If no dialtone (parameter setting ATX2 or ATX4): <b>NO DIALTONE</b></p> <p>If busy (parameter setting ATX3 or ATX4): <b>BUSY</b></p> <p>If connection cannot be set up: <b>NO CARRIER</b></p> <p>If successfully connected and non-voice call: <b>CONNECT&lt;text&gt;</b> TA switches to data state. Note: &lt;text&gt; output only if +ATX parameter setting with value &gt; 0.</p> <p>When TA returns to command mode after call release: <b>OK</b></p> <p>If successfully connected and voice call: <b>OK</b></p>
	<p>Parameter</p> <p>&lt;mem&gt; phonebook:</p> <ul style="list-style-type: none"> <li>"SM" SIM phonebook (storage depending on SIM card)</li> <li>"FD" SIM fixdialling phonebook (pos. 1-7)</li> <li>"LD" SIM last-dialling-phonebook (usually the last 10 numbers dialed are stored on the SIM card, no matter whether or not the calls were successfully set up)</li> <li>"MC" ME missed (unanswered received) calls list (up to 10 numbers)</li> <li>"RC" SIM received calls list</li> <li>"ME" ME Phonebook (up to 50 numbers)</li> <li>"ON" SIM (or ME) own numbers (MSISDNs) list</li> </ul> <p>Note: &lt;mem&gt; must be included in quotation marks (""), if parameter &lt;mgsms&gt; is used. If not, quotation marks are optional.</p> <p>&lt;n&gt; Integer type memory location in the range of locations available in the selected memory, i.e. the index number returned by AT+CPBR.</p>

	<p><b>&lt;mgsms&gt;</b>    I      Activates CLIR (disables presentation of own phone number to called party)</p> <p>                  i      Deactivates CLIR (enables presentation of own phone number to called party)</p> <p><b>&lt;;&gt;</b>            Only required to set up voice calls. TA remains in command mode.</p>
Reference V.25ter/GSM 07.07	<p>Note</p> <ul style="list-style-type: none"> <li>• There is no <b>&lt;mem&gt;</b> for emergency call ("EN").</li> <li>• Command is not supported for data call!</li> <li>• Parameter <b>&lt;mgsms&gt;</b> only if no <b>*#</b> code is within the dial string.</li> <li>• The <b>*#</b>-codes can only be used with voice calls (i.e. if <b>;</b> is appended).</li> <li>• See also ATX and chapter 9.1.5 for <b>&lt;text&gt;</b>.</li> </ul>
Example	<p>To query the location number of the phonebook entry: AT+CPBR=1,xx TA returns the entries available in the active phonebook.</p> <p>To dial a number from the SIM phonebook, for example the number stored to location 15: ATD&gt;SM15; OK</p> <p>To dial a phone number stored in the last dial memory on the SIM card: ATD&gt;LD9; OK</p>

## 2.7 ATD<n> Originate call to phone number selected from active memory

This command can be used to dial a phone number selected from the active memory. The active memory is the phonebook selected with AT+CPBS (see Chapter 4.33). To set up a call simply enter the memory location of the desired entry. The memory location range of each phonebook can be queried by AT+CPBR (see Chapter 4.32).

<p>Execute command</p> <p>ATD&lt;n&gt;[&lt;mgs&gt;][:]</p>	<p>TA attempts to set up an outgoing call to the stored number.</p> <p>Note: This command may be aborted generally by receiving a character during execution. It can't be aborted in some connection setup states, such as handshaking.</p> <p>Response</p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p> <p>If no dialtone (parameter setting ATX2 or ATX4): <b>NO DIALTONE</b></p> <p>If busy (parameter setting ATX3 or ATX4): <b>BUSY</b></p> <p>If a connection cannot be set up: <b>NO CARRIER</b></p> <p>If successfully connected and non-voice call: <b>CONNECT&lt;text&gt;</b> TA switches to data state. Note: &lt;text&gt; output only if +ATX parameter setting with value &gt; 0.</p> <p>When TA returns to command mode after call release: <b>OK</b></p> <p>If successfully connected and voice call: <b>OK</b></p> <p>Parameter</p> <p>&lt;n&gt; integer type memory location should be in the range of locations available in the memory used, i.e. the index number returned by AT+CPBR.</p> <p>&lt;mgs&gt; I Activates CLIR (disables presentation of own phone number to called party) i Deactivates CLIR (enables presentation of own phone number to called party)</p> <p>&lt;;&gt; Only required to set up voice calls. TA remains in command mode.</p>
<p>Reference</p> <p>V.25ter/GSM 07.07</p>	<p>Note</p> <ul style="list-style-type: none"> <li>• Parameter &lt;mgs&gt; only if no *# code is within the dial string.</li> <li>• Command is not supported for data call!</li> <li>• The *# codes can only be used with voice calls (i.e. if “,” is appended).</li> <li>• See also +ATX and chapter 9.1.5 for &lt;text&gt;.</li> </ul>

## 2.8 ATD<str> Originate call to phone number in memory with corresponding field

This command searches the active phonebook for a given string <str> and dials the assigned phone number. The active phonebook is the one set with AT+CPBS.

<p>Execute command</p> <p>ATD&lt;str&gt;[mgsm][;]</p>	<p>TA attempts to set up an outgoing call to stored number</p> <p>Note: This command may be aborted generally by receiving a character during execution. It can't be aborted in some connection setup states, such as handshaking.</p> <p>Response</p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p> <p>If no dialtone (parameter setting ATX2 or ATX4): <b>NO DIALTONE</b></p> <p>If busy (parameter setting ATX3 or ATX4): <b>BUSY</b></p> <p>If a connection cannot be set up: <b>NO CARRIER</b></p> <p>If successfully connected and non-voice call: <b>CONNECT&lt;text&gt;</b> TA switches to data state. Note: &lt;text&gt; output only if +ATX parameter setting with value &gt; 0.</p> <p>When TA returns to command mode after call release: <b>OK</b></p> <p>If successfully connected and voice call: <b>OK</b></p> <p>Parameter</p> <p>&lt;str&gt; string type value ("x"), which should equal an alphanumeric field in at least one phonebook entry in the searched memories; used character set should be the one selected with AT+CSCS. &lt;str&gt; can contain escape sequences as described in Chapter 1.5. &lt;str&gt; must be wrapped in quotation marks (""), if escape sequences or parameter &lt;mgsm&gt; are used or if the alphanumeric strings contains a blank. If not, quotation marks are optional.</p> <p>&lt;mgsm&gt; I Activates CLIR (disables presentation of own phone number to called party) i Deactivates CLIR (enables presentation of own phone number to called party)</p> <p>&lt;;&gt; Only required to set up voice calls. TA remains in command mode.</p>
<p>Reference</p> <p>V.25ter/GSM 07.07</p>	<p>Note</p> <p>Command is not supported for data calls! See also ATX and Chapter 9.1.5 for &lt;text&gt;</p>



## 2.9 ATDI Mobile originated call to dialable ISDN number <n>

<p>Execute command ATDI&lt;n&gt;[:]</p>	<p>TA attempts to set up an outgoing call to ISDN number.</p> <p>Note: This command may be aborted generally by receiving a character during execution. This command cannot be aborted in some connection setup states, such as handshaking.</p> <p>Response</p> <p>If no dialtone (parameter setting ATX2 or ATX4): <b>NO DIALTONE</b></p> <p>If busy (parameter setting ATX3 or ATX4): <b>BUSY</b></p> <p>If a connection cannot be set up: <b>NO CARRIER</b></p> <p>If successful connected and non-voice call: <b>CONNECT&lt;text&gt;</b> TA switches to data state. Note: &lt;text&gt; output only if +ATX parameter setting with value &gt; 0.</p> <p>When TA returns to command mode after call release: <b>OK</b></p> <p>If successfully connected and voice call: <b>OK</b></p>
	<p>Parameter</p> <p>&lt;n&gt;     [+]&lt;d&gt;   phone number           string with maximum length of 20 characters</p> <p>      +     international dialling format</p> <p>&lt;d&gt;     ISDN number           string of digits: +,0-9, A, B, C</p> <p>&lt;;&gt;     voice call</p>
<p>Reference V.25ter</p>	

## 2.10 ATDL Redial last telephone number used

<p>Execute command ATDL[;]</p>	<p>This command redials the last voice and data call number used in the ATD command.</p> <ul style="list-style-type: none"> <li>To redial the last data call number simply enter ATDL</li> <li>To redial the last voice call number type ATDL;</li> </ul> <p>Note: The command may be aborted generally by receiving a character during execution. This command cannot be aborted in some connection setup states, such as handshaking.</p> <p>Response</p> <p>If there is no last number or number is not valid: <b>+CME ERROR</b></p> <p>If no dialtone (parameter setting ATX2 or ATX4): <b>NO DIALTONE</b></p> <p>If busy (parameter setting ATX3 or ATX4): <b>BUSY</b></p> <p>If a connection cannot be set up: <b>NO CARRIER</b></p> <p>If successfully connected and non-voice call: <b>CONNECT&lt;text&gt;</b> TA switches to data state. Note: &lt;text&gt; output only if +ATX parameter setting with value &gt; 0.</p> <p>When TA returns to command mode after call release: <b>OK</b></p> <p>If successfully connected and voice call: <b>OK</b></p> <p>Parameter &lt;;&gt;      voice call</p>
<p>Reference V.25ter</p>	<p>Note In case of voice calls “;” is necessary.</p>

## 2.11 ATE Enable command echo

Write command ATE[<value>]	<p>This setting determines whether or not the TA echoes characters received from TE during command state.</p> <p>Response <b>OK</b></p> <p>Parameter &lt;value&gt; 0 Echo mode off           1 Echo mode on</p>
Reference V.25ter	<p>Note</p> <p>In case of using the command without parameter, &lt;value&gt; is set to 0.</p>

## 2.12 ATH Disconnect existing connection

Execute command ATH[n]	<p>Disconnects any call in progress, such as voice, fax or CSD calls. See notes below for GPRS and multiplex mode.</p> <p>Response <b>OK</b></p> <p>Note: OK is issued after circuit 109 (DCD) is turned off (RS-232 level), if it was previously on.</p> <p>Parameter &lt;n&gt; 0 terminate call</p>
Reference V.25ter	<p>Note</p> <p>Using ATH in Multiplex mode (AT+CMUX):</p> <ul style="list-style-type: none"> <li>ATH terminates every voice, fax or CSD call, no matter on which channel ATH was executed. For example, if ATH is executed on channel 2 or 3, a voice call made on channel 1 will be disconnected, too. This behaviour is in accordance with ITU-T V.25 ter; (07/97, see "6.3.6 Hook control": "ATH is terminating any call in progress").</li> </ul> <p>Using ATH while GPRS is active during Multiplex mode:</p> <ul style="list-style-type: none"> <li>ATH clears an active PDP context or terminates an existing PPP connection, but only if issued on the <u>same</u> logical channel where GPRS is used. It does not affect PDP contexts and PPP connections on other channels.</li> <li>See also Chapter 6.3.2, ATH Manual rejection of a network request for PDP context activation.</li> </ul>

**2.13 ATl Display product identification information**

Execute command ATl	Response  ME issues product information text <b>SIEMENS</b> <b>MC35</b> <b>REVISION xx.yy</b> <b>OK</b>  Explanation of "Revision" parameter: Version xx and variant yy of software release.
Reference V.25ter	Note

**2.14 ATl[value] Display additional identification information**

Execute command ATl[value]	Response  <value>=9 delivers the following information. Other values are not supported and only return OK.  ATl9        SIEMENS Gipsy Soft Protocolstack V2.550 MC35
Reference V.25ter	Note

## 2.15 ATL Set monitor speaker loudness

Execute command ATL[val]	Response <b>OK</b>
Reference V.25ter	Note <ul style="list-style-type: none"> <li>• The two commands ATL and ATM are implemented only for V.25ter compatibility reasons and have no effect.</li> <li>• In multiplex mode the command is supported on logical channel 1 only.</li> </ul>

## 2.16 ATM Set monitor speaker mode

Execute command ATM[val]	Response <b>OK</b>
Reference V.25ter	Note <ul style="list-style-type: none"> <li>• The two commands ATL and ATM are implemented only for V.25ter compatibility reasons and have no effect.</li> <li>• In multiplex mode the command is supported on logical channel 1 only.</li> </ul>

## 2.17 ATO Switch from command mode to data mode / PPP online mode

Execute command ATO[n]	<p>Response</p> <p>ATO is the corresponding command to the +++ escape sequence described in Chapter 2.2: When you have established a CSD call or a GPRS connection and TA is in command mode, ATO causes the TA to resume the data or GPRS connection and takes you back to data mode or PPP online mode.</p> <p>If connection is not successfully resumed <b>NO CARRIER</b></p> <p>or</p> <p>TA returns to data or PPP online mode from command mode <b>CONNECT &lt;text&gt;</b></p> <p>Note: &lt;text&gt; output only if +ATX parameter setting with value &gt; 0.</p> <p>Parameter</p> <p>&lt;n&gt;      0    switch from command mode to data or PPP online mode</p>
Reference V.25ter	Note

## 2.18 ATQ Set result code presentation mode

Write command ATQ[<n>]	<p>Response</p> <p>Specifies whether or not the TA transmits any result code to the TE. Information text transmitted in response is not affected by this setting.</p> <p>If &lt;n&gt;=0: <b>OK</b></p> <p>If &lt;n&gt;=1: <b>(none)</b></p> <p>Parameter</p> <p>&lt;n&gt;     <u>0</u>   DCE transmits result code          1   Result codes are suppressed and not transmitted</p>
Reference V.25ter	Note

## 2.19 ATP Select pulse dialling

Execute command ATP	<p>Response</p> <p><b>OK</b></p>
Reference V.25ter	<p>Note</p> <p>No effect for GSM</p>

## 2.20 ATS0 Set number of rings before automatically answering the call

Read command ATS0?	<p>Response</p> <p>&lt;n&gt; <b>OK</b></p>
Write command ATS0=<n>	<p>Specifies whether or not the TA will accept an incoming data / fax call without user intervention. &lt;n&gt; determines the number of rings to wait before the TA will automatically answer.</p> <p>Response</p> <p><b>OK</b></p> <p>Parameter</p> <p>&lt;n&gt;     <u>000</u>     disables automatic answer mode          001-255 enables automatic answering after specified number of rings</p>
Reference V.25ter	<p>Note</p> <ul style="list-style-type: none"> <li>• Auto-answer mode is only applicable to data or fax calls.</li> <li>• If &lt;n&gt; is set too high, the <u>calling</u> party may hang up before the call can be automatically answered.</li> <li>• The correlation between ATS7 and ATS0 is important. Example: Call setup may fail if ATS0=20 and ATS7=30.</li> </ul>



## 2.21 ATS3 Write command line termination character

Read command ATS3?	Response <n> <b>OK</b>
Write command ATS3=<n>	This parameter setting determines the character recognized by TA to terminate an incoming command line. Response <b>OK</b>
	Parameter <n>      000- <u>013</u> -127      command line termination character
Reference V.25ter	Note

## 2.22 ATS4 Set response formatting character

Read command ATS4?	Response <n> <b>OK</b>
Write command ATS4=<n>	This parameter setting determines the character generated by the TA for result code and information text. Response <b>OK</b>
	Parameter <n>      000- <u>010</u> -127      response formatting character.
Reference V.25ter	Note

## 2.23 ATS5 Write command line editing character

Read command ATS5?	Response <n> <b>OK</b>
Write command ATS5=<n>	This parameter setting determines the character recognized by TA as a request to delete the immediately preceding character from the command line. Response <b>OK</b>
	Parameter <n>      000- <u>008</u> -127      command line editing character
Reference V.25ter	Note

## 2.24 ATS6 Set pause before blind dialling

Read command ATS6?	Response <n> OK
Write command ATS6=<n>	No effect for GSM Response OK
	Parameter <n>      000-255 number of seconds to wait before blind dialling.
Reference V.25ter	Note

## 2.25 ATS7 Set number of seconds to wait for connection completion

Read command ATS7?	Response <n> OK
Write command ATS7=<n>	Specifies the number of seconds the TA will wait for the completion of the call setup when answering or originating a data call. Also referred to as "no answer timeout". To put it plainly, this is the time to wait for the carrier signal. If no carrier signal is received within the specified time, the TA hangs up.  Response OK
	Parameter <n>0 <n>      000 – 060 no. of seconds to wait for connection completion.
Reference V.25ter	Note <ul style="list-style-type: none"> <li>• Values greater than 60 cause no error, but &lt;n&gt; will be restored to the maximum value of 60.</li> <li>• If <u>called party</u> has specified a high value for ATS0=&lt;n&gt;, call setup may fail.</li> <li>• The correlation between ATS7 and ATS0 is important. Example: Call setup may fail if ATS7=30 and ATS0=20.</li> <li>• ATS7 is only applicable to data calls.</li> </ul>

## 2.26 ATS8 Set number of seconds to wait for comma dial modifier

Read command ATS8?	Response <n> OK
Write command ATS8=<n>	No effect for GSM Response OK
Reference V.25ter	Note

## 2.27 ATS10 Set disconnect delay after indicating the absence of data carrier

Read command ATS10?	Response <n> OK
Write command ATS10=<n>	This parameter setting determines the amount of time, that the TA remains connected in absence of a data carrier. If the data carrier is detected before disconnect, the TA remains connected.  Response OK
	Parameter <n>      001- <u>002</u> -254      number of tenths of seconds of delay
Reference V.25ter	Note

## 2.28 ATS18 Extended error report

Test command ATS18?	Response <n> OK
Execute command ATS18=<n>	TA returns an extended report of the reason for the last call release and location.  <n> <u>0</u> – 255, odd numbers set extended error report and even numbers disable this feature.  Response +Cause: <location ID>: <reason> OK  Parameter <location ID>      Location ID as number code (see subclause 9.1.6). <reason>      Reason for last call release as number code (see subclause 9.1.6).
Reference Siemens	Note This command works for data calls only. For voice calls please use AT+CEER.

## 2.29 ATT Select tone dialling

Execute command ATT	Response OK
Reference V.25ter	Note No effect for GSM

### 2.30 ATV Set result code format mode

Write command ATV[<value>]	<p>Response</p> <p>This parameter setting determines the contents of the header and trailer transmitted with result codes and information responses.</p> <p>When &lt;value&gt; =0 <b>0</b></p> <p>When &lt;value&gt; =1 <b>OK</b></p> <p>Parameter &lt;value&gt;</p> <p>0 Information response: &lt;text&gt;&lt;CR&gt;&lt;LF&gt; Short result code format: &lt;numeric code&gt;&lt;CR&gt;</p> <p><u>1</u> Information response: &lt;CR&gt;&lt;LF&gt;&lt;text&gt;&lt;CR&gt;&lt;LF&gt; Long result code format: &lt;CR&gt;&lt;LF&gt;&lt;verbose code&gt;&lt;CR&gt;&lt;LF&gt;</p>
Reference V.25ter	<p>Note</p> <p>In case of using the command without parameter &lt;value&gt; will be set to 0. Information responses described in chapter 9 (verbose code and numeric code).</p>

### 2.31 ATX Set CONNECT result code format and call monitoring

Write command ATX[<value>]	<p>Response</p> <p>This parameter setting determines whether or not the TA detects the presence of dial tone and busy signal and whether or not TA transmits particular result codes. <b>OK</b></p> <p>Parameter &lt;value&gt;</p> <p>0 CONNECT result code only returned, dial tone and busy detection are both disabled</p> <p>1 CONNECT&lt;text&gt; result code only returned, dial tone and busy detection are both disabled</p> <p>2 CONNECT&lt;text&gt; result code returned, dial tone detection is enabled, busy detection is disabled</p> <p>3 CONNECT&lt;text&gt; result code returned, dial tone detection is disabled, busy detection is enabled</p> <p><u>4</u> CONNECT&lt;text&gt; result code returned, dial tone and busy detection are both enabled</p>
Reference V.25ter	<p>Note</p> <p>Related &lt;text&gt; see chapter 9.1.5.</p>

### 2.32 ATZ Set all current parameters to user defined profile

Execute command ATZ[<value>]	<p>Response</p> <p>TA sets all current parameters to the user profile stored with AT&amp;W (see Chapter 2.38 on page 43). If a connection is in progress, it will be terminated. All defined GPRS contexts which are not activated or not online will be undefined (see +CGDCONT,+CGQREQ,+CGQMIN commands). The user defined profile is stored to the non-volatile memory.</p> <p>Note: If invalid, the user profile will be reset to the factory default profile. Any additional commands on the same command line will be ignored. A delay of 300 ms is required before next command is sent, otherwise "OK" response may be corrupted.</p> <p><b>OK</b></p> <p>Parameter</p> <p>&lt;value&gt; 0 Reset to user profile</p>
Reference V.25ter	<p>Note</p> <p>The GSM engines referred to in this manual can be assigned two profiles: the factory profile (restored with AT&amp;F) and the user profile (stored with AT&amp;W). See Chapter 2.35 for details on AT&amp;F.</p>

### 2.33 AT&C Set circuit Data Carrier Detect (DCD) function mode

Write command AT&C[<value>]	<p>Response</p> <p>This parameter determines how the state of circuit 109(DCD) relates to the detection of received line signal from the distant end.</p> <p><b>OK</b></p> <p>Parameter</p> <p>&lt;value&gt; 0 DCD line is always ON.</p> <p>1 DCD line is ON in the presence of data carrier only.</p>
Reference V.25ter	<p>Note</p> <p>Line state refers to RS-232 levels.</p>

**2.34 AT&D Set circuit Data Terminal Ready (DTR) function mode**

Write command AT&D[<value>]	<div>Response</div> <p>This command is only intended for data calls. The &lt;value&gt; parameter determines how the TA responds when circuit 108/2 (DTR) is changed from ON to OFF during data mode.</p> <p><b>OK</b></p> <div>Parameter</div> <table><tr><td>&lt;value&gt;</td><td>0</td><td>TA ignores status on DTR.</td></tr><tr><td></td><td>1</td><td>ON-&gt;OFF on DTR: Change to command mode while retaining the connected call.</td></tr><tr><td></td><td><u>2</u></td><td>ON-&gt;OFF on DTR: Disconnect data call, change to command mode. During state DTR = OFF is auto-answer off.</td></tr></table>	<value>	0	TA ignores status on DTR.		1	ON->OFF on DTR: Change to command mode while retaining the connected call.		<u>2</u>	ON->OFF on DTR: Disconnect data call, change to command mode. During state DTR = OFF is auto-answer off.
<value>	0	TA ignores status on DTR.								
	1	ON->OFF on DTR: Change to command mode while retaining the connected call.								
	<u>2</u>	ON->OFF on DTR: Disconnect data call, change to command mode. During state DTR = OFF is auto-answer off.								
Reference V.25ter	<div>Note</div> <p>Line state refers to RS-232 levels.</p>									

### 2.35 AT&F Set all current parameters to manufacturer defaults

Execute command AT&F[ <i>value</i> ]	<p>Response</p> <p>TA sets all current parameters to the manufacturer defined profile.</p> <p><b>OK</b></p> <p>Parameter</p> <p><b>&lt;value&gt;</b>      0      Set all TA parameters to manufacturer default. See Table 5: Factory settings.</p>
Reference V.25ter	<p>Note</p> <p>In addition to the default profile, you can store an individual one with AT&amp;W. To alternate between the two profiles enter either ATZ (loads user profile) or AT&amp;F (restores factory profile). Refer to Chapter 2.38 for AT&amp;W and Chapter 2.32 for ATZ.</p> <p>Audio parameters set with AT^SNFA, AT^SNFO and AT^SNFI can be stored with AT^SNFD. See Chapter 8.20.</p>

Table 5: Factory settings

Category	Command and factory setting
V.25ter commands	E1, Q0, V1, X4, \Q, &D2, &C1, &S0, +ILRR=0
S registers	S0=0, S3=13, S4=10, S5=8, S6=0, S7=60, S10=2, S18=0
Fax commands	+FCLASS=0
GSM 07.07 commands	+CCWA=0 +CBST=7,0,1 +CPBS="SM" +CFUN=1 +CRC=0 +CR=0 +CRLP=61,61,78,6 +CMEE=0 +CMER=0,0,0,0,0 +CREG=0 +CSCS="GSM" +VTD=1
GSM 07.05 commands for SMS	+CMGF=0 +CNMI=0,0,0,0,1 +CPMS="MT", "MT", "MT" +CSDH=0 +CSMS=0,1,1,1 +CSMP=17,167,0,0

Category	Command and factory setting	
GSM 07.07 commands for GPRS	+CGDCONT	AT&F clears every context which is not active or not online.
	+CGQREQ	AT&F clears the QoS profiles of every context which is not active or not online.
	+CGQMIN	AT&F clears the minimum QoS profiles of every context which is not active or not online.
Siemens defined commands	^SM20= 1,1	
	^SCKS	<n>=0
	^SACM	<n>=0
	^SSDA=0	
	^SSCONF=0	



**2.36 AT&S Set circuit Data Set Ready (DSR) function mode**

Write command AT&S<value>	Response This parameter determines how the TA sets circuit 107 (DSR) depending on the communication state of the TA interfacing TE. <b>OK</b>
	Parameter <value> <u>0</u> DSR always on. 1     TA in command mode: DSR is OFF. TA in data mode: DSR is ON.
Reference V.25ter	Note Line state refers to RS-232 levels.

## 2.37 AT&V Display current configuration

Execute command AT&V[<n>]	<p>Response</p> <p>TA returns the current parameter setting. The configuration varies depending on whether or not PIN authentication has been done, or Multiplex mode has been activated.</p> <p>Parameter</p> <p>&lt;n&gt;            0    profile number</p>	
Configuration without Multiplex mode or configuration on channel 1 if Multiplex mode is enabled	<p>PIN entered or not required (see AT+CPIN, pg. 110)</p> <p><b>ACTIVE PROFILE:</b>  <b>E1 Q0 V1 X4 &amp;C1 &amp;D2 &amp;S0 \Q0</b>  <b>S0:000 S3:013 S4:010 S5:008 S6:000 S7:060</b>  <b>S8:000 S10:002 S18:000</b>  <b>+CBST: 7,0,1</b>  <b>+CRLP: 61,61,78,6</b>  <b>+CR: 0</b>  <b>+FCLASS: 0</b>  <b>+CRC: 0</b>  <b>+CMGF: 0</b>  <b>+CNMI: 0,0,0,0,1</b>  <b>+ILRR: 0</b>  <b>+IPR: 0</b>  <b>+CMEE: 0</b>  <b>^SMGO: 0,0</b>  <b>+CSMS: 0,1,1,1</b>  <b>^SACM: 0,"000000","000000"</b>  <b>^SCKS: 0,1</b>  <b>+CREG: 0,1</b>  <b>+CLIP: 0,2</b>  <b>+CAOC: 0</b>  <b>+COPS: 0,0,"operator"</b></p> <p><b>OK</b></p>	<p>Required PIN not entered</p> <p><b>ACTIVE PROFILE:</b>  <b>E1 Q0 V1 X4 &amp;C1 &amp;D2 &amp;S0 \Q0</b>  <b>S0:000 S3:013 S4:010 S5:008 S6:000 S7:060</b>  <b>S8:000 S10:002 S18:000</b>  <b>+CBST: 7,0,1</b>  <b>+CRLP: 61,61,78,6</b>  <b>+CR: 0</b>  <b>+FCLASS: 0</b>  <b>+ILRR: 0</b>  <b>+IPR: 0</b>  <b>+CMEE: 0</b>  <b>^SCKS: 0,1</b></p> <p><b>OK</b></p>
Logical channels 2 and 3 (Multiplex mode enabled)	<p><b>+CRC: 0</b>  <b>+CMGF: 0</b>  <b>+CNMI: 0,0,0,0,1</b>  <b>+ILRR: 0</b>  <b>+IPR: 19200</b>  <b>+CMEE: 0</b>  <b>^SMGO: 0,0</b>  <b>+CSMS: 0,1,1,1</b>  <b>^SACM: 0,"000000","000000"</b>  <b>^SCKS: 0,1</b>  <b>+CREG: 0, 1</b>  <b>+CLIP: 0,2</b>  <b>+CAOC: 0</b>  <b>+COPS: 0,0,"operator"</b></p> <p><b>OK</b></p>	<p><b>+ILRR: 0</b>  <b>+IPR: 19200</b>  <b>+CMEE: 0</b>  <b>^SCKS: 0,1</b></p> <p><b>OK</b></p>
Reference	Note: Parameter values and order are subject to change.	

### 2.38 AT&W Store current configuration to user defined profile

<p>Execute command AT&amp;W[&lt;n&gt;]</p>	<p>TA stores the current settings to a user defined profile in the non-volatile memory.</p> <p>Response</p> <p><b>OK</b> or if error is related to ME functionality: <b>ERROR</b> / <b>+CME ERROR: &lt;err&gt;</b></p> <p>Parameter</p> <p><b>&lt;n&gt;</b>      0   number of profile</p>
<p>Reference V.25ter</p>	<p>Note</p> <p>The user defined profile will be loaded automatically after PowerUp. Use ATZ to restore user profile and AT&amp;F to restore factory settings. Until the first use of AT&amp;W, ATZ works as AT&amp;F. See Chapter 2.32 for details on ATZ and Chapter 2.35 for AT&amp;F.</p> <p>List of settings stored to user defined profile:</p> <ul style="list-style-type: none"> <li>• ATE, ATQ, ATV, ATX, AT+CRC, AT+CMGF, AT+CSDH, AT+CNMI, AT+ILRR, AT+CMEE, AT^SMGO, AT+CSMS, AT^SACM, ^SCKS, AT+CREG, AT+CLIP, AT+COPS. AT&amp;C, AT&amp;D, AT&amp;S, ATS0, ATS3, ATS4, ATS5, ATS6, ATS7, ATS8, ATS10, ATS18, AT+FCLASS, AT+CBST, AT+CRLP, AT+CR.</li> </ul> <p>User defined profiles in multiplex mode:</p> <ul style="list-style-type: none"> <li>• On each multiplexer channel you can save an individual profile.</li> <li>• List of settings stored to profile on multiplexer channel 1: ATE, ATQ, ATV, ATX, AT+CRC, AT+CMGF, AT+CSDH, AT+CNMI, AT+ILRR, AT+CMEE, AT^SMGO, AT+CSMS, AT^SACM, ^SCKS, AT+CREG, AT+CLIP, AT+COPS. AT&amp;C, AT&amp;D, AT&amp;S, ATS0, ATS3, ATS4, ATS5, ATS6, ATS7, ATS8, ATS10, ATS18, AT+FCLASS, AT+CBST, AT+CRLP, AT+CR.</li> <li>• List of settings stored to profile on multiplexer channels 2 and 3: ATE, ATQ, ATV, ATX, AT+CRC, AT+CMGF, AT+CSDH, AT+CNMI, AT+ILRR, AT+CMEE, AT^SMGO, AT+CSMS, AT^SACM, ^SCKS, AT+CREG, AT+CLIP, AT+COPS. (Parameters for data call are not relevant on channels 2 and 3.)</li> </ul>

### 2.39 AT+GCAP Request complete TA capabilities list

Test command AT+GCAP=?	Response <b>OK</b> Parameter
Execute command AT+GCAP	Response TA reports a list of additional capabilities. <b>+GCAP: &lt;name&gt;</b> <b>OK</b> Parameter <b>&lt;name&gt;</b> e.g.: +CGSM,+FCLASS
Reference V.25ter	Note +CGSM: The response text shows which GSM commands of the ETSI standard are supported.

### 2.40 AT+GMI Request manufacturer identification

Test command AT+GMI=?	Response <b>OK</b>
Execute command AT+GMI	Response TA reports information to identify the manufacturer. <b>SIEMENS</b> <b>OK</b>
Reference V.25ter	Note See also "AT+CGMI Request manufacturer identification", Chapter 4.12.

### 2.41 AT+GMM Request TA model identification

Test command AT+GMM=?	Response <b>OK</b>
Execute command AT+GMM	TA reports one or more lines of information text which permit the user to identify the specific model of device. <b>MC35</b> <b>OK</b>
Reference V.25ter	Note See also "AT+CGMM Request model identification", Chapter 4.13.

## 2.42 AT+GMR Request TA revision identification of software status

Test command AT+GMR=?	Response OK
Execute command AT+GMR	Response TA returns product software version identification text. <b>REVISION xx.yy</b> <b>OK</b>  xx.yy          Version xx and variant yy of software release.
Reference V.25ter	Note See also AT+CGMR Request revision identification of software status, Chapter 4.14.

## 2.43 AT+GSN Request TA serial number identification(IMEI)

Test command AT+GSN=?	Response <b>OK</b>
Execute command AT+GSN	Response TA reports one or more lines of information text which permit the user to identify the individual device. <sn> <b>OK</b>
	Parameter <sn>          IMEI of the telephone(International Mobile station Equipment Identity)
Reference V.25ter	Note The serial number (IMEI) varies for every individual ME device.

## 2.44 AT+ILRR Set TE-TA local rate reporting

Test command AT+ILRR=?	Response <b>+ILRR:</b> (list of supported <value>s) <b>OK</b> Parameter See write command
Read command AT+ILRR?	Response <b>+ILRR:</b> <value> <b>OK</b> Parameter See write command
Write command AT+ILRR= <value>	<p>The write command specifies whether or not an intermediate result code shall indicate the currently used local rate when an incoming or outgoing data call is established. The message is transmitted from the DCE (= TA) to the DTE (=TE) before the final result code of the connection setup (e.g. CONNECT) appears.</p> Response <b>OK</b>  Parameter <value>    0   Disables reporting of local port rate 1   Enables reporting of local port rate
	Intermediate result code <b>+ILRR:&lt;rate&gt;</b> Parameter <rate>    port rate setting in bit per second 0   (Autobauding, see Chapter 2.45.1) 300 600 1200 2400 4800 9600 14400 19200 28800 38400 57600 115200
Reference V.25ter	Note
Example	ATD030112233445 +ILRR: 57600 CONNECT 9600/RLP

## 2.45 AT+IPR Set fixed local rate

Test command AT+IPR=?	<p>Response</p> <p><b>+IPR:</b> (list of supported auto-detectable &lt;rate&gt;s), (list of supported fixed-only &lt;rate&gt;s) <b>OK</b></p> <p>Parameter</p> <p>See write command</p>
Read command AT+IPR?	<p>Response</p> <p><b>+IPR:</b> &lt;rate&gt; <b>OK</b></p> <p>Parameter</p> <p>See write command</p>
Write command AT+IPR=<rate>	<p>This command specifies the DTE-DCE bitrate. When you set a fix rate, make sure that both DTE (TE) and DCE (= TA) are configured to the same rate. When you select autobauding the DCE will automatically recognize the bitrate currently used by the DTE.</p> <p>A selected bitrate takes effect following the issue of any result code associated with this command (e.g. <b>OK</b>).</p> <p>The setting is stored in the non-volatile memory and will be used whenever the engine is powered up again. However, in case of autobaud mode (+IPR=0) the detected DCE bitrate will not be saved and, therefore, needs to be re-synchronized after restarting the GSM engine (see Chapter 2.45.1).</p> <p>Response</p> <p><b>OK</b> or if error is related to ME functionality: <b>ERROR</b> / <b>+CME ERROR:</b> &lt;err&gt;</p> <p>Parameter</p> <p><b>&lt;rate&gt;</b> bit rate per second</p> <p style="padding-left: 40px;">0 (Autobauding, see Chapter 2.45.1)</p> <p style="padding-left: 40px;">300</p> <p style="padding-left: 40px;">600</p> <p style="padding-left: 40px;">1200</p> <p style="padding-left: 40px;">2400</p> <p style="padding-left: 40px;">4800</p> <p style="padding-left: 40px;">9600</p> <p style="padding-left: 40px;">14400</p> <p style="padding-left: 40px;">19200</p> <p style="padding-left: 40px;">28800</p> <p style="padding-left: 40px;">38400</p> <p style="padding-left: 40px;">57600</p> <p style="padding-left: 40px;">115200</p> <p>In order to account for greater amounts of data it is recommended to choose a minimum bit rate of 2400 bps. If the ME is operated in Multiplex mode we suggest a minimum bit rate of 4800 bps.</p>
Reference V.25ter	<p>Note</p> <p>Factory setting is &lt;rate&gt;=0. It cannot be restored with AT&amp;F. The current setting will be preserved when you download new firmware or when the ME is powered down.</p>

Generally, **AT+IPR=x** should be used as a standalone command. If nevertheless combinations with other commands on the same line cannot be avoided, there are several constraints to be considered:

- Avoid combinations with the AT commands listed in Chapter 1.4.2.
- Take into account that a delay of 100 ms is required between a response to the last command (e.g. **OK**) and the next command on the same line.
- When you enter **AT+IPR=0**, autobauding will be activated after the response to the last command is received.
- When local echo is active (**ATE1**) and you enter **AT+IPR=x** with other commands you may encounter the following problem: If switching to the new bit rate takes effect while a response is being transmitted, the last bytes may be sent at the new bit rate and thus, not properly transmitted. The following commands will be correctly sent at the new bit rate.

### 2.45.1 Autobauding

Autobauding allows the GSM engine to automatically detect the bitrate configured in the host application. The serial interface of the GSM engine supports autobauding for the following bitrates: 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200. Factory setting is autobauding enabled. This gives you the flexibility to put the GSM engine into operation no matter what bitrate your host application is configured to.

To take advantage of autobaud mode specific attention must be paid to the following requirements:

#### Synchronization between DTE and DCE

Ensure that DTE and DCE are correctly synchronized and the bitrate used by the DTE is detected by the DCE (= ME). To allow the bitrate to be synchronized simply issue an "AT" or "at" string. This is necessary

- after you have activated autobauding
- when you start up the GSM engine while autobauding is enabled. It is recommended to wait 3 to 5 seconds before sending the first AT character. Otherwise undefined characters might be returned.

If you want to use autobauding and autoanswer at the same time, you can easily enable the synchronization, when you activate autobauding first and then configure the autoanswer mode (**ATS0=0**).

#### Restrictions on autobauding operation

- The serial interface has to be operated at 8 data bits, no parity and 1 stop bit (factory setting).
- The A/ command (and a/) cannot be used.
- Only the strings "AT" or "at" can be detected (neither "aT" nor "At").
- The Unsolicited Result Codes "**^SYSSTART**", "**^SYSSTART ALARM MODE**" and "**^SYSSTART CHARGE-ONLY MODE**" are not indicated when you start up the ME while autobauding is enabled. This is due to the fact that the new bitrate is not detected unless DTE and DCE are correctly synchronized as described above.
- Any other Unsolicited Result Codes that may be issued before the ME detects the new bitrate (by receiving the first AT command string) will be sent at the previous bitrate.
- It is not recommended to switch to autobauding from a bitrate that cannot be detected by the autobaud mechanism (e.g. 300 baud). Responses to **+IPR=0** and any commands on the same line might be corrupted.
- When entering several AT commands on the same line, consider the requirements described in the Notes of Chapter 2.45.
- See also AT+ILRR Set TE-TA local rate reporting , pg. 45

#### Autobauding and multiplex mode

If autobauding is active you cannot switch to multiplex mode (see **+CMUX**, pg. 101). Vice versa, when you run the multiplex mode, the write command **AT+IPR=<rate>** cannot be used.



### 3 AT Commands for FAX

The following commands can be used for FAX transmission. If the ME is acting as a Fax modem to a PC-based application (e.g. "WinFax") it is necessary to select the proper Service Class (Fax Class) provided by the ME. The ME reports its Service Class capabilities, the current setting and the range of services available. This is provided by the AT+FCLASS command (see pg. 51).

Note: When sending a FAX with a standard FAX application for Personal Computers it is recommended to use autobauding (AT+IPR=0).

Currently defined Service Class values (see TIA/EIA-592-A)			
ME	+FCLASS parameter	Service Class	Reference, Standard
👍	0	data modem	e.g. TIA/EIA-602 or ITU V.25ter
👍	1	Service Class 1	EIA/TIA-578-A
	1.0	Service Class 1	ITU-T T.31
👍	2	manufacture specific	this document and EIA PN-2388 (draft)
	2.0	Service Class 2	TIA/EIA-592
	2.1	Service Class 2	TIA/EIA-592-A or ITU-T T.32
	8	Voice DCE	TIA IS-101
	Reserved		

Note: Be aware that there is a difference between Service Classes 2 and 2.0! Only the first is applicable to the ME.

Responses that may occur during a fax call are presented in the form of Unsolicited Result Codes (URCs). A summary of Fax specific URCs is listed in Chapter 9.1.4, Table 14.

#### 3.1 AT+FBADLIN Bad Line Threshold

Read command AT+FBADLIN?	<p>This command defines the "Copy-Quality-OK"-threshold. If &lt;badline&gt; consecutive lines have pixel count errors in normal resolution (98 dpi) mode, then the copy quality is unacceptable. If &lt;badline&gt; * 2 consecutive lines have pixel count errors in fine resolution (196 dpi) mode, then the copy quality is unacceptable. "Copy Quality Not OK" occurs if either the error percentage is too high or too many consecutive lines contain errors. A value of 0 implies that error checking is not present or disabled.</p> <p>Response <b>&lt;badlin&gt; OK</b></p> <p>Parameter See write command</p>
Write command AT+FBADLIN= <badlin>	<p>Response <b>OK</b></p> <p>If error is related to ME functionality: <b>ERROR</b></p> <p>Parameter <b>&lt;badlin&gt;</b>    0 – <u>10</u> – 255 bad lines</p>
Reference EIA PN-2388	<p>Note Used for Fax class 2 only</p>

### 3.2 AT+FBADMUL Error Threshold Multiplier

Read command AT+FBADMUL?	<p>This command defines the “Copy-Quality-OK” multiplier. The number of lines received with a bad pixel count is multiplied by this number. If the result exceeds the total number of lines on the page the error rate is considered too high. A threshold multiplier value of 20 corresponds to a 5% error rate. A value of 0 implies that error checking is not present or disabled.</p> <p>Response</p> <p><b>&lt;badmul&gt; OK</b></p> <p>Parameter</p> <p>See write command</p>
Write command AT+FBADMUL= <n>	<p>Response</p> <p><b>OK</b></p> <p>If error is related to ME functionality:</p> <p><b>ERROR</b></p> <p>Parameter</p> <p><b>&lt;n&gt;            0 – <u>20</u> – 255</b></p>
Reference EIA PN-2388	<p>Note</p> <p>Used for Faxclass 2 only</p>

### 3.3 AT+FBOR Query data bit order

Test command AT+FBOR=?	Query the bit order for receive-mode. The mode is set by the ME dependent on the selected Service Class, see “AT+FCLASS Fax: Select, read or test service class”, pg. 51. Response (list of supported bit order modes <bor>s) <b>OK</b> Parameter See write command						
Read command AT+FBOR?	Response <bor> <b>OK</b> Parameter See write command						
Write command AT+FBOR=<bor>	Response <b>OK</b> Parameter <table><tr><td>&lt;bor&gt;</td><td>0</td><td>direct bit order for both Phase C and for Phase B/D data.</td></tr><tr><td></td><td><u>1</u></td><td>Reversed bit order for Phase C data, direct Bit Order for Phase B/D data.</td></tr></table>	<bor>	0	direct bit order for both Phase C and for Phase B/D data.		<u>1</u>	Reversed bit order for Phase C data, direct Bit Order for Phase B/D data.
<bor>	0	direct bit order for both Phase C and for Phase B/D data.					
	<u>1</u>	Reversed bit order for Phase C data, direct Bit Order for Phase B/D data.					
Reference EIA PN-2388	Note Used for Fax class 2 only						

### 3.4 AT+FCIG Query or set the Local polling id

Test command AT+FCIG=?	Response (max. length of Local Polling ID string) (range of supported ASCII character values) <b>OK</b> Parameter See write command
Read command AT+FCIG?	Response <id> <b>OK</b> Parameter See write command
Write command AT+FCIG =<id>	Response <b>OK</b> Parameter <id> Local Polling ID string, max. length and possible content as reported by test command. Default value is empty string ("").
Reference EIA PN-2388	Note See also "AT+FLID Query or set the Local Id setting capabilities", pg. 57. Used for Faxclass 2 only

### 3.5 AT+FCLASS Fax: Select, read or test service class

Test command AT+FCLASS=?	See introduction to fax commands, pg. 49. Response (list of supported <n>s) <b>OK</b> Parameter See write command
Read command AT+FCLASS?	Response <n> <b>OK</b> Parameter See write command
Write command AT+FCLASS= <n>	The ME is set to a particular mode of operation (data, fax). This causes the MA to process information in a manner suitable for that type of information. Response <b>OK</b> Parameter <div style="display: flex; align-items: center;"> <div style="margin-right: 10px;">&lt;n&gt;</div> <div style="margin-right: 10px;">0</div> <div>data (e.g. EIA/TIA-602 or ITU V.25ter)</div> </div> <div style="display: flex; align-items: center;"> <div style="margin-right: 10px;"></div> <div style="margin-right: 10px;">1</div> <div>Fax class 1 (EIA/TIA-578-A, Service Class 1)</div> </div> <div style="display: flex; align-items: center;"> <div style="margin-right: 10px;"></div> <div style="margin-right: 10px;">2</div> <div>Fax class 2 (EIA/TIA SP-2388, an early draft version of EIA/TIA-592-A – Service class 2.1)</div> </div>
Reference EIA/TIA-592-A	Note Using Error Correcting Mode (ECM) when sending FAXes over GSM should be avoided.

### 3.6 AT+FCQ Copy Quality Checking

Test command AT+FCQ =?	<p>This command controls Copy Quality checking when receiving a fax.</p> <p>Response (list of supported copy quality checking &lt;cq&gt;s)</p> <p><b>OK</b></p> <p>Parameter</p> <p>See write command</p>						
Read command AT+FCQ?	<p>Response &lt;cq&gt; <b>OK</b></p> <p>Parameter</p> <p>See write command</p>						
Write command AT+FCQ =<cq>	<p>Response <b>OK</b></p> <p>Parameter</p> <table><tr><td>&lt;cq&gt;</td><td>0</td><td>No copy quality checking. The ME will generate Copy Quality OK (MCF) responses to complete pages.</td></tr><tr><td></td><td><u>1</u></td><td>ME can check 1-D phase data. The connected application must check copy quality for 2-D phase C data</td></tr></table>	<cq>	0	No copy quality checking. The ME will generate Copy Quality OK (MCF) responses to complete pages.		<u>1</u>	ME can check 1-D phase data. The connected application must check copy quality for 2-D phase C data
<cq>	0	No copy quality checking. The ME will generate Copy Quality OK (MCF) responses to complete pages.					
	<u>1</u>	ME can check 1-D phase data. The connected application must check copy quality for 2-D phase C data					
Reference EIA PN-2388	<p>Note</p> <p>Used for for Faxclass 2 only.</p>						

### 3.7 AT+FCR Capability to receive

Write command AT+FCR=<cr>	Response <b>OK</b> Parameter  <table><tr><td>&lt;cr&gt;</td><td><u>0</u></td><td>ME will not receive message data. This can be used when the application has insufficient storage. The ME can send and can be polled for a file.</td></tr><tr><td></td><td>1</td><td>ME can receive message data.</td></tr></table>	<cr>	<u>0</u>	ME will not receive message data. This can be used when the application has insufficient storage. The ME can send and can be polled for a file.		1	ME can receive message data.
<cr>	<u>0</u>	ME will not receive message data. This can be used when the application has insufficient storage. The ME can send and can be polled for a file.					
	1	ME can receive message data.					
Reference EIA PN-2388	Note Used for Faxclass 2 only						

### 3.8 AT+FDCC Query or set capabilities

Test command AT+FDCC=?	<p>This command allows the connected application to sense and constrain the capabilities of the facsimile DCE (=ME), from the choices defined in CCITT T.30 Table 2.</p> <p>Response (list of &lt;VR&gt;s), (list of &lt;BR&gt;s), (list of &lt;WD&gt;s), (list of &lt;LN&gt;s), (list of &lt;DF&gt;s), (list of &lt;EC&gt;s), (list of &lt;BF&gt;s), (list of &lt;ST&gt;s)</p> <p><b>OK</b></p> <p>Parameter VR: Vertical Resolution, BR: Bit Rate, WD: Page Width, LN: Page Length, DF: Data Compression Format, EC: Error Correction Mode, BF: Binary File Transfer Mode, ST: Scan Time/Line.</p> <p>Note: For further information see AT+FDIS, pg. 55</p>
Read command AT+FDCC?	<p>Response &lt;dcc&gt; <b>OK</b></p> <p>Parameter See write command</p>
Write command AT+FDCC=<VR>, ,<WD>,<LN>,<DF>,<EC>,<BF>,<ST>	<p>Response <b>OK</b></p> <p>Parameter VR: Vertical Resolution, BR: Bit Rate, WD: Page Width, LN: Page Length, DF: Data Compression Format, EC: Error Correction Mode, BF: Binary File Transfer Mode, ST: Scan Time/Line.</p> <p>Note: For further information see AT+FDIS, pg. 55</p>
Reference EIA PN-2388	<p>Note Used for Faxclass 2 only</p>

### 3.9 AT+FDFFC Data Compression Format Conversion

Test command AT+FDFFC=?	<p>This parameter determines the ME response to a mismatch between the data format negotiated for the facsimile session, reported by the +FDSCS:DF subparameter, and the Phase C data desired by the controlling application, indicated by the optional +FDT:DF subparameter, or the +FDIS=DF subparameter for the +FDR operation.</p> <p>Response (list of supported &lt;df&gt;s) <b>OK</b></p> <p>Parameter See write command</p>
Read command AT+FDFFC?	<p>Response &lt;df&gt; <b>OK</b></p> <p>Parameter See write command</p>
Write command AT+FDFFC =<df>	<p>Response <b>OK</b></p> <p>Parameter &lt;df&gt;            <u>0</u>      Mismatch checking is always disabled. The controlling application has to check the +FDSCS: DF subparameter and transfer matching data.</p>
Reference EIA PN-2388	<p>Note Used for Fax Class 2 only</p>

### 3.10 AT+FDIS Query or set session parameters

Test command AT+FDIS=?	This command allows the controlling application to sense and constrain the capabilities used for the current session. It uses +FDIS to generate DIS or DTC messages directly, and uses +FDIS and received DIS messages to generate DCS messages. Response (list of <VR>s), (list of  s), (list of <WD>s), (list of <LN>s), (list of <DF>s), (list of <EC>s), (list of <BF>s), (list of <ST>s) Parameter See write command																																																																																																																												
Read command AT+FDIS?	Response <cdec> OK Parameter See write command																																																																																																																												
Write command AT+FDIS = <VR>, ,<WD>, <LN>,<DF>,<EC>, <BF>,<ST>	<div>Response OK</div> <div>Parameter</div> <table><tr><td>Vertical Resolution</td><td>VR</td><td>0</td><td>normal, 98 lpi</td></tr><tr><td></td><td></td><td>1</td><td>fine, 196 lpi</td></tr><tr><td>Bit Rate</td><td>BR</td><td>0</td><td>2400 bit/s, V.27ter</td></tr><tr><td></td><td></td><td>1</td><td>4800 bit/s, V.27ter</td></tr><tr><td></td><td></td><td>2</td><td>7200 bit/s, V.29</td></tr><tr><td></td><td></td><td>3</td><td>9600 bit/s, V.29</td></tr><tr><td>Page Width</td><td>WD</td><td>0 *)</td><td>1728 pixels in 215mm</td></tr><tr><td></td><td></td><td>1</td><td>2048 pixels in 255 mm</td></tr><tr><td></td><td></td><td>2</td><td>2432 pixels in 303 mm</td></tr><tr><td></td><td></td><td>3</td><td>1216 pixels in 151 mm</td></tr><tr><td></td><td></td><td>4</td><td>864 pixels in 107 mm</td></tr><tr><td>Page Length</td><td>LN</td><td>0</td><td>A4, 297mm</td></tr><tr><td></td><td></td><td>1</td><td>B4, 364mm</td></tr><tr><td></td><td></td><td>2</td><td>unlimited length</td></tr><tr><td>Data Compression Format</td><td>DF</td><td>0 *)</td><td>1-D modified Huffman</td></tr><tr><td></td><td></td><td>1</td><td>2-D modified read</td></tr><tr><td></td><td></td><td>2</td><td>2-D uncompressed mode</td></tr><tr><td>Error correction (Annex A/T.30)</td><td>EC</td><td>0 *)</td><td>disable ECM</td></tr><tr><td></td><td></td><td>1</td><td>enable ECM, 64 bytes/frame</td></tr><tr><td></td><td></td><td>2</td><td>enable ECM, 256 bytes/frame</td></tr><tr><td>Binary File mode</td><td>BF</td><td>0 *)</td><td>disable BFT</td></tr><tr><td>Transfer Mode</td><td></td><td>1</td><td>enable BFT</td></tr><tr><td>Scan Time/Line</td><td>ST</td><td>0 *)</td><td>0 ms (at VR= normal)</td></tr><tr><td></td><td></td><td>1</td><td>5 ms</td></tr><tr><td></td><td></td><td>2</td><td>10 ms</td></tr><tr><td></td><td></td><td>3</td><td>10 ms</td></tr><tr><td></td><td></td><td>4</td><td>20 ms</td></tr><tr><td></td><td></td><td>5</td><td>20 ms</td></tr><tr><td></td><td></td><td>6</td><td>40 ms</td></tr><tr><td></td><td></td><td>7</td><td>40 ms</td></tr></table> <div>*) Note: Only the default value needs to be implemented. Use test command to check which parameter values are really possible!</div>					Vertical Resolution	VR	0	normal, 98 lpi			1	fine, 196 lpi	Bit Rate	BR	0	2400 bit/s, V.27ter			1	4800 bit/s, V.27ter			2	7200 bit/s, V.29			3	9600 bit/s, V.29	Page Width	WD	0 *)	1728 pixels in 215mm			1	2048 pixels in 255 mm			2	2432 pixels in 303 mm			3	1216 pixels in 151 mm			4	864 pixels in 107 mm	Page Length	LN	0	A4, 297mm			1	B4, 364mm			2	unlimited length	Data Compression Format	DF	0 *)	1-D modified Huffman			1	2-D modified read			2	2-D uncompressed mode	Error correction (Annex A/T.30)	EC	0 *)	disable ECM			1	enable ECM, 64 bytes/frame			2	enable ECM, 256 bytes/frame	Binary File mode	BF	0 *)	disable BFT	Transfer Mode		1	enable BFT	Scan Time/Line	ST	0 *)	0 ms (at VR= normal)			1	5 ms			2	10 ms			3	10 ms			4	20 ms			5	20 ms			6	40 ms			7	40 ms
Vertical Resolution	VR	0	normal, 98 lpi																																																																																																																										
		1	fine, 196 lpi																																																																																																																										
Bit Rate	BR	0	2400 bit/s, V.27ter																																																																																																																										
		1	4800 bit/s, V.27ter																																																																																																																										
		2	7200 bit/s, V.29																																																																																																																										
		3	9600 bit/s, V.29																																																																																																																										
Page Width	WD	0 *)	1728 pixels in 215mm																																																																																																																										
		1	2048 pixels in 255 mm																																																																																																																										
		2	2432 pixels in 303 mm																																																																																																																										
		3	1216 pixels in 151 mm																																																																																																																										
		4	864 pixels in 107 mm																																																																																																																										
Page Length	LN	0	A4, 297mm																																																																																																																										
		1	B4, 364mm																																																																																																																										
		2	unlimited length																																																																																																																										
Data Compression Format	DF	0 *)	1-D modified Huffman																																																																																																																										
		1	2-D modified read																																																																																																																										
		2	2-D uncompressed mode																																																																																																																										
Error correction (Annex A/T.30)	EC	0 *)	disable ECM																																																																																																																										
		1	enable ECM, 64 bytes/frame																																																																																																																										
		2	enable ECM, 256 bytes/frame																																																																																																																										
Binary File mode	BF	0 *)	disable BFT																																																																																																																										
Transfer Mode		1	enable BFT																																																																																																																										
Scan Time/Line	ST	0 *)	0 ms (at VR= normal)																																																																																																																										
		1	5 ms																																																																																																																										
		2	10 ms																																																																																																																										
		3	10 ms																																																																																																																										
		4	20 ms																																																																																																																										
		5	20 ms																																																																																																																										
		6	40 ms																																																																																																																										
		7	40 ms																																																																																																																										
Reference EIA PN-2388	Note Used for Faxclass 2 only																																																																																																																												

### 3.11 AT+FDR Begin or continue phase C data reception

Execute command AT+FDR	<p>The +FDR command initiates transition to Phase C data reception.</p> <p>Response</p> <p><b>CONNECT</b></p> <p>or</p> <p><b>OK</b></p> <p>If error is related to ME functionality:</p> <p>ERROR</p>
Reference EIA PN-2388	<p>Note</p> <p>Used for Faxclass 2 only</p>

### 3.12 AT+FDT Data Transmission

Execute command AT+FDT	<p>This command requests the ME to transmit a Phase C page. When the ME is ready to accept Phase C data, it issues the negotiation responses and the CONNECT result code to the application.</p> <p>In Phase B, the +FDT command releases the ME to proceed with negotiation, and releases the DCS message to the remote station. In Phase C, the +FDT command resumes transmission after the end of a data stream transmitted before.</p> <p>Response</p> <p><b>CONNECT</b></p>																																																																				
Write command AT+FDT =<dt>	<p>Response</p> <p><b>CONNECT</b></p> <p>Parameter</p> <p><b>&lt;dt&gt;        DF,VR,BR,WD,LN</b>    comma separated parameter list</p> <table><tr><td>Data Compression Format</td><td>DF</td><td><u>0</u></td><td>1-D modified Huffman</td></tr><tr><td></td><td></td><td>1</td><td>2-D modified read</td></tr><tr><td></td><td></td><td>2</td><td>2-D uncompressed mode</td></tr><tr><td>Vertical Resolution</td><td>VR</td><td>0</td><td>normal, 98 lpi</td></tr><tr><td></td><td></td><td><u>1</u></td><td>fine, 196 lpi</td></tr><tr><td>Bit Rate</td><td>BR</td><td>0</td><td>2400 bit/s, V.27ter</td></tr><tr><td></td><td></td><td>1</td><td>4800 bit/s, V.27ter</td></tr><tr><td></td><td></td><td>2</td><td>7200 bit/s, V.29</td></tr><tr><td></td><td></td><td><u>3</u></td><td>9600 bit/s, V.29</td></tr><tr><td>Page Width</td><td>WD</td><td><u>0</u></td><td>1728 pixels in 215mm</td></tr><tr><td></td><td></td><td>1</td><td>2048 pixels in 255 mm</td></tr><tr><td></td><td></td><td>2</td><td>2432 pixels in 303 mm</td></tr><tr><td></td><td></td><td>3</td><td>1216 pixels in 151 mm</td></tr><tr><td></td><td></td><td>4</td><td>864 pixels in 107 mm</td></tr><tr><td>Page Length</td><td>LN</td><td>0</td><td>A4, 297mm</td></tr><tr><td></td><td></td><td>1</td><td>B4, 364mm</td></tr><tr><td></td><td></td><td><u>2</u></td><td>unlimited length</td></tr></table>	Data Compression Format	DF	<u>0</u>	1-D modified Huffman			1	2-D modified read			2	2-D uncompressed mode	Vertical Resolution	VR	0	normal, 98 lpi			<u>1</u>	fine, 196 lpi	Bit Rate	BR	0	2400 bit/s, V.27ter			1	4800 bit/s, V.27ter			2	7200 bit/s, V.29			<u>3</u>	9600 bit/s, V.29	Page Width	WD	<u>0</u>	1728 pixels in 215mm			1	2048 pixels in 255 mm			2	2432 pixels in 303 mm			3	1216 pixels in 151 mm			4	864 pixels in 107 mm	Page Length	LN	0	A4, 297mm			1	B4, 364mm			<u>2</u>	unlimited length
Data Compression Format	DF	<u>0</u>	1-D modified Huffman																																																																		
		1	2-D modified read																																																																		
		2	2-D uncompressed mode																																																																		
Vertical Resolution	VR	0	normal, 98 lpi																																																																		
		<u>1</u>	fine, 196 lpi																																																																		
Bit Rate	BR	0	2400 bit/s, V.27ter																																																																		
		1	4800 bit/s, V.27ter																																																																		
		2	7200 bit/s, V.29																																																																		
		<u>3</u>	9600 bit/s, V.29																																																																		
Page Width	WD	<u>0</u>	1728 pixels in 215mm																																																																		
		1	2048 pixels in 255 mm																																																																		
		2	2432 pixels in 303 mm																																																																		
		3	1216 pixels in 151 mm																																																																		
		4	864 pixels in 107 mm																																																																		
Page Length	LN	0	A4, 297mm																																																																		
		1	B4, 364mm																																																																		
		<u>2</u>	unlimited length																																																																		
Reference EIA PN-2388	<p>Note</p> <p>Used for Faxclass 2 only</p>																																																																				



### 3.13 AT+FET End a page or document

Write command AT+FET=<ppm>	<p>This command indicates that the current page or partial page is complete. An ERROR response code results if this command is issued while the mode is on-hook.</p> <p>Response <b>OK</b></p> <p>Parameter <b>&lt;ppm&gt;</b> Post Page Message Codes</p> <ul style="list-style-type: none"> <li>1 another document next</li> <li>2 no more pages or documents</li> <li>4 another page, procedure interrupt</li> <li>5 another document, procedure interrupt</li> </ul>
Reference EIA PN-2388	<p>Note</p> <p>Used for Faxclass 2 only</p>

### 3.14 AT+FK Kill operation, orderly FAX abort

Execute command AT+FK	<p>This command causes the TA to terminate the session in an orderly manner.</p> <p>Response <b>OK</b></p>
Reference	<p>Note</p> <p>Used for Faxclass 2 only</p>

### 3.15 AT+FLID Query or set the Local Id setting capabilities

Test command AT+FLID =?	<p>Response (max. character length of Local ID string) (range of supported ASCII character values) <b>OK</b></p> <p>Parameter See write command</p>
Read command AT+FLID?	<p>Response <b>&lt;lid&gt; OK</b></p> <p>Parameter See write command</p>
Write command AT+FLID =<lid>	<p>Response <b>OK</b></p> <p>Parameter <b>&lt;lid&gt;</b> Local ID string, max. length and possible content as reported by test command. Default value is empty string ("").</p>
Reference EIA PN-2388	<p>Note</p> <p>See also "AT+FCIG Query or set the Local polling id", pg. 50.</p> <p>Used for Faxclass 2 only</p>

### 3.16 AT+FMDL Identify Product Model

Read command AT+FMDL?	Send the model identification to the TA Response <b>Gipsy Soft Protocolstack</b> <b>OK</b>
Reference Siemens	Note Used for Faxclass 2 only

### 3.17 AT+FMFR Request Manufacturer Identification

Read command AT+FMFR?	Send the manufacturer identification to the TA Response <b>SIEMENS</b> <b>OK</b>
Reference Siemens	Note Used for Fax class 2 only

### 3.18 AT+FOPT Set bit order independently

Write command AT+FOPT=<opt>	Model specific command to set bit order independently of the understanding which is "mirrored" and which is direct. Response <b>OK</b> Parameter <div style="display: flex; align-items: center;"> <div style="margin-right: 10px;"><b>&lt;opt&gt;</b></div> <div style="display: flex; flex-direction: column; gap: 5px;"> <div>0 non-standard</div> <div>1 standard</div> </div> </div>
Reference Siemens	Note Used for Fax class 2 only

### 3.19 AT+FPHCTO DTE Phase C Response Timeout

Read command AT+FPHCTO?	<p>The time-out value &lt;tout&gt; determines how long the DCE will wait for a command after reaching the end of data when transmitting in Phase C. When time-out is reached, the DCE assumes that there are no more pages or documents to send.</p> <p>Response &lt;tout&gt; <b>OK</b></p> <p>Parameter See write command</p>
Write command AT+FPHCTO=<tout>	<p>Parameter &lt;tout&gt; 0 – <u>30</u> – 255                      time-out value in 100ms units.</p> <p>Response <b>OK</b></p> <p>If error is related to ME functionality: <b>ERROR</b></p>
Reference EIA PN-2388	<p>Note Used for Fax class 2 only</p>

### 3.20 AT+FREV Identify Product Revision

Test command AT+FREV?	<p>Sends the revision identification to the TA</p> <p>Response <b>V2.550</b> <b>OK</b></p>
Reference Siemens	<p>Note Used for Fax class 2 only</p>

### 3.21 AT+FRH Receive Data Using HDLC Framing

Execute command AT+FRH=<mod>	<p>This command causes the TA to receive frames using the HDLC protocol and the modulation defined below. An ERROR response code results if this command is issued while the modem is on-hook.</p> <p>Response</p> <p><b>CONNECT</b></p> <p>If error is related to ME functionality:</p> <p><b>ERROR</b></p> <p>Parameter</p> <table><tr><td>&lt;mod&gt;</td><td colspan="3">modulation mode</td></tr><tr><td>3</td><td>V21 Ch2</td><td>300</td><td>bps</td></tr><tr><td>24</td><td>V.27ter</td><td>2400</td><td>bps</td></tr><tr><td>48</td><td>V.27ter</td><td>4800</td><td>bps</td></tr><tr><td>72</td><td>V.29</td><td>7200</td><td>bps</td></tr><tr><td>96</td><td>V.29</td><td>9600</td><td>bps</td></tr></table>	<mod>	modulation mode			3	V21 Ch2	300	bps	24	V.27ter	2400	bps	48	V.27ter	4800	bps	72	V.29	7200	bps	96	V.29	9600	bps
<mod>	modulation mode																								
3	V21 Ch2	300	bps																						
24	V.27ter	2400	bps																						
48	V.27ter	4800	bps																						
72	V.29	7200	bps																						
96	V.29	9600	bps																						
Reference TIA/EIA-578	<p>Note</p> <p>Used for Fax class 1 only</p>																								

### 3.22 AT+FRM Receive Data

Test command AT+FRM=?	Response (List of supported modulation modes <mod>s) <b>OK</b>  Parameter See write command																
Write command AT+FRM=<mod> >	<p>This command causes the TA to enter the receiver-mode using the modulation defined below. An ERROR response code results if this command is issued while the modem is on-hook.</p> <p>Response <b>CONNECT</b></p> <p>If error is related to ME functionality: <b>ERROR</b></p> <p>Parameter</p> <table><tr><td>&lt;mod&gt;</td><td>96</td><td>V.29</td><td>9600 bps</td></tr><tr><td></td><td>72</td><td>V.29</td><td>7200 bps</td></tr><tr><td></td><td>48</td><td>V.27ter</td><td>4800 bps</td></tr><tr><td></td><td>24</td><td>V.27ter</td><td>2400 bps</td></tr></table>	<mod>	96	V.29	9600 bps		72	V.29	7200 bps		48	V.27ter	4800 bps		24	V.27ter	2400 bps
<mod>	96	V.29	9600 bps														
	72	V.29	7200 bps														
	48	V.27ter	4800 bps														
	24	V.27ter	2400 bps														
Reference TIA/EIA-578	Note Used for Faxclass 1 only																

### 3.23 AT+FRS Receive Silence

Write command AT+FRS=<time>	+FRS=n causes the TA to report an OK result code to the TE after <time> 10 millisecond intervals of silence have been detected on the line. This command is aborted if any character is received by the DTE. The modem discards the aborting character and issues an OK result code. An ERROR response code results if this command is issued while the mode is on-hook.  Response <b>OK</b>  If error is related to ME functionality: <b>ERROR</b>  Parameter <time> 0 – 255 no. of 10 millisecond intervals
Reference TIA/EIA-578	Note Used for Faxclass 1 only

### 3.24 AT+FTH Transmit Data Using HDLC Framing

Write command AT+FTH=<mod>	<p>This command causes the TA to transmit data using HDLC protocol and the modulation mode defined below. An ERROR response code results if this command is issued while the modem is on-hook.</p> <p>Response</p> <p><b>CONNECT</b></p> <p>Parameter</p> <table><tr><td>&lt;mod&gt;</td><td>3</td><td>V.21 Ch2</td><td>300 bps</td></tr></table>	<mod>	3	V.21 Ch2	300 bps
<mod>	3	V.21 Ch2	300 bps		
Reference TIA/EIA-578	<p>Note</p> <p>Used for Faxclass 1 only</p>				

### 3.25 AT+FTM Transmit Data

Test command AT+FTM=?	Response (List of supported modulation modes) OK Parameter See write command										
Write command AT+FTM=<mod>	<p>This command causes the TA to transmit data using the modulation mode defined below. An ERROR response code results if this command is issued while the modem is on-hook.</p> <p>Response <b>CONNECT</b></p> <p>If error is related to ME functionality: <b>ERROR</b></p> <p>Parameter</p> <table> <tr> <td>&lt;mod&gt;</td><td>modulation mode</td></tr> <tr> <td>96</td><td>V.29 9600 bps</td></tr> <tr> <td>72</td><td>V.29 7200 bps</td></tr> <tr> <td>48</td><td>V.27ter 4800 bps</td></tr> <tr> <td>24</td><td>V.27ter 2400 bps</td></tr> </table>	<mod>	modulation mode	96	V.29 9600 bps	72	V.29 7200 bps	48	V.27ter 4800 bps	24	V.27ter 2400 bps
<mod>	modulation mode										
96	V.29 9600 bps										
72	V.29 7200 bps										
48	V.27ter 4800 bps										
24	V.27ter 2400 bps										
Reference TIA/EIA-578	Note Used for Fax class 1 only										

### 3.26 AT+FTS Stop Transmission and Wait

Write command AT+FTS=<time>	<p>This command causes the TA to terminate a transmission and wait for &lt;time&gt; 10 millisecond intervals before responding with the OK result code to the DTE.</p> <p>Response</p> <p>An ERROR response code results if this command is issued while the modem is on-hook.</p> <p>Parameter</p> <p>&lt;time&gt; 0 – 85 no. of 10 millisecond intervals</p>
Reference TIA/EIA-578	Note Used for Fax class 1 only

### 3.27 AT+FVRFC Vertical resolution format conversion

Test command AT+FVRFC=?	<p>This command determines the DCE response to a mismatch between the vertical resolution negotiated for the facsimile session and the Phase C data desired by the DTE.</p> <p>Response (List of supported mismatch checking modes) <b>OK</b></p> <p>Parameter See write command</p>						
Read command AT+FVRFC?	<p>Response &lt;vrfc&gt; <b>OK</b></p> <p>Parameter See write command</p>						
Write command AT+FVRFC =<vrfc>	<p>Response <b>OK</b></p> <p>Parameter</p> <table><tr><td>&lt;vrfc&gt;</td><td>0</td><td>disable mismatch checking.</td></tr><tr><td></td><td><u>2</u></td><td>enable mismatch checking, with resolution conversion of 1-D data in the DCE, and an implied AT+FK command executed on 2-D mismatch detection</td></tr></table>	<vrfc>	0	disable mismatch checking.		<u>2</u>	enable mismatch checking, with resolution conversion of 1-D data in the DCE, and an implied AT+FK command executed on 2-D mismatch detection
<vrfc>	0	disable mismatch checking.					
	<u>2</u>	enable mismatch checking, with resolution conversion of 1-D data in the DCE, and an implied AT+FK command executed on 2-D mismatch detection					
Reference EIA PN-2388	<p>Note Used for Fax class 2 only</p>						

The following AT commands are dummy commands. Invoking these commands will not cause ERROR result codes, but these commands have no functionality.

AT+FAA	Auto Answer mode
AT+FECD	Error Correction Mode control
AT+FLNFC	Page Length format conversion
AT+FLPL	Indicate document available for polling
AT+FMINS	Minimum Phase C speed
AT+FRBC	Phase C data receive byte count
AT+FREL	Phase C received EOL alignment
AT+FSPL	Enable polling
AT+FTBC	Phase C data transmit byte count
AT+FWDFC	Page width format conversion

## 4 AT Commands originating from GSM 07.07

These AT Commands are according to ETSI (European Telecommunications Standards Institute) GSM 07.07 document.

### 4.1 AT+CACM Accumulated call meter (ACM) reset or query

Test command AT+CACM=?	Response <b>OK</b> Parameter
Read command AT+CACM?	Response TA returns the current ACM value. <b>+CACM: &lt;acm&gt; OK</b> If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>  Parameter <b>&lt;acm&gt;</b> string type; three bytes of the current ACM value in hexadecimal format (e.g. "00001E" indicates decimal value 30) 000000 – FFFFFFFF
Write command AT+CACM= [<passwd>]	Parameter <b>&lt;passwd&gt;</b> string type: <b>SIM PIN2</b>  Response TA resets the Advice of Charge related to the accumulated call meter (ACM) value in SIM file EF(ACM). ACM contains the total number of home units both for the current and preceding calls.  <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>
Reference GSM 07.07	

## 4.2 AT+CALA Set alarm time

Test command AT+CALA=?	<p>Test command returns supported array index values &lt;n&gt;, alarm types &lt;type&gt;, and maximum length of the text &lt;tlength&gt; to be output.</p> <p>Response</p> <p>+CALA: (list of supported &lt;n&gt;s), (list of supported &lt;type&gt;s), (range of supported &lt;tlength&gt;) OK</p> <p>If error is related to ME functionality:</p> <p>+CME ERROR: &lt;err&gt;</p> <p>Parameter</p> <p>See write command</p>
Read command AT+CALA?	<p>Read command returns the list of current active alarm settings in the ME.</p> <p>Response</p> <p>+CALA: &lt;time&gt;[,&lt;n&gt;[,&lt;type&gt;[,&lt;text&gt;]]]</p> <p>If error is related to ME functionality:</p> <p>+CME ERROR: &lt;err&gt;</p> <p>Parameter</p> <p>See write command</p>
Write command AT+CALA=<time>[,<n>[,<type>[,<text>]]]	<p>The write command sets an alarm time in the ME. When the alarm is timed out and executed the ME returns an Unsolicited Result Code (URC). The alarm call can adopt two functions, depending on whether or not you switch the GSM engine off after setting the alarm:</p> <p>Reminder call: You can use the alarm function as a wake-up or reminder call. For this purpose, set the alarm as described below and do <u>not</u> switch off or power down the ME. When executed the call comes as an Unsolicited Result Code. Applies to MC35 and MC35 Terminal.</p> <p>Alarm mode: You can use the alarm call to restart the ME when powered down. For this purpose, set the alarm as described below. Then power down the ME by entering the AT^SMSO command (pg. 202). When the alarm time is reached, the ME will wake up to Alarm mode. To prevent the ME from unintentionally logging into the GSM network, Alarm mode provides restricted operation. Upon wake-up, the ME indicates an Unsolicited Result Code which reads: ^SYSSTART ALARM MODE. A limited number of AT commands is available during Alarm mode: AT+CCLK, AT+CALA, AT^SBC, AT^SCTM, AT^SMSO. The ME remains deregistered from the GSM network. If you want the ME to return to full operation (normal operating mode) it is necessary to drive the ignition line (IGT pin of ZIF interface) to ground. If your application is battery powered note that charging cannot be started while ME is in Alarm mode. For details please refer to the "Hardware Interface Description" supplied with your GSM engine. Applies to MC35 module only. MC35 Terminal does not support the Alarm mode.</p> <p>Response</p> <p>OK</p> <p>If setting fails:</p> <p>+CME ERROR: &lt;err&gt; Refer to Chapter 9.1.1, pg. 229, for &lt;err&gt; values.</p>



	<p>Parameter</p> <p><b>&lt;time&gt;</b> string type value; format is "yy/MM/dd,hh:mm:ss", where characters indicate year (two last digits), month, day, hour, minutes. E.g. 6<sup>th</sup> of May 2001, 22:10:00 hours equals to "01/05/06,22:10:00" (see also +CCLK). Note: if &lt;time&gt; equals current date and time or is to an earlier date, TA returns +CME ERROR: &lt;21&gt;.</p> <p><b>&lt;n&gt;</b> integer type value indicating the array index of the alarm. Index starts with 0. If only this value is returned by the test command, it is default and indicates that only one alarm time is possible; however, if a second alarm time is set, the previous alarm is deleted.</p> <p><b>&lt;type&gt;</b> integer type value indicating the type of the alarm  <b>0</b> Alarm indication: text message via serial interface</p> <p><b>&lt;text&gt;</b> string type value indicating the text to be displayed when alarm time is reached; maximum length is &lt;tlength&gt;. After first connection to power supply &lt;text&gt; is undefined.  Note: &lt;text&gt; will be stored to the non-volatile flash memory when the device enters the Power Down mode via AT^SMSO (pg. 202). Once saved, it will be available upon next power-up, until you overwrite it by typing another text. This eliminates the need to enter the full string when setting a fresh alarm and thus, saves memory due to the limited number of flash memory write cycles (e.g. 100.000).</p> <p><b>&lt;tlength&gt;</b> integer type value indicating the maximum length of &lt;text&gt;. The maximum length is 16.</p>
Unsolicited result code	<p>Indicates reminder call:  +CALA: &lt;text&gt;</p> <p>Indicates ME wake-up into Alarm mode:  ^SYSSTART ALARM MODE  +CALA: &lt;text&gt;</p> <p>If autobauding is active (AT+IPR=0) the URCs ^SYSSTART ALARM MODE and +CALA: &lt;text&gt; do not appear. Therefore, avoid using Alarm mode in conjunction with autobauding.</p>
Reference GSM 07.07	<p>Note</p> <ul style="list-style-type: none"> <li>• &lt;text&gt; should not contain characters which are coded differently in ASCII and GSM (e.g. Ä, Ö, Ü), see also Chapter 9.5.</li> <li>• In the event of power outage the GSM engine retains the current alarm setting, but the RTC will be reset to &lt;time&gt; = "00/01/01,00:00:00" and must be restored after resume of power (see also AT+CCLK, pg. 73. It is only in Power Down mode, that the RTC is kept powered from a dedicated voltage regulator, thus saving the current date and time.</li> <li>• When the GSM engine wakes up to Alarm mode, the system takes 1s to re-initialize the RTC and to update the current time. Therefore, it is recommended to wait 1s before using the AT+CCLK command (for example 1s after ^SYSSTART has been output).</li> <li>• Please consider when using multiplex mode (+CMUX, pg. 101): <ul style="list-style-type: none"> <li>- It is possible to use +CALA with every logical channel (1 – 3).</li> <li>- The total no. of possible alarm events is shared by all channels. If &lt;n&gt; = 0 is returned by the test command, this indicates that only one common alarm time is possible for all logical channels.</li> </ul> </li> </ul>

	<ul style="list-style-type: none"> <li>- For every channel a different <code>&lt;text&gt;</code> parameter can be stored.</li> <li>- <code>&lt;text&gt;</code> will be output on the same logical channel the alarm was entered. If not in multiplex mode, <code>&lt;text&gt;</code> will be output independent of the related channel.</li> <li>- The read command returns all pending alarms, independent on which logical channel an alarm was entered. It's up to the user to identify these alarms by specific <code>&lt;text&gt;</code>s.</li> </ul>
Examples	<p>Example 1:</p> <p>You may want to configure a reminder call for May 31, 2001, at 9.30h, including the message "Good Morning".</p> <p>Write command:</p> <pre>AT+CALA="01/05/31,09:30:00",0,0,"Good Morning"</pre> <p>OK</p> <p>Do not switch off the GSM engine. When the alarm is executed the ME returns the following URC:</p> <pre>+CALA: Good Morning</pre> <p>Example 2:</p> <p>To set a fresh alarm using the same message as in Example 1, simply enter date and time. <code>&lt;n&gt;</code>, <code>&lt;type&gt;</code>, <code>&lt;text&gt;</code>, <code>&lt;length&gt;</code> can be omitted:</p> <pre>AT+CALA="01/05/31,08:50:00"</pre> <p>OK</p> <p>When the alarm is executed the URC comes with the same message:</p> <pre>+CALA: Good Morning</pre> <p>Example 3:</p> <p>To configure the alarm mode, e.g. for May 20, 2001, at 8.30h, enter</p> <pre>AT+CALA="01/05/20,08:30:00"</pre> <p>OK</p> <p>Next, power down the ME:</p> <pre>AT^SMSO</pre> <pre>^SMSO: MS OFF</pre> <p>When the alarm is executed the ME wakes up to Alarm mode and displays a URC. If available, this line is followed by the individual <code>&lt;text&gt;</code> most recently saved. If no individual message was saved only the first line appears.</p> <pre>^SYSSTART ALARM MODE</pre> <pre>+CALA: Good Morning</pre>

Table 6: Summary of AT commands available in Alarm mode

AT command	Use
AT+CALA	Set alarm time
AT+CCLK	Set date and time of RTC
AT^SBC	In Alarm mode, you can only query the present current consumption and check whether or not a charger is connected. The battery capacity is returned as 0, regardless of the actual voltage (since the values measured directly on the cell are not delivered to the module).
AT^SCTM	Query temperature of GSM engine
AT^SMSO	Power down GSM engine

### 4.3 AT+CMM Accumulated call meter maximum (ACMmax) set or query

Test command AT+CMM=?	Response OK Parameter
Read command AT+CMM?	Response TA returns the current ACMmax value. <b>+CMM: &lt;acmmax&gt; OK</b> If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b> Parameter See write command
Write command AT+CMM=[<acmax>,<passwd>]	Response TA sets the Advice of Charge related to the accumulated call meter maximum value in SIM file EF (ACMmax). ACMmax contains the maximum number of home units allowed to be consumed by the subscriber. <b>OK</b> If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>  Parameter <b>&lt;acmmax&gt;</b> string type; three bytes of the max. ACM value in hexadecimal format (e.g. "00001E" indicates decimal value 30) 000000 disable ACMmax feature 000001-FFFFFF <b>&lt;passwd&gt;</b> string type SIM PIN2
Reference GSM 07.07	Note

#### 4.4 AT+CAOC Advice of Charge information

Test command AT+CAOC=?	<p>Response</p> <p><b>+CAOC:</b> (list of supported <b>&lt;mode&gt;s</b>) <b>OK</b></p> <p>Parameter</p> <p>See write command</p>
Read command AT+CAOC?	<p>Response</p> <p><b>+CAOC:</b> <b>&lt;mode&gt;</b> <b>OK</b></p> <p>Parameter</p> <p>See write command</p>
Write command AT+CAOC=<mode>	<p>Response</p> <p>TA sets the Advice of Charge supplementary service function mode.</p> <p>If error is related to ME functionality:</p> <p><b>+CME ERROR:</b> <b>&lt;err&gt;</b></p> <p>If <b>&lt;mode&gt;=0</b>, TA returns the current call meter value</p> <p><b>OK</b></p> <p>Parameter</p> <p><b>&lt;mode&gt;</b> 0 query CCM value</p> <p><b>&lt;ccm&gt;</b> string type; three bytes of the current CCM value in hexadecimal format (e.g. "00001E" indicates decimal value 30); bytes are similarly coded as ACMmax value in the SIM 000000-FFFFFF</p>
Execute command AT+CAOC	<p>Response</p> <p>TA returns the current call meter value</p> <p>If error is related to ME functionality:</p> <p><b>+CME ERROR:</b> <b>&lt;err&gt;</b></p> <p>If <b>&lt;mode&gt;=0</b>, TA returns the current call meter value</p> <p><b>+CAOC:</b> <b>&lt;ccm&gt;</b> <b>OK</b></p> <p>Parameter</p> <p>See write command</p>
Reference GSM 07.07	Note

#### 4.5 AT+CBST Select bearer service type

Test command AT+CBST=?	Response +CBST: (list of supported <speed>s),(list of supported <name>s),(list of supported <ce>s) OK Parameter See write command																																	
Read command AT+CBST?	Response +CBST: <speed>,<name>,<ce> OK Parameter See write command																																	
Write command AT+CBST=<speed>[,<name>[,<ce>]]	Response TA selects the bearer service <name>, the data rate <speed> and the connection element <ce> to be used when data calls are originated. The settings also apply to mobile terminated data calls, especially when single numbering scheme calls or calls from analog devices are received (see also Chapter 4.45). OK  Parameter <table><tr><td>&lt;speed&gt;</td><td>0</td><td>auto bauding</td></tr><tr><td></td><td>4</td><td>2400 bps( V.22bis)</td></tr><tr><td></td><td>6</td><td>4800 bps( V.32)</td></tr><tr><td></td><td>7</td><td>9600 bps(V.32)</td></tr><tr><td></td><td>14</td><td>14400 bps (V.34)</td></tr><tr><td></td><td>68</td><td>2400 bps (V.110)</td></tr><tr><td></td><td>70</td><td>4800 bps (V.110)</td></tr><tr><td></td><td>71</td><td>9600 bps (V.110)</td></tr><tr><td></td><td>75</td><td>14400 bps (V.110)</td></tr></table> <table><tr><td>&lt;name&gt;</td><td>0</td><td>asynchronous modem</td></tr><tr><td>&lt;ce&gt;</td><td>1</td><td>non-transparent</td></tr></table> Transparent mode is not supported.	<speed>	0	auto bauding		4	2400 bps( V.22bis)		6	4800 bps( V.32)		7	9600 bps(V.32)		14	14400 bps (V.34)		68	2400 bps (V.110)		70	4800 bps (V.110)		71	9600 bps (V.110)		75	14400 bps (V.110)	<name>	0	asynchronous modem	<ce>	1	non-transparent
<speed>	0	auto bauding																																
	4	2400 bps( V.22bis)																																
	6	4800 bps( V.32)																																
	7	9600 bps(V.32)																																
	14	14400 bps (V.34)																																
	68	2400 bps (V.110)																																
	70	4800 bps (V.110)																																
	71	9600 bps (V.110)																																
	75	14400 bps (V.110)																																
<name>	0	asynchronous modem																																
<ce>	1	non-transparent																																
Reference GSM 07.07	Note <ul style="list-style-type: none"><li>• GSM 02.02[1]: List of allowed combinations of subparameters.</li><li>• The PLMN influences the second air interface (to the terminator), therefore another mode may be established by the network.</li></ul>																																	

## 4.6 AT+CCFC Call forwarding number and conditions control

Test command AT+CCFC=?	<p>Response</p> <p>+CCFC: (list/range of supported &lt;reas&gt;s) OK</p> <p>Parameter</p> <p>See execute command</p>
Write command AT+CCFC=<reas>, <mode>[,<number> [,<type>[,<class> [,<time>]]]]	<p>Response</p> <p>TA controls the call forwarding supplementary service. Registration, erasure, activation, deactivation and status query are supported.</p> <p>If &lt;mode&gt; ≠ 2 and command successful: <b>OK</b></p> <p>If &lt;mode&gt; = 2, &lt;reas&gt; ≠ 2 and command successful: +CCFC: &lt;status&gt;, &lt;class1&gt;[, &lt;number&gt;, &lt;type&gt;] [&lt;CR&gt;&lt;LF&gt;+CCFC: ....] OK</p> <p>If &lt;mode&gt; = 2, &lt;reas&gt; = 2 and command successful: +CCFC: &lt;status&gt;, &lt;class1&gt;[, &lt;number&gt;, &lt;type&gt; [, &lt;time&gt;]] [&lt;CR&gt;&lt;LF&gt;+CCFC: ....] OK</p> <p>If error is related to ME functionality: +CME ERROR: &lt;err&gt;</p> <p>Parameter</p> <p>&lt;reas&gt;    0 unconditional           1 mobile busy           2 no reply           3 not reachable           4 all call forwarding (includes reasons 0, 1, 2 and 3)           5 all conditional call forwarding (includes reasons 1, 2 and 3)</p> <p>&lt;mode&gt;    0 disable call forwarding           1 enable call forwarding           2 query status of call forwarding           3 register &lt;number&gt; and activate call forwarding           4 erase &lt;number&gt; and deactivate call forwarding</p> <p>&lt;number&gt;    string type phone number of forwarding address in format specified by &lt;type&gt;.               If you select &lt;mode&gt; = 3, the phone &lt;number&gt; will be registered in the network. This allows you to disable / enable CF to the same destination without the need to enter the phone number once again. Depending on the services offered by the provider the registration may be mandatory before CF can be used. The number remains registered in the network until you register another number or erase it using &lt;mode&gt; = 4.</p> <p>&lt;type&gt;    type of address in integer format; default 145 when dialling string includes international access code character "+", otherwise 129</p>

	<p><b>&lt;class&gt;</b> integer or sum of integers each representing a <b>&lt;class&gt;</b> of information:</p> <table> <tr><td>1</td><td>voice</td></tr> <tr><td>2</td><td>data</td></tr> <tr><td>4</td><td>fax</td></tr> <tr><td>8</td><td>short message service</td></tr> <tr><td>16</td><td>data circuit sync</td></tr> <tr><td>32</td><td>data circuit async</td></tr> <tr><td>64</td><td>dedicated packet access</td></tr> <tr><td>128</td><td>dedicated PAD access</td></tr> <tr><td>x</td><td>combination of some of the above classes.</td></tr> </table> <p>For example, the default setting <u>7</u> represents the sum of the integers 1, 2 and 4 (CF for voice, data and fax). The value 255 covers all classes. If the <b>&lt;class&gt;</b> parameter is omitted, the default value <u>7</u> is used.</p> <p><b>&lt;time&gt;</b> time to wait before call is forwarded, rounded to a multiple of 5 sec.. 1...<u>20</u>..30 (only for <b>&lt;reas&gt;</b>=no reply)</p> <p><b>&lt;status&gt;</b> 0 not active 1 active</p>	1	voice	2	data	4	fax	8	short message service	16	data circuit sync	32	data circuit async	64	dedicated packet access	128	dedicated PAD access	x	combination of some of the above classes.
1	voice																		
2	data																		
4	fax																		
8	short message service																		
16	data circuit sync																		
32	data circuit async																		
64	dedicated packet access																		
128	dedicated PAD access																		
x	combination of some of the above classes.																		
Reference GSM 07.07, GSM 02.04, GSM 02.82	<p>Note</p> <ul style="list-style-type: none"> <li>• Please note that you can register, disable, enable and erase <b>&lt;reas&gt;</b> 4 and 5 as described above. However, it is not possible to query the status of <b>&lt;reas&gt;</b> 4 and 5 with AT+CCFC. Instead, you may use the ATD command followed by *# codes to check the status of these two reasons. See Chapter 9.4 for a complete list of *# GSM codes. See also examples below.</li> <li>• The AT+CCFC command offers a broad range of call forwarding options according to the GSM specifications. However, when you attempt to set a call forwarding option which is not provisioned or not yet subscribed to, the setting will not take effect regardless of the response returned. The responses in these cases vary with the network (for example "OK", "Operation not allowed", "Operation not supported" etc.). To make sure check the call forwarding status with <b>&lt;mode&gt;</b>=2.</li> <li>• <b>&lt;class&gt;</b> 2 (data) comprises all those <b>&lt;class&gt;</b> values between 16 and 128, that are supported both by the network and the MS. This means, a setting made for <b>&lt;class&gt;</b> 2 applies to all remaining data classes (if supported). In addition, you can assign a different setting to a specific class. For example, you can activate Call Forwarding for all data classes, but deactivate it for a specific data class.</li> <li>• The command has been implemented with the full set of <b>&lt;class&gt;</b> parameters according to GSM 07.07. For actual applicability of SS "call forwarding" to a specific service or service group (a specific <b>&lt;class&gt;</b> value) please consult table A.1 of GSM 02.04.</li> </ul>																		

#### 4.6.1 Examples: Call forwarding

Please note that when you configure or query call forwarding without specifying any classes, the settings will refer to classes 1, 2 and 4 only (=default). The handling of classes is equivalent to AT+CLCK (Chapter 4.21.3).

Example 1	<p>To register the destination number for unconditional call forwarding (CFU):</p> <pre>at+ccfc=0,3,"+493012345678",145</pre> <p>OK</p>
-----------	---

	Remember that call forwarding will be activated for voice, data and fax (default classes) when you register the destination number.
Example 2	<p>To query the status of CFU without specifying &lt;class&gt;:</p> <pre>at+ccfc=0,2 +CCFC: 1,1,"+493012345678",145 +CCFC: 1,2,"+493012345678",145 +CCFC: 1,4,"+493012345678",145 OK</pre>
Example 3	<p>To deactivate CFU without specifying &lt;class&gt;:</p> <pre>at+ccfc=0,0 OK</pre> <p>To check whether CFU was successfully deactivated (note that the destination number remains registered in the network when you disable CFU):</p> <pre>at+ccfc=0,2 +CCFC: 0,1,"+493012345678",145 +CCFC: 0,2,"+493012345678",145 +CCFC: 0,4,"+493012345678",145 OK</pre>
Example 4	<p>To erase the registered CFU destination number:</p> <pre>at+ccfc=0,4 OK</pre> <p>Now, when you check the status, no destination number will be indicated:</p> <pre>at+ccfc=0,2 +CCFC: 0,1 +CCFC: 0,2 +CCFC: 0,4</pre>
Example 5	<p>To query the status of CFU for all classes:</p> <pre>at+ccfc=0,2,,,255 +CCFC: 0,1 +CCFC: 0,2 +CCFC: 0,4 +CCFC: 0,8 +CCFC: 0,16 +CCFC: 0,32 +CCFC: 0,64 +CCFC: 0,128 OK</pre>
Example 6	<p>&lt;reas&gt;=4 or 5 cannot be used to query the status of all call forwarding reasons (see also notes above):</p> <pre>at+ccfc=4,2 +CME error: operation not supported  at+ccfc=5,2 +CME error: operation not supported</pre>



#### 4.7 AT+CCLK Real Time Clock

Test command AT+CCLK=?	Response <b>OK</b>
Read command AT+CCLK?	<p>Response <b>+CCLK: &lt;time&gt;</b> <b>OK/ERROR/+CME ERROR</b></p> <p>Parameter: <b>&lt;time&gt;</b>: string type value; format is "yy/MM/dd,hh:mm:ss", where characters indicate year (two last digits), month, day, hour, minutes, seconds; e.g. 6<sup>th</sup> of May 2001, 22:10:00 hours equals to "01/05/06,22:10:00"</p>
Write command AT+CCLK=<time>	<p>Response <b>OK/ERROR/+CME ERROR</b></p> <p>Parameter: <b>&lt;time&gt;</b> see read command</p>
Reference GSM 07.07	<p>Note</p> <ul style="list-style-type: none"> <li>• <b>&lt;time&gt;</b> is retained if the device enters the Power Down mode via AT^SMSO (pg. 203).</li> <li>• <b>&lt;time&gt;</b> is lost if power is totally disconnected and if no separate battery back-up for the clock is provided via the ZIF cable. In this case, the clock starts with <b>&lt;time&gt;</b> = "00/01/01,00:00:00" upon next power-up.</li> <li>• See AT+CALA, pg. 64.</li> <li>• When the GSM engine wakes up to Alarm mode, the system takes 1s to re-initialize the RTC and to update the current time. Therefore, it is recommended to wait 1s before using the AT+CCLK command (for example 1s after ^SYSSTART has been output).</li> </ul>

## 4.8 AT+CCUG: Closed User Group

Test command AT+CCUG=?	<p>The Test command returns the supported parameters.</p> <p>Response</p> <p><b>+CCUG:</b> (list of supported <b>&lt;n&gt;s</b>),(list of supported <b>&lt;index&gt;</b>),(list of supported <b>&lt;info&gt;</b>) <b>OK</b></p>																			
Read command AT+CCUG?	<p>Explicit CUG invocation means that at each call setup, CUG information is added to the called number.</p> <p>The Read command returns if the Explicit CUG invocation is activated, which CUG index is chosen, and if Preferential Group or Outgoing Access is suppressed.</p> <p>Response</p> <p><b>+CCUG:</b> <b>&lt;n&gt;</b>, <b>&lt;index&gt;</b>,<b>&lt;info&gt;</b> <b>OK</b></p>																			
Write command AT+CCUG= [,<n>[,<index>[,<info>]]	<p>The write command serves to activate or deactivate the explicit CUG invocation, to set the desired index, and to specify if Preferential Group or Outgoing Access shall be suppressed.</p> <p>Parameter</p> <table><tr><td rowspan="2"><b>&lt;n&gt;</b></td><td><u>0</u></td><td>Deactivate explicit CUG invocation</td></tr><tr><td>1</td><td>Activate explicit CUG invocation</td></tr><tr><td rowspan="2"><b>&lt;index&gt;</b></td><td>0...9</td><td>CUG index</td></tr><tr><td><u>10</u></td><td>No index (preferred CUG taken from subscriber data)</td></tr><tr><td rowspan="4"><b>&lt;info&gt;</b></td><td><u>0</u></td><td>No information</td></tr><tr><td>1</td><td>Suppress Outgoing Access</td></tr><tr><td>2</td><td>Suppress preferential CUG</td></tr><tr><td>3</td><td>Suppress preferential CUG and Outgoing Access.</td></tr></table> <p>Response</p> <p><b>OK/ERROR/+CME ERROR</b></p>	<b>&lt;n&gt;</b>	<u>0</u>	Deactivate explicit CUG invocation	1	Activate explicit CUG invocation	<b>&lt;index&gt;</b>	0...9	CUG index	<u>10</u>	No index (preferred CUG taken from subscriber data)	<b>&lt;info&gt;</b>	<u>0</u>	No information	1	Suppress Outgoing Access	2	Suppress preferential CUG	3	Suppress preferential CUG and Outgoing Access.
<b>&lt;n&gt;</b>	<u>0</u>		Deactivate explicit CUG invocation																	
	1	Activate explicit CUG invocation																		
<b>&lt;index&gt;</b>	0...9	CUG index																		
	<u>10</u>	No index (preferred CUG taken from subscriber data)																		
<b>&lt;info&gt;</b>	<u>0</u>	No information																		
	1	Suppress Outgoing Access																		
	2	Suppress preferential CUG																		
	3	Suppress preferential CUG and Outgoing Access.																		
Reference GSM 02.85 Siemens	Note																			

## 4.9 AT+CCWA Call waiting

Test command AT+CCWA=?	<p>Response</p> <p><b>+CCWA:</b> (list of supported &lt;n&gt;s) <b>OK/ERROR/+CME ERROR</b></p> <p>Parameter</p> <p>See write command</p>																																						
Read command AT+CCWA?	<p>Response</p> <p><b>+CCWA:</b> &lt;n&gt; <b>OK/ERROR/+CME ERROR</b></p> <p>Parameter</p> <p>See write command</p>																																						
Write command AT+CCWA= [<n>],[<mode> [,<class>]]	<p>This command controls the Call Waiting supplementary service according to GSM 02.83. Activation, deactivation and status query are supported.</p> <p>Response</p> <p>If &lt;mode&gt;=2 and command is successful</p> <p><b>+CCWA:</b> &lt;status&gt;, &lt;class1&gt;&lt;CR&gt;&lt;LF&gt; <b>+CCWA:</b> &lt;status&gt;, &lt;class2&gt;&lt;CR&gt;&lt;LF&gt;... <b>OK/ERROR/+CME ERROR</b></p> <p>Parameters</p> <table> <tr> <td>&lt;n&gt;</td><td>Sets/shows the presentation mode of URC in the TA</td></tr> <tr> <td>0</td><td>disable</td></tr> <tr> <td>1</td><td>enable</td></tr> </table> <table> <tr> <td>&lt;mode&gt;</td><td>When &lt;mode&gt; is not given, network is not interrogated.</td></tr> <tr> <td>0</td><td>disable</td></tr> <tr> <td>1</td><td>enable</td></tr> <tr> <td>2</td><td>query status</td></tr> </table> <table> <tr> <td>&lt;class&gt;</td><td>Sum of integers each representing a class of information (default 7). Specifies the class of the active call.</td></tr> <tr> <td>1</td><td>voice</td></tr> <tr> <td>2</td><td>data</td></tr> <tr> <td>4</td><td>fax</td></tr> <tr> <td>7</td><td>voice, data and fax (1+2+4)</td></tr> <tr> <td>8</td><td>SMS</td></tr> <tr> <td>16</td><td>data circuit sync</td></tr> <tr> <td>32</td><td>data circuit async</td></tr> <tr> <td>64</td><td>dedicated packet access</td></tr> <tr> <td>128</td><td>dedicated PAD access</td></tr> </table> <table> <tr> <td>&lt;status&gt;</td><td>0 not active</td></tr> <tr> <td>1</td><td>active</td></tr> </table>	<n>	Sets/shows the presentation mode of URC in the TA	0	disable	1	enable	<mode>	When <mode> is not given, network is not interrogated.	0	disable	1	enable	2	query status	<class>	Sum of integers each representing a class of information (default 7). Specifies the class of the active call.	1	voice	2	data	4	fax	7	voice, data and fax (1+2+4)	8	SMS	16	data circuit sync	32	data circuit async	64	dedicated packet access	128	dedicated PAD access	<status>	0 not active	1	active
<n>	Sets/shows the presentation mode of URC in the TA																																						
0	disable																																						
1	enable																																						
<mode>	When <mode> is not given, network is not interrogated.																																						
0	disable																																						
1	enable																																						
2	query status																																						
<class>	Sum of integers each representing a class of information (default 7). Specifies the class of the active call.																																						
1	voice																																						
2	data																																						
4	fax																																						
7	voice, data and fax (1+2+4)																																						
8	SMS																																						
16	data circuit sync																																						
32	data circuit async																																						
64	dedicated packet access																																						
128	dedicated PAD access																																						
<status>	0 not active																																						
1	active																																						
Unsolicited Result Code	<p>If &lt;n&gt;=1 and the Call Waiting service is enabled the following URC indicates a waiting call to the TE:</p> <p><b>+CCWA:</b> &lt;number&gt;,&lt;type&gt;,&lt;class&gt;,&lt;CLI validity&gt;</p>																																						

	<p>Parameters of the URC</p> <p><b>&lt;number&gt;</b> String type phone number of calling address in format specified by &lt;type&gt;</p> <p><b>&lt;type&gt;</b> Type of address octet in integer format (refer to GSM 04.08 subclause 10.5.4.7)</p> <p><b>&lt;class&gt;</b> Indicates the class of the waiting call. See Write command for possible values.</p> <p><b>&lt;CLI validity&gt;</b></p> <table> <tr> <td>0</td><td>CLI valid</td></tr> <tr> <td>1</td><td>CLI has been withheld</td></tr> <tr> <td>2</td><td>CLI is not available</td></tr> </table>	0	CLI valid	1	CLI has been withheld	2	CLI is not available
0	CLI valid						
1	CLI has been withheld						
2	CLI is not available						
<p>Reference</p> <p>GSM 07.07, GSM 02.04, GSM 02.83</p>	<p>Note</p> <ul style="list-style-type: none"> <li>• With the AT+CHLD command, it is possible to establish a multiparty call or to set the active voice call on hold and then accept a waiting voice call (not possible with fax and data call). See also AT+CHLD in Chapter 4.16.</li> <li>• The AT+CCWA command offers a broad range of options according to the GSM specifications. However, when you attempt to set a &lt;class&gt; which is not provisioned or not supported for Call Waiting, the setting will not take effect regardless of the response returned. The responses in these cases vary with the network (for example “OK”, “Operation not allowed”, “Operation not supported” etc.). To make sure check the current Call Waiting settings with &lt;mode&gt;=2.</li> <li>• &lt;class&gt; 2 (data) comprises all those &lt;class&gt; values between 16 and 128, that are supported both by the network and the MS. This means, a setting made for &lt;class&gt; 2 applies to all remaining data classes (if supported). In addition, you can assign a different setting to a specific class. For example, you can activate Call Waiting for all data classes, but deactivate it for a specific data class.</li> <li>• The AT+CCWA command has been implemented with the full set of &lt;class&gt; parameters according to GSM 07.07. For actual applicability of SS “call waiting” to a specific service or service group (a specific &lt;class&gt; value) please consult table A.1 of GSM 02.04</li> </ul>						

**4.10 AT+CEER Extended error report**

Test command AT+CEER=?	Response <b>OK</b>						
Execute command AT+CEER	TA returns an extended error report of the reason for the last call release and location. Response <b>+CEER: &lt;location ID&gt;, &lt;reason&gt; , &lt;ss_release&gt;OK</b> Parameter <table><tr><td><b>&lt;location ID&gt;</b></td><td>Location ID as number code (see subclause 9.1.6)</td></tr><tr><td><b>&lt;reason&gt;</b></td><td>Reason for last call release as number code (see subclause 9.1.6)</td></tr><tr><td><b>&lt;ss_release&gt;</b></td><td>Release cause for last Supplementary Service Call (see subclause 9.1.14)</td></tr></table>	<b>&lt;location ID&gt;</b>	Location ID as number code (see subclause 9.1.6)	<b>&lt;reason&gt;</b>	Reason for last call release as number code (see subclause 9.1.6)	<b>&lt;ss_release&gt;</b>	Release cause for last Supplementary Service Call (see subclause 9.1.14)
<b>&lt;location ID&gt;</b>	Location ID as number code (see subclause 9.1.6)						
<b>&lt;reason&gt;</b>	Reason for last call release as number code (see subclause 9.1.6)						
<b>&lt;ss_release&gt;</b>	Release cause for last Supplementary Service Call (see subclause 9.1.14)						
Reference GSM 07.07	Note <ul style="list-style-type: none"><li>• AT+CEER is not available for data calls, please use ATS18=1.</li><li>• Default output in the case of a no-error-situation is <b>+CEER: 0,0,0</b>.</li></ul>						

#### 4.11 AT+CFUN Set phone functionality

Test command AT+CFUN=?	<p>Response</p> <p>+CFUN: (list of supported &lt;fun&gt;s), (list of supported &lt;rst&gt;s)</p> <p>If error is related to ME functionality:</p> <p>+CME ERROR: &lt;err&gt;</p> <p>Parameter</p> <p>See below</p>			
Read command AT+CFUN?	<p>Response</p> <p>+CFUN: &lt;fun&gt;</p> <p>If error is related to ME functionality:</p> <p>+CME ERROR: &lt;err&gt;</p> <p>Parameter</p> <p>See below</p>			
Write command AT+CFUN=[<fun> [,<rst>]]	<p>The write command can be used to reset the ME, to choose one of the SLEEP modes or to return to full functionality.</p> <p>Intended for power saving, SLEEP mode reduces the functionality level of the ME to a minimum and, thus, minimizes the current consumption. SLEEP mode falls in two categories: NON-CYCLIC SLEEP mode &lt;fun&gt;=0 and CYCLIC SLEEP modes, selectable as &lt;fun&gt;= 5 or 6.</p> <p>NON-CYCLIC SLEEP mode permanently blocks the serial interface. The CYCLIC SLEEP mode, however, is a dynamic process which alternatingly enables and disables the serial interface. The major benefit of CYCLIC SLEEP mode is that the serial interface remains accessible and that packet-switched calls can be done without exiting the SLEEP mode. Also, NON-CYCLIC and CYCLIC SLEEP mode provide different ways to wake up the ME. For details see Chapter 4.11.1.</p> <p>For CYCLIC SLEEP mode (&lt;fun&gt;=5 or 6) the application must be configured to use hardware flow control, set with AT\Q3. This is necessary since the CTS signal is set/reset every time when the ME listens to a paging message from the base station. This is the way how the module indicates to the application when the UART is active. For detailed information on the timing of the CTS signal refer to [1].</p> <p>Response</p> <p><b>OK</b></p> <p>If error is related to ME functionality:</p> <p>+CME ERROR: &lt;err&gt;</p> <p>Parameter</p> <table><tr><td>&lt;fun&gt;</td><td>0</td><td>NON-CYCLIC SLEEP mode: In this mode, the AT interface is not accessible. Consequently, once you have set &lt;fun&gt; level 0, <b>do not send</b> further characters. Otherwise these characters remain in the input buffer and may delay the output of an unsolicited result code. The first wake-up event stops power saving and takes the ME back to full functionality level &lt;fun&gt;=1.</td></tr></table>	<fun>	0	NON-CYCLIC SLEEP mode: In this mode, the AT interface is not accessible. Consequently, once you have set <fun> level 0, <b>do not send</b> further characters. Otherwise these characters remain in the input buffer and may delay the output of an unsolicited result code. The first wake-up event stops power saving and takes the ME back to full functionality level <fun>=1.
<fun>	0	NON-CYCLIC SLEEP mode: In this mode, the AT interface is not accessible. Consequently, once you have set <fun> level 0, <b>do not send</b> further characters. Otherwise these characters remain in the input buffer and may delay the output of an unsolicited result code. The first wake-up event stops power saving and takes the ME back to full functionality level <fun>=1.		

	<p>1 Full functionality. If the ME is in one of the two CYCLIC SLEEP modes you can issue AT+CFUN=1 to stop power saving and return to full functionality. Keep in mind that, unlike the reset command described below, this action does not restart the ME but only changes the level of functionality. See parameter &lt;rst&gt; for details on the reset.</p> <p>5 CYCLIC SLEEP mode: In this mode, the serial interface is shortly enabled during paging. If characters are recognized on the serial interface, the ME stays active for 2 seconds after the last character was sent or received.</p> <p>6 CYCLIC SLEEP mode: In this mode, the serial interface is shortly enabled during paging. If characters are recognized on the serial interface, the ME stays active for 10 minutes after the last character was sent or received.</p> <p>&lt;rst&gt; 0 The &lt;rst&gt; parameter can only be used if the serial interface is enabled. Due to the command syntax, you need to enter &lt;fun&gt;, followed by &lt;rst&gt;, where &lt;fun&gt; is only a placeholder and has no effect. See examples below.</p> <p>1 ME resets and restarts to full functionality. After reset and restart, PIN 1 authentication is necessary (AT+CPIN). If autobauding is enabled it is recommended to wait 3 to 5 seconds before entering the first AT command. For details on autobauding refer to Chapter 2.45.1.</p>
Reference GSM 07.07	<p>Note</p> <ul style="list-style-type: none"> <li>• If SLEEP mode (&lt;fun&gt;=0, 5, or 6) is activated while a circuit-switched call is in progress, this call will immediately be terminated.</li> <li>• Please keep in mind <i>that power saving works only while the ME is registered to the GSM network</i>. If you attempt to activate one of the SLEEP modes while the ME is deregistered, the selected &lt;fun&gt; level will be set, but power saving does not take effect. Furthermore, in order to accept incoming calls, SMS or network related URCs in SLEEP mode the ME must be registered when it enters the SLEEP mode.</li> <li>• To check that power saving is on, you can query the status with AT+CFUN?, if you have chosen CYCLIC SLEEP mode. If available, you can take advantage of the status LED controlled by the SYNC pin (see Chapter 8.40 and [1]). The LED stops flashing once the module starts power saving.</li> <li>• In Multiplex mode, the CFUN profile is shared by all multiplexer channels.</li> </ul>
Example 1	<p>To check the level of functionality use the read command: AT+CFUN? +CFUN: 1 Default mode after ME was restarted.</p> <p>Remember that the AT interface is not accessible in NON-CYCLIC SLEEP mode. Consequently, the read command is only useful when the ME is set to full functionality or, when &lt;fun&gt; is set to 5 or 6.</p> <p>AT+CFUN? +CFUN: 5 CYCLIC SLEEP mode.</p>

Example 2	<p>To set the ME to NON-CYCLIC SLEEP mode enter</p> <pre>AT+CFUN=0 OK</pre> <p>When, for example, an SMS is being received and indicated by an unsolicited result code (URC), the ME wakes up to full operation.</p> <pre>+CMTI: "SM", 5</pre> <p>Note that the URC used in this example will appear only if CMTI=1,1 was configured before. See Chapters 5.10 and 9.1.4.</p> <p>After this, you may want to verify the operating status:</p> <pre>AT+CFUN? +CFUN: 1</pre> <p>Indicates that ME has entered full functionality mode.</p>
Example 3	<p>To stop CYCLIC SLEEP mode and return to full functionality:</p> <pre>AT+CFUN? +CFUN: 5 OK AT+CFUN=1 OK</pre> <p>Remember that this approach is not applicable to the NON-CYCLIC SLEEP mode (since the serial interface is disabled). The NON-CYCLIC SLEEP mode ends with the first wake-up event.</p>
Example 4	<p>To reset and restart the ME:</p> <pre>AT+CFUN=1, 1 or alternatively, AT+CFUN=0, 1 or 5, 1 or 6, 1 OK ^SYSSTART</pre> <p>The ^SYSSTART URC confirms that the ME has been rebooted.</p> <p>Note that ^SYSSTART appears only if AT+IPR≠0. If the ME is in autobaud mode, it is recommended to wait 3 to 5 seconds before entering the first AT command. Remember to enter the SIM PIN after restart.</p>



#### 4.11.1 Wake up the ME from SLEEP mode

A wake-up event is any event that switches off the SLEEP mode and causes the ME to return to full functionality. In short, it takes the ME back to AT+CFUN=1.

Definitions of the state transitions described in Table 7:

Yes = ME exits SLEEP mode.

No = ME does not exit SLEEP mode.

Table 7: Wake-up events in NON-CYCLIC and CYCLIC SLEEP mode

Event	From SLEEP mode AT+CFUN=0 to AT+CFUN=1	From SLEEP mode AT+CFUN=5 or 6 to AT+CFUN=1
Ignition line	No	No
/RTS0 (falling edge)	Yes	No
Unsolicited Result Code (URC)	Yes	Yes
Incoming voice or data call	Yes	Yes
Any AT command (incl. outgoing voice or data call, outgoing SMS)	Not possible (UART disabled)	No
Incoming SMS depending on mode selected by AT+CNMI:		
AT+CNMI=0,0 (= default, no indication upon receipt of SMS)	No	No
AT+CNMI=1,1 (= displays URC upon receipt of SMS)	Yes	Yes
GPRS data transfer	Not possible (UART disabled)	No
RTC alarm	Yes	Yes
AT+CFUN=1	Not possible (UART disabled)	Yes

Recommendation:

- In NON-CYCLIC SLEEP mode, you can set an RTC alarm to wake up the ME and return to full functionality. This is a useful approach because, in this mode, the AT interface is not accessible.

#### 4.12 AT+CGMI Request manufacturer identification

Test command AT+CGMI=?	Response <b>OK</b>
Execute command AT+CGMI	Response TA returns manufacturer identification text. <b>SIEMENS</b> <b>OK</b>
Reference GSM 07.07	Note See also "AT+GMI Request manufacturer identification".

#### 4.13 AT+CGMM Request model identification

Test command AT+CGMM=?	Response <b>OK</b>
Execute command AT+CGMM	Response TA returns product model identification text. <b>MC35</b> <b>OK</b>
Reference GSM 07.07	Note See also "AT+GMM Request TA model identification".

#### 4.14 AT+CGMR Request revision identification of software status

Test command AT+CGMR=?	Response <b>OK</b>
Execute command AT+CGMR	Response TA returns product firmware version identification text. <b>REVISION xx.yy</b> <b>OK</b>  xx.yy                      Version xx and variant yy of software release
Reference GSM 07.07	Note See also AT+GMR Request TA revision identification of software status

#### 4.15 AT+CGSN Request product serial number identification (IMEI) identical to GSN

Test command AT+CGSN=?	Response <b>OK</b>
Execute command AT+CGSN	<p>Response</p> <p>TA returns identification text for determination of the individual ME. <b>&lt;sn&gt; OK</b></p> <p>Parameter</p> <p><b>&lt;sn&gt;</b> IMEI of the telephone (International Mobile station Equipment Identity)</p>
Reference GSM 07.07	Note See also "AT+GSN Request TA serial number identification".

#### 4.16 AT+CHLD Call hold and multiparty

Test command AT+CHLD=?	Response <b>+CHLD:</b> (list of supported <n>s)  <b>OK</b>																		
Execute command AT+CHLD=[<n>]	Response TA controls the supplementary services Call Hold, MultiParty and Explicit Call Transfer. Calls can be put on hold, recovered, released, added to conversation and transferred.  <b>OK</b> If error is related to ME functionality: <b>+CME ERROR:</b> <err> Parameter <table><tr><td>&lt;n&gt;</td><td>0</td><td>Terminate all held calls; or set UDUB (User Determined User Busy) for a waiting call, i.e. reject the waiting call.</td></tr><tr><td></td><td>1</td><td>Terminate all active calls (if any) and accept the other call (waiting call or held call)</td></tr><tr><td></td><td>1X</td><td>Terminate the active call X (X= 1-7)</td></tr><tr><td></td><td>2</td><td>Place all active calls on hold (if any) and accept the other call (waiting call or held call) as the active call</td></tr><tr><td></td><td>2X</td><td>Place all active calls except call X (X= 1-7) on hold</td></tr><tr><td></td><td>3</td><td>Add the held call to the active calls</td></tr></table>	<n>	0	Terminate all held calls; or set UDUB (User Determined User Busy) for a waiting call, i.e. reject the waiting call.		1	Terminate all active calls (if any) and accept the other call (waiting call or held call)		1X	Terminate the active call X (X= 1-7)		2	Place all active calls on hold (if any) and accept the other call (waiting call or held call) as the active call		2X	Place all active calls except call X (X= 1-7) on hold		3	Add the held call to the active calls
<n>	0	Terminate all held calls; or set UDUB (User Determined User Busy) for a waiting call, i.e. reject the waiting call.																	
	1	Terminate all active calls (if any) and accept the other call (waiting call or held call)																	
	1X	Terminate the active call X (X= 1-7)																	
	2	Place all active calls on hold (if any) and accept the other call (waiting call or held call) as the active call																	
	2X	Place all active calls except call X (X= 1-7) on hold																	
	3	Add the held call to the active calls																	
Reference GSM 07.07	Note <ul style="list-style-type: none"><li>This supplementary service is only applicable to teleservice 11 (Speech telephony). It is neither possible to put a data or fax call on hold, nor to switch from a voice call to a waiting data or fax call. The classes of waiting calls can be easily distinguished if the URC +CCWA: &lt;number&gt;,&lt;type&gt;,&lt;class&gt;,,&lt;CLI validity&gt; is enabled. See AT+CCWA in Chapter 4.9.</li><li>The AT+CHLD command offers a broad range of options according to the GSM specifications. However, many of these options are dependent on the SIM card / service provider.</li><li>In conflicting situations, e.g. when a waiting call comes while there are already held calls, the above procedures apply to the waiting call only. For example, &lt;n&gt;=0 rejects the waiting call, but does not affect the held calls.</li></ul>																		

#### 4.17 AT+CHUP Hang up call

Test command AT+CHUP=?	Response <b>OK</b>
Execute command AT+CHUP	Cancels all active and held calls. Response <b>OK/ERROR</b>
Reference GSM 07.07	Note <b>AT+CHUP</b> implements the same behaviour as <b>ATH</b> (see Chapter 2.12).

#### 4.18 AT+CIMI Request international mobile subscriber identity

Test command AT+CIMI=?	Response <b>OK</b>
Execute command AT+CIMI	Response TA returns < IMSI> for identifying the individual SIM which is attached to ME. <b>&lt;IMSI&gt; OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b> Parameter <b>&lt;IMSI&gt;</b> International Mobile Subscriber Identity (string without quotes)
Reference GSM 07.07	Note

## 4.19 AT+CIND Indicator control

MC35 supports indicator event reporting for the following items: battery capacity, signal quality, service availability, generation of sound in the ME, indication of unread short messages, full SMS storage, call in progress and roaming activities.

There are two ways to display the status and event reports by indicators:

1. You can directly query the current status of each indicator, simply by using the Read command AT+CIND. The Read command returns the status no matter whether the indicator has been registered with the Write command AT+CIND=[<stat>[,<stat>[,...]]].
2. You can take advantage of Unsolicited Result Codes. These are the +CIEV URCs which the ME automatically sends to the application, whenever the value of the associated indicator changes. The presentation of these URCs depends on two settings:
  - a) The indicators must be registered with the Write command AT+CIND=[<stat>[,<stat>[,...]]]. By default, all of them are registered. Any URCs you do not need can easily be excluded if deregistered with <stat>=0.
  - b) The URC presentation mode must be enabled with AT+CMER (see Chapter 4.26).

Test command AT+CIND=?	<p>Response</p> <p><b>+CIND:</b> (&lt;descr&gt;,(list of supported &lt;ind&gt;s)) [,&lt;descr&gt;,(list of supported &lt;ind&gt;s)][,...]</p> <p>Parameters</p> <p><b>&lt;descr&gt;</b> values and their &lt;ind&gt; ranges.</p> <p>"battchg" Battery charge level (0-5), where (0-5) means 0, 20, 40, 60, 80 or 100 per cent of the the remaining battery capacity. If no battery is connected to the ME, then the value will be always equal to 5. See also Chapter 8.5.</p> <p>"signal" Signal quality (0-7 or 99 if not measurable). The indicated value is the bit error rate of the signal received. See also Chapter 4.46.</p> <p>"service" Service availability (0-1).</p> <p>"sounder" Sounder activity (0-1). The indicator provides information about tones generated in the ME. The value 1 means for example: Incoming call - ME is ringing. Waiting call - ME generates waiting call tone (if call waiting is enabled). Outgoing call - ME generates Call Progress tone. Outgoing call - ME generates BUSY tone. The value changes to 0, when the tone stops.</p> <p>"message" Unread short message(s) (0-1).</p> <p>"call" Call in progress (0-1). Voice und data calls only. The indicator changes its value as soon as a call has been established, for example when both interlocutors are connected or when the call ends.</p> <p>"roam" Roaming indicator (0-1).</p> <p>"smsfull" A short message memory storage in the MT has become full (1) or memory locations are available (0); i.e. the range is (0-1).</p> <p><b>&lt;ind&gt;</b> integer type value, in the range stated above for the corresponding &lt;descr&gt;.</p> <p>In the list above, all parameters are presented by the sequence used in the Test, Read and Write commands.</p>
---------------------------	---

Read command AT+CIND?	<p>Response</p> <p>TA returns the status of the ME indicators.</p> <p><b>+CIND: &lt;ind&gt;[,&lt;ind&gt;[,...]]</b></p> <p><b>OK</b></p> <p>If error is related to ME functionality</p> <p><b>+CME ERROR: &lt;err&gt;</b></p> <p>Parameter</p> <p>See Test command</p>												
Write command AT+CIND= [<stat>[,<stat> [,...]]]	<p>The Write command simply controls the registration / deregistration of indicators.</p> <table><tr><td>&lt;stat&gt;</td><td>0</td><td>Indicator is deregistered. The indicator cannot be presented as +CIEV URC, but can be directly queried with AT+CIND?.</td></tr><tr><td></td><td>1</td><td>Indicator is registered, indicator event report is allowed.</td></tr></table>	<stat>	0	Indicator is deregistered. The indicator cannot be presented as +CIEV URC, but can be directly queried with AT+CIND?.		1	Indicator is registered, indicator event report is allowed.						
<stat>	0	Indicator is deregistered. The indicator cannot be presented as +CIEV URC, but can be directly queried with AT+CIND?.											
	1	Indicator is registered, indicator event report is allowed.											
Reference GSM 07.07	Note												
Examples	<table><tr><td>at+cind? +CIND: 5,99,1,0,0,0,0,0 OK</td><td>The battery is either full or an external supply source is used. The bit error rate of the signal quality is not available (since there no call in progress), and the ME is registered to its home network.</td></tr><tr><td>at+cmer=2,0,0,2 OK +CIEV: message,0 +CIEV: battchg,5 +CIEV: signal,99 +CIEV: service,1 +CIEV: sounder,0 +CIEV: call,0 +CIEV: roam,0 +CIEV: smsfull,0</td><td>Activate Indicator Event Report with at+cmer</td></tr><tr><td>atd"0123456"; OK</td><td>You make a call.</td></tr><tr><td>+CIEV: sounder,1 +CIEV: call,1 +CIEV: sounder,0 +CIEV: call,0 NO CARRIER</td><td>A set of +CIEV URCs reports is presented  The receiver hangs up.</td></tr><tr><td>at+cind=,,0,,0 OK</td><td>You deregister the indicators 'call' and 'sounder'</td></tr><tr><td>atd"0123456"; OK NO CARRIER</td><td>You make a call.  This time, no +CIEV URCs are displayed.</td></tr></table>	at+cind? +CIND: 5,99,1,0,0,0,0,0 OK	The battery is either full or an external supply source is used. The bit error rate of the signal quality is not available (since there no call in progress), and the ME is registered to its home network.	at+cmer=2,0,0,2 OK +CIEV: message,0 +CIEV: battchg,5 +CIEV: signal,99 +CIEV: service,1 +CIEV: sounder,0 +CIEV: call,0 +CIEV: roam,0 +CIEV: smsfull,0	Activate Indicator Event Report with at+cmer	atd"0123456"; OK	You make a call.	+CIEV: sounder,1 +CIEV: call,1 +CIEV: sounder,0 +CIEV: call,0 NO CARRIER	A set of +CIEV URCs reports is presented  The receiver hangs up.	at+cind=,,0,,0 OK	You deregister the indicators 'call' and 'sounder'	atd"0123456"; OK NO CARRIER	You make a call.  This time, no +CIEV URCs are displayed.
at+cind? +CIND: 5,99,1,0,0,0,0,0 OK	The battery is either full or an external supply source is used. The bit error rate of the signal quality is not available (since there no call in progress), and the ME is registered to its home network.												
at+cmer=2,0,0,2 OK +CIEV: message,0 +CIEV: battchg,5 +CIEV: signal,99 +CIEV: service,1 +CIEV: sounder,0 +CIEV: call,0 +CIEV: roam,0 +CIEV: smsfull,0	Activate Indicator Event Report with at+cmer												
atd"0123456"; OK	You make a call.												
+CIEV: sounder,1 +CIEV: call,1 +CIEV: sounder,0 +CIEV: call,0 NO CARRIER	A set of +CIEV URCs reports is presented  The receiver hangs up.												
at+cind=,,0,,0 OK	You deregister the indicators 'call' and 'sounder'												
atd"0123456"; OK NO CARRIER	You make a call.  This time, no +CIEV URCs are displayed.												

## 4.20 AT+CLCC List current calls of ME

Test command AT+CLCC=?	Response <b>OK</b> Parameters
Execute command AT+CLCC	<p>Response</p> <p>TA returns a list of current calls of ME. If command successful, but no calls are available, no information response is sent to TE.</p> <p>[+CLCC: &lt;id1&gt;,&lt;dir&gt;,&lt;stat&gt;,&lt;mode&gt;,&lt;mpty&gt;,&lt;number&gt;,&lt;type&gt;,&lt;alpha&gt;]]] [&lt;CR&gt;&lt;LF&gt;+CLCC: &lt;id2&gt;,&lt;dir&gt;,&lt;stat&gt;,&lt;mode&gt;,&lt;mpty&gt;,&lt;number&gt;,&lt;type&gt;,&lt;alpha&gt;]]] [...]]] OK</p> <p>If error is related to ME functionality: +CME ERROR: &lt;err&gt;</p> <p>Parameters</p> <p>&lt;idx&gt; Integer type; call identification number as described in GSM 02.30[19] subclause 4.5.5.1; this number can be used in +CHLD command operations</p> <p>&lt;dir&gt; 0 mobile originated (MO) call 1 mobile terminated (MT) call</p> <p>&lt;stat&gt; state of the call: 0 active 1 held 2 dialing (MO call) 3 alerting (MO call) 4 incoming (MT call) 5 waiting (MT call)</p> <p>&lt;mode&gt; bearer/teleservice: 0 voice 1 data 2 fax 9 unknown</p> <p>&lt;mpty&gt; 0 call is not one of multiparty (conference) call parties 1 call is one of multiparty (conference) call parties</p> <p>&lt;number&gt; string type phone number in format specified by &lt;type&gt;</p> <p>&lt;type&gt; type of address octet in integer format; 145 when dialling string includes international access code character "+", otherwise 129</p> <p>&lt;alpha&gt; string type alphanumeric representation of &lt;number&gt; corresponding to the entry found in phonebook; used character set should be the one selected with command Select TE Character Set +CSCS</p>
Reference GSM 07.07	Note

## 4.21 AT+CLCK Facility lock

Test command AT+CLCK=?	<p>Response</p> <p>+CLCK: (list of supported &lt;fac&gt;s) OK</p> <p>Parameter</p> <p>See execute command</p>
Execute command AT+CLCK=<fac>, <mode> [,<passwd> [,<class>]]	<p>Use this command to lock, unlock or interrogate a ME or a network facility &lt;fac&gt;. The command can be aborted when network facilities are being set or interrogated.</p> <p>Response</p> <p>If &lt;mode&gt; ≠ 2 and command is successful <b>OK</b></p> <p>If &lt;mode&gt; = 2 and command is successful +CLCK: &lt;status&gt;[,&lt;class1&gt;[&lt;CR&gt;&lt;LF&gt; +CLCK: &lt;status&gt;, class2....]] OK</p> <p>If error is related to ME functionality: +CME ERROR: &lt;err&gt;</p> <p>Parameter</p> <p>&lt;fac&gt; <u>Phone security locks set by client or factory:</u></p> <ul style="list-style-type: none"> <li>"SC" SIM (lock SIM cards). SIM requests password upon ME power-up and when this lock command is issued. "SC" lock is protected with SIM PIN1. The number can be modified with AT+CPWD or AT^SPWD. See examples in Chapter 4.21.2 for further explanations.</li> <li>"PS" Phone locked to SIM card. ME requests password when other than current SIM card is inserted. If set individually by the client, the password for the "PS" lock can be specified with AT+CPWD or AT^SPWD. If set by factory (e.g. for a prepaid mobile), the password is supplied by the provider or operator.</li> <li>"FD" SIM fixed dialling memory: If the mobile is locked to "FD", only the phone numbers stored to the "FD" memory can be dialled (depending on the SIM card, usually up to 7 numbers). PIN2 is requested as &lt;passwd&gt;.</li> <li>"CS" Keypad lock (not supported since keypad cannot be directly connected to the GSM engine)</li> </ul> <p>Note: Primarily intended for the client to take safety precautions, "SC", "PS" and "FD" can be configured individually. "PS" may also be factory set. "PS" lock is frequently referred to as "phone lock", or "device lock". Accordingly, the password may be called "phone code" or "device code". The "PS" password is not associated with the PUK of the SIM card. If incorrectly entered three times, the Master Phone Code is required to lift the lock. Once the Master Phone Code has been accepted, the mobile is operational, and the "PS" lock is no longer active. If needed it must be set once again. See Chapter 4.35.1 and examples below for further details.</p>



#### Factory set SIM locks

"PF"	lock Phone to the very First SIM card
"PN"	Network Personalisation
"PU"	Network subset Personalisation
"PP"	Service Provider Personalisation
"PC"	Corporate Personalisation

Note: Typical examples of factory set SIM locks are prepaid phones or network locks, used to restrict the operation of a mobile to a specific provider or operator. The client should be aware that each of these lock types can only be unlocked if the associated password is available. For example, a mobile can be locked to accept only SIM cards from the respective provider, or even one single SIM card. Once a different SIM card is inserted the ME will prompt the client to enter a specific code. This is not the PUK of the SIM card, but usually an 8-digit code which needs to be requested from the provider.

The locks can only be set by the manufacturer and need to be agreed upon between the parties concerned, e.g. provider, operator, distributor etc. on the one side and the manufacturer on the other side. For details contact your local dealer or Siemens AG.

See Chapter 4.35 and 4.35.1 for further instructions.

#### Supplementary Service: Call barring:

"AO"	BAOC (Bar All Outgoing Calls)
"OI"	BOIC (Bar Outgoing International Calls)
"OX"	BOIC-exHC (Bar Outgoing International Calls except to Home Country)
"AI"	BAIC (Bar All Incoming Calls)
"IR"	BIC-Roam (Bar Incoming Calls when Roaming outside the home country)
"AB"	All Barring services (applicable only for <mode>=0)
"AG"	All outGoing barring services (applicable only for <mode>=0)
"AC"	All inComing barring services (applicable only for <mode>=0)

Note: The availability of the Supplementary Services varies with the network. To benefit from call barring the client will need to subscribe them, though a limited number of call barring types may be included in the basic tariff package. Call barring is protected by a password supplied from the provider or operator. Usually there is one password which applies to all call barring options. For details contact your provider.

When you attempt to set a <fac> or <class> which is not provisioned, not yet subscribed to, or not supported by the module, the setting will not take effect regardless of the response returned. The responses in these cases vary with the network (for example "OK", "Operation not allowed", "Operation not supported" etc.). To make sure check the call barring status with <mode>=2.

<mode>	0 unlock
	1 lock
	2 query status

<passwd>password

See Chapters 4.38 and 8.36 for instructions of how to specify passwords.

	<p><b>&lt;class&gt;</b> integer or sum of integers each representing a <b>&lt;class&gt;</b> of information:</p> <ul style="list-style-type: none"> <li>1 voice</li> <li>2 data</li> <li>4 fax</li> <li>8 short message service</li> <li>16 data circuit sync</li> <li>32 data circuit async</li> <li>64 dedicated packet access</li> <li>128 dedicated PAD access</li> <li>x combination of some of the above classes.</li> </ul> <p>For example, the default setting <u>7</u> represents the sum of the integers 1, 2 and 4 (call barring for voice, data and fax). The value 255 covers all classes. If the <b>&lt;class&gt;</b> parameter is omitted, the default value <u>7</u> is used.</p> <p>See examples in 4.21.3 for correct handling of class numbers.</p> <p><b>&lt;class&gt; 2</b> (data) comprises all those <b>&lt;class&gt;</b> values between 16 and 128, that are supported both by the network and the MS. This means, a setting made for <b>&lt;class&gt; 2</b> applies to all remaining data classes (if supported). In addition, you can assign a different setting to a specific class. For example, you can activate call barring for all data classes, but deactivate it for a specific data class.</p> <p><b>&lt;status&gt;</b> 0 off 1 on</p>
Reference GSM 07.07 GSM 02.04, GSM 02.88	Note The command has been implemented with the full set of <b>&lt;class&gt;</b> parameters according to GSM 07.07. For actual applicability of a specific <b>&lt;fac&gt;</b> to a specific service or service group (a specific <b>&lt;class&gt;</b> value) please consult table A.1 of GSM 02.04.

#### 4.21.1 Examples: Enabling / disabling PIN 1 authentication

Example 1	<p>To lock or unlock the SIM card: The "SC" parameter enables or disables the SIM PIN authentication (PIN 1) when you power up the GSM engine:</p> <p>AT+CLCK="SC",1,9999      Activates SIM card lock. OK      As a result, SIM PIN 1 must be entered to enable ME to register to the GSM network.</p> <p>AT+CLCK="SC",0,9999      Unlocks SIM card. OK      When powered up, ME registers to the GSM network without requesting SIM PIN1. Note: Depending on the services offered by the provider, this feature is not supported by all SIM card types. If so, the command returns ERROR when you attempt to unlock the card.</p>
Example 2	<p>To query the status of the SIM card lock:</p> <p>AT+CLCK="SC",2 +clck: 1      SIM card is locked. SIM PIN1 must be entered to enable ME to register to the GSM network.</p>

### 4.21.2 Examples: Phone lock

Example 1	<p>Be sure that PIN 1 authentication is valid:</p> <pre>AT+CPIN? +CPIN: SIM PIN OK</pre> <p>AT+CPIN=9999 OK</p> <p>To lock the mobile to the currently inserted SIM card, first specify a password (= a phone code):</p> <pre>AT+CPWD="PS", , 1234 OK</pre> <p>If "PS" lock has not been set before: enter new password.</p> <p>or:</p> <pre>AT+CPWD="PS", 1234, 3333 OK</pre> <p>To replace existing "PS" password: Enter old and new one.</p> <p>Then, activate the phone lock:</p> <pre>AT+CLCK="PS", 1, 3333 OK</pre> <p>Locks the mobile to the current SIM card.</p>
Example 2	<p>To deactivate the phone lock:</p> <pre>AT+CLCK="PS", 0, 3333 OK</pre> <p>Enter lock type "PS", followed by 0 to lift the lock. Then type "PS" lock password.</p> <p>As a result, the mobile accepts any SIM card and can be operated after the card's SIM PIN 1 was entered.</p>
Example 3	<p>To operate the mobile with the SIM card for which "PS" lock was activated:</p> <pre>AT+CPIN? +CPIN: SIM PIN AT+CPIN=9999 OK</pre> <p>Enter SIM PIN used when locking the mobile. "PS" lock password is not needed.</p>
Example 4	<p>To operate the mobile with other SIM card than the one used for the "PS" lock: Enter SIM PIN of present card, followed by "PS" lock password.</p> <pre>AT+CPIN? +CPIN: SIM PIN AT+CPIN=1111 OK</pre> <p>Enter SIM PIN of present SIM card. SIM PIN accepted.</p> <pre>AT+CPIN? +CPIN: PH-SIM PIN AT+CPIN=3333 OK</pre> <p>"PS" lock password is required. "PS" lock password has been accepted.</p>
Example 5	<p>Attempt to unblock the "PS" lock using an invalid password:</p>

	AT+CPIN?	Enter SIM PIN of present SIM card.
	+CPIN: SIM PIN	
	AT+CPIN=1111	
	OK	SIM PIN accepted.
	AT+CPIN?	
	+CPIN: PH-SIM PIN	"PS" lock password is required.
	AT+CPIN=4444	Bad password is given:
	+CME ERROR: incorrect password	
	After the "PS" lock password was incorrectly entered three times in a row:	
	AT+CPIN?	
	+CPIN: PH-SIM PUK	Master Phone Code is required (8-digit code available from the manufacturer. See Chapter 4.35.1).
	AT+CPIN=12345678	Master Phone Code has been accepted. As a result, the mobile is operational, and the "PS" lock is totally removed. If needed, it must be set once again.
Example 6	Attempt to unblock the "PS" lock using an invalid Master Phone Code: Due to the timing algorithm explained in Chapter 4.35.1 the intervals between each attempt are getting longer. See also AT^SPIC in Chapter 8.32.	
Example 7	As an alternative to the AT+CPIN command you can use AT+CPWD. In this case the following syntax shall be observed: AT+CPWD=PS,Master Phone Code[,new password].	
	AT+CPWD=PS, 12345678	Deactivates the "PS" lock.
	Or	
	AT+CPWD=PS, 12345678, 3333	Deactivates the present "PS" lock and sets a new "PS" lock.

### 4.21.3 Examples: Call barring

Please note that when you configure or query call barring without specifying any classes, the settings will refer to classes 1, 2 and 4 only (default setting).

Remember that most of the call barring types have to be subscribed to. Usually, the service is subject to a password supplied from the provider.

Example 1	<p>When checking the status of barring for outgoing international calls without specifying classes, please note that the ME returns only the status of voice, data, fax calls. The status of SMS and other classes is not reported.</p> <pre>at+clck=oi,2,0000          or without &lt;passwd&gt;: at+clck=oi,2 +CLCK: 1,1                outgoing international voice calls barred +CLCK: 1,2                outgoing international data calls barred +CLCK: 1,4                outgoing international fax calls barred OK</pre>
Example 2	<p>To check the call barring status for outgoing international calls and <u>all</u> classes, you are required to enter the integer sum referring to all classes:</p> <pre>at+clck=oi,2,0000,255    or without &lt;passwd&gt;: at+clck=oi,2,,255 +CLCK: 1,1                outgoing international voice calls barred +CLCK: 1,2                outgoing international data calls barred +CLCK: 1,4                outgoing international fax calls barred +CLCK: 1,8                outgoing international SMS barred +CLCK: 0,16               no barring (e.g. not supported or not activated at all) +CLCK: 1,32               outgoing international data calls barred +CLCK: 0,64               no barring (e.g. not supported or not activated at all) +CLCK: 0,128              no barring (e.g. not supported or not activated at all) OK</pre>
Example 3	<p>To activate call barring for outgoing international voice and data calls:</p> <pre>at+clck=oi,1,0000,3      (where 3 is the sum of class 1 + class 2) OK</pre>
Example 4	<p>To disable call barring for outgoing international fax (class 4) and SMS (class 8) calls:</p> <pre>at+clck=oi,0,0000,12     (where 12 is the sum of class 4 + class 8) OK</pre>
Example 5	<p>To disable call barring for all outgoing international calls:</p> <pre>at+clck=oi,0,0000,255 OK</pre>

## 4.22 AT+CLIP Calling line identification presentation

This command refers to the GSM supplementary service CLIP (Calling Line Identification Presentation) that enables a called subscriber to get the calling line identity (CLI) of the calling party when receiving a mobile terminated call.

Test command AT+CLIP=?	Response <b>+ CLIP:</b> (list of supported <n>s) <b>OK</b> Parameter See write command
Read command AT+CLIP?	Response <b>+CLIP:</b> <n>, <m> <b>OK</b> If error is related to ME functionality: <b>+CME ERROR:</b> <err> Parameter See write command
Write command AT+CLIP=<n>	Set command enables or disables the presentation of the CLI at the TE. It has no effect on the execution of the supplementary service CLIP in the network. Response <b>OK</b> If error is related to ME functionality: <b>+CME ERROR:</b> <err> Parameter <n>      0 suppress unsolicited result codes 1 display unsolicited result codes <m>      0 CLIP not provisioned 1 CLIP provisioned 2 unknown
Unsolicited result code	When CLIP is enabled at the TE (and is permitted by the calling subscriber), an unsolicited result code is returned after every RING (or +CRING: <type>) at a mobile terminating call. Voice call response format: <b>+CLIP:</b> <number>, <type>,,,<CLI validity> Data/FAX call response format: <b>+CLIP:</b> <number>, <type> Parameter <number> string type phone number of calling address in format specified by <type> <type>    type of address octet in integer format; <b>145</b> when dialling string includes international access code character "+", otherwise <b>129</b> . <CLI validity> 0      CLI valid 1      CLI has been withheld by the originator. 3      CLI is not available due to interworking problems or limitations of originating network. <number> shall be an empty string ("") and <type> value will not be significant.
Reference GSM 07.07	Note

### 4.23 AT+CLIR Calling line identification restriction (by \*# sequence)

The AT+CLIR command is not supported. Instead, you can handle CLIR on a call-by-call basis using the ATD command and a \*# sequence

Read command ATD*#31#	<p>Run the Read command to query status:</p> <p>Response <b>+CLIR: &lt;n&gt;,&lt;m&gt;</b></p> <p>Defined values</p> <p><b>&lt;n&gt;</b> (parameter shows the settings for outgoing calls):</p> <ul style="list-style-type: none"> <li>0 presentation indicator is used according to the subscription of the CLIR service</li> <li>1 CLIR invocation</li> <li>2 CLIR suppression</li> </ul> <p><b>&lt;m&gt;</b> (parameter shows the subscriber CLIR service status in the network):</p> <ul style="list-style-type: none"> <li>0 CLIR not provisioned</li> <li>1 CLIR provisioned in permanent mode</li> <li>2 unknown (e.g. no network, etc.)</li> <li>3 CLIR temporary mode presentation restricted</li> <li>4 CLIR temporary mode presentation allowed</li> </ul>
Execute commands	<p>The Execute commands allow you to enable or disable the presentation of your phone number to the called party when you set up a call:</p> <p>ATD*31#&lt;Phonenumber&gt;[:] Deactivate CLIR = enable presentation of own phone number to called party</p> <p>ATD#31#&lt;Phonenumber&gt;[:] Activate CLIR = suppress presentation of own phone number to called party</p>
	<p>Note:</p> <p>&lt;Phonenumber&gt; = phone number of called party</p>

#### 4.24 AT+CLVL Loudspeaker volume level

Test command AT+CLVL=?	Response +CLVL: (list of supported <level>s) OK
Read command AT+CLVL?	Response +CLVL: <level> <b>OK/ERROR/+CME ERROR</b>
Write command AT+CLVL=<level>	Response <b>OK/ERROR/+CME ERROR</b> Parameter <level> Loudspeaker Volume Level (0-4)
Reference GSM 07.07	Note <ul style="list-style-type: none"> <li>• The write command can only be used in audio mode 2 – 6.</li> <li>• The values of the volume steps are specified with the parameters &lt;outCalibrate[0]&gt;,...&lt;outCalibrate[4]&gt; of the AT^SNFO command (see Chapter 8.24).</li> <li>• As an alternative to AT+CLVL, you can use AT^SNFO and AT^SNFV (Chapter 8.27). The parameter &lt;level&gt; is identical with &lt;outStep&gt; used by both commands.</li> <li>• Any change to &lt;level&gt; (or &lt;outStep&gt;) takes effect in audio modes 2 to 6. That is, when you change &lt;level&gt; (or &lt;outStep&gt;) and then select another mode with AT^SNFS, the same step will be applied. The only exception is audio mode 1 which is fixed to &lt;level&gt;=4 (or accordingly &lt;outStep&gt;=4).</li> <li>• &lt;level&gt; (or &lt;outStep&gt;) is stored non-volatile when the ME is powered down with AT^SMSO or reset with AT+CFUN=1,1.</li> </ul>



## 4.25 AT+CMEE Report mobile equipment error

Test command AT+CMEE=?	<p>Response</p> <p>+CMEE: (list of supported &lt;n&gt;s) OK</p> <p>Parameter</p> <p>See write command</p>
Read command AT+CMEE?	<p>Response</p> <p>+CMEE: &lt;n&gt; OK</p> <p>Parameter</p> <p>See write command</p>
Write command AT+CMEE=<n>	<p>This command controls the presentation of the result codes +CME ERROR: &lt;err&gt; and CMS:&lt;err&gt; that indicate errors relating to ME functionality.</p> <p>When you power down or reset the ME with AT+CFUN=1,1 the setting will be re-set to its default. The levels 1 or 2 need to be selected every time you reboot the ME, or may be included, for permanent use, in the user profile saved with AT&amp;W.</p> <p>Response</p> <p><b>OK</b></p> <p>Parameter</p> <p>&lt;n&gt;     <u>0</u>   disable result code (only 'ERROR' will be displayed)</p> <p>          1   enable result code and use numeric values</p> <p>          2   enable result code and use verbose values</p>
Example	<p>To obtain enhanced error messages it is recommended to choose &lt;n&gt;=2.</p> <p>AT+CMEE=2</p> <p>OK</p>
Reference GSM 07.07	<p>Note</p> <ul style="list-style-type: none"> <li>• The possible error result codes are listed in chapter 9</li> <li>• In multiplex mode (see "AT+CMUX Enter multiplex mode", pg. 101) the setting applies only to the logical channel where selected. The setting on the other channels may differ.</li> </ul>

## 4.26 AT+CMER Mobile equipment event reporting

Test command AT+CMER=?	<p>Response</p> <p>+CMER: (list of supported &lt;mode&gt;s),(list of supported &lt;keyp&gt;s),(list of supported &lt;disp&gt;s),(list of supported &lt;ind&gt;s),(list of supported &lt;bfr&gt;s)</p> <p>Parameters</p> <p>See write command</p>																							
Read command AT+CMER?	<p>Response</p> <p>+CMER: &lt;mode&gt;,&lt;keyp&gt;,&lt;disp&gt;,&lt;ind&gt;,&lt;bfr&gt;</p> <p>Parameters</p> <p>See write command</p>																							
Write command AT+CMER= [<mode> [,<keyp> [,<disp> [,<ind> [,<bfr>]]]]]	<p>The Execute command enables and disables the presentation of Unsolicited Result Codes for event reporting. MC35 supports only the type +CIEV (indicator event reporting). If enabled the +CIEV URCs are sent whenever the value of an indicator changes.</p> <p>Response</p> <p><b>OK</b></p> <p>Parameters</p> <table><tr><td rowspan="4">&lt;mode&gt;</td><td>0</td><td>Discard CIEV Unsolicited Result Codes</td></tr><tr><td>1</td><td>Discard CIEV Unsolicited Result Codes when TA-TE link is reserved (e.g. in on-line data mode); otherwise forward them directly to the TE</td></tr><tr><td>2</td><td>Buffer CIEV Unsolicited Result Codes in the TA when TA-TE link is reserved (e.g. in on-line data mode) and flush them to the TE after reservation. Otherwise forward them directly to the TE.</td></tr><tr><td>3</td><td>Forward CIEV Unsolicited Result Codes directly to the TE; TA-TE link specific inband technique used to embed result codes and data when TA is in on-line data mode</td></tr><tr><td>&lt;keyp&gt;</td><td>0</td><td>No keypad event reporting</td></tr><tr><td>&lt;disp&gt;</td><td>0</td><td>No display event reporting</td></tr><tr><td rowspan="2">&lt;ind&gt;</td><td>0</td><td>No indicator event reporting</td></tr><tr><td>2</td><td>Indicator event reporting using result code +CIEV: &lt;desc&gt;,&lt;value&gt; &lt;desc&gt; indicates the indicator's name and &lt;value&gt; is the new value of this indicator. All indicator events shall be directed from TA to TE.</td></tr><tr><td>&lt;bfr&gt;</td><td>0</td><td>TA buffer of Unsolicited Result Codes defined within this command; is cleared when &lt;mode&gt; 1...3 is entered</td></tr></table>	<mode>	0	Discard CIEV Unsolicited Result Codes	1	Discard CIEV Unsolicited Result Codes when TA-TE link is reserved (e.g. in on-line data mode); otherwise forward them directly to the TE	2	Buffer CIEV Unsolicited Result Codes in the TA when TA-TE link is reserved (e.g. in on-line data mode) and flush them to the TE after reservation. Otherwise forward them directly to the TE.	3	Forward CIEV Unsolicited Result Codes directly to the TE; TA-TE link specific inband technique used to embed result codes and data when TA is in on-line data mode	<keyp>	0	No keypad event reporting	<disp>	0	No display event reporting	<ind>	0	No indicator event reporting	2	Indicator event reporting using result code +CIEV: <desc>,<value> <desc> indicates the indicator's name and <value> is the new value of this indicator. All indicator events shall be directed from TA to TE.	<bfr>	0	TA buffer of Unsolicited Result Codes defined within this command; is cleared when <mode> 1...3 is entered
<mode>	0		Discard CIEV Unsolicited Result Codes																					
	1		Discard CIEV Unsolicited Result Codes when TA-TE link is reserved (e.g. in on-line data mode); otherwise forward them directly to the TE																					
	2		Buffer CIEV Unsolicited Result Codes in the TA when TA-TE link is reserved (e.g. in on-line data mode) and flush them to the TE after reservation. Otherwise forward them directly to the TE.																					
	3	Forward CIEV Unsolicited Result Codes directly to the TE; TA-TE link specific inband technique used to embed result codes and data when TA is in on-line data mode																						
<keyp>	0	No keypad event reporting																						
<disp>	0	No display event reporting																						
<ind>	0	No indicator event reporting																						
	2	Indicator event reporting using result code +CIEV: <desc>,<value> <desc> indicates the indicator's name and <value> is the new value of this indicator. All indicator events shall be directed from TA to TE.																						
<bfr>	0	TA buffer of Unsolicited Result Codes defined within this command; is cleared when <mode> 1...3 is entered																						
	<p>Unsolicited Result Code:</p> <p>+CIEV: &lt;desc&gt;,&lt;value&gt;</p> <p>Parameters</p> <table><tr><td>&lt;descr&gt;</td><td colspan="2">values and their &lt;value&gt; ranges:</td></tr><tr><td>"battchg"</td><td>Battery charge level (0-5), where (0-5) means 0, 20, 40, 60, 80 or 100 per cent of the the remaining battery capacity. If no battery is connected to the ME, then the value will be always equal to 5. See also Chapter 8.5.</td><td></td></tr></table>	<descr>	values and their <value> ranges:		"battchg"	Battery charge level (0-5), where (0-5) means 0, 20, 40, 60, 80 or 100 per cent of the the remaining battery capacity. If no battery is connected to the ME, then the value will be always equal to 5. See also Chapter 8.5.																		
<descr>	values and their <value> ranges:																							
"battchg"	Battery charge level (0-5), where (0-5) means 0, 20, 40, 60, 80 or 100 per cent of the the remaining battery capacity. If no battery is connected to the ME, then the value will be always equal to 5. See also Chapter 8.5.																							

	<p>"signal" Signal quality (0-7 or 99 if not measurable). The indicated value is the bit error rate of the signal received. See also Chapter 4.46.</p> <p>"service" Service availability (0-1).</p> <p>"sounder" Sounder activity (0-1). The indicator provides information about tones generated in the ME. The value 1 means for example: Incoming call - ME is ringing. Waiting call - ME generates waiting call tone (if call waiting is enabled). Outgoing call - ME generates Call Progress tone. Outgoing call - ME generates BUSY tone. The value changes to 0, when the tone stops.</p> <p>"message" Unread short message(s) (0-1).</p> <p>"call" Call in progress (0-1). Voice und data calls only. The indicator changes its value as soon as a call has been established, for example when both interlocutors are connected or when the call ends.</p> <p>"roam" Roaming indicator (0-1).</p> <p>"smsfull" A short message memory storage in the MT has become full (1) or memory locations are available (0); i.e. the range is (0-1).</p> <p>&lt;value&gt; integer type value, in the range stated above for the corresponding &lt;descr&gt;.</p>
Reference GSM 07.07	<p>Note</p> <ul style="list-style-type: none"> <li>Only the indicators which are registered (see AT+CIND command), will be reported if CMER is enabled.</li> <li>After CMER has been switched on, +CIEV URCs for all registered indicators with their default value will be presented to the TE.</li> <li>While the ME is in online data mode, no URC will be displayed. Each +CIEV URC is replaced with a Break (100 ms), and is stored in a buffer. Once the ME goes into command mode (after +++ was entered), all URCs stored in the buffer will be output. Exception: For "message" indicator, please note that each incoming short message will cause a Break.</li> <li>See AT+CIND in Chapter 4.19.</li> </ul>

#### 4.27 AT+CMUT Mute control

Test command AT+CMUT=?	Response +CMUT: (list of supported <n>s) <b>OK</b>
Read command AT+CMUT?	Response +CMUT: <n> <b>OK/ERROR/+CME ERROR</b>
Write command AT+CMUT=<n>	Response <b>OK/ERROR/+CME ERROR</b>  Parameter <n>: <u>0</u> mute off 1  mute on
Reference GSM 07.07	Note This command can be used in all audio modes (1 to 6) and during a voice call only. See AT^SNFS in Chapter 8.26 for more details on the various audio modes. Users should be aware that when they switch back and forth between different audio modes the value of <mute> does not change. This means that the status of mute operation is retained until explicitly changed. As alternative, you can use the AT^SNFM command described in Chapter 8.22.

## 4.28 AT+CMUX Enter multiplex mode

MC35 supports Multiplex mode according to the GSM 07.10 Multiplexer Protocol and enables one physical serial asynchronous interface to be partitioned into three virtual channels. This allows you to take advantage of up to 3 simultaneous sessions running on the serial interface. Each session represents a stream of bytes conveying various data; such as voice, fax, data, SMS, phonebook information, battery status etc. For example, you can transfer data over one channel while two further channels are free to control the GSM engine with AT commands. It should be noted, however, that voice, data, fax or GPRS calls cannot be established simultaneously, since the mobile device provides just one air interface to the network.

To make the three virtual interfaces (channels) available, both the MC35 module and the customer application must contain Mux components which communicate over the Multiplexer Protocol. In the MC35 module, the Mux/MP software is already incorporated. The customer application should either integrate the MC35 Mux/MP software or include a Mux/MP program developed by the customer. The AT+CMUX write command starts the multiplexing protocol control channel.

Refer to [5] which provides to a detailed description of the Multiplex functionality implemented in MC35 and step-by-step instructions of how to install and configure the MUX mode. The source files of the MC35 Mux/MP software can be supplied on request. Please contact your local dealer to obtain the latest installation software and user's guide.

Test command AT+CMUX=?	Response <b>+CMUX:</b> (list of supported <mode>s) <b>OK</b>
Read command AT+CMUX?	Response <b>+CMUX:</b> <mode> <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR:</b> <err>
Write command AT+CMUX=<mode>	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR:</b> <err>  Parameter <b>&lt;mode&gt;</b> multiplexer transparency mechanism 0      basic option  Subparameters defined in GSM07.07 are adjusted for control and logical channels as follows: <b>&lt;subset&gt;</b> 0      UIH frames used only (control channel)
Reference GSM 07.07	Note  1. The write command is used to enter the multiplex mode. The setup of the logical channels is initiated by the TE, i.e. the TE acts as initiator. This means that the TE shall ensure that logical channels are established before any further actions on the channels can be started.  2. There is a timeout of five seconds, if the multiplexer protocol is enabled and no multiplexer control channel is established. The GSM engine re-

	turns to the AT command mode.
3.	There are various options to switch from data mode to command mode: <ul style="list-style-type: none"> <li>a) Escape sequence +++</li> <li>b) Circuit 108/2 (DTR) changes from ON to OFF, reaction depends on command at&amp;d (caution if AT&amp;D0: TA ignores status on DTR).</li> <li>c) The message Modem Status Command (MSC) for control channel is defined by the multiplexer protocol GSM07.10. MSC conveys V.24 signals. Bit 3 of Control Signal Octet is DTR, reaction depends on command at&amp;d (caution if AT&amp;D0: TA ignores status on DTR).</li> </ul>
4.	The parameter maximum frame size (N1) of AT+CMUX in GSM07.07 is fixed to 97 and cannot be changed. All other parameters are not available.
5.	Multiplex mode can be terminated by <b>AT^SMSO</b> („AT^SMSO Switch off mobile station" pg. 202). It has to be reestablished after power-on.

#### 4.28.1 Restricted use of AT commands in Multiplex mode

In Multiplex mode, the operation of several AT commands varies from the normal mode. This chapter summarizes the concerned commands. For general rules and restrictions to be considered in Multiplex mode please refer to [5].

Data, fax and GPRS calls can only be set up on logical channel 1. Due to this restriction, AT commands have a different behaviour on channels 2+3 compared to channel 1. Several commands are not available, others return different responses. These commands are listed in the table below:

Table 8: Availability of AT commands on virtual channels

Command	Behaviour on channel 1	Differences on channel 2+3
+++	as described <sup>3)</sup>	no data calls
ATE	as described	as described
AT+CBST	as described	not usable
AT+CR	as described	not usable
AT+CRLP	as described	not usable
AT+CG... (GPRS commands)	as described	usage not recommended <sup>2)</sup>
AT+F.... (Fax commands)	as described	not usable
AT&C	as described	not usable
AT&D	as described	not usable
AT&F	as described	data call parameters not changed, S3, S4 not changed
AT&S	as described	not usable
AT&V	as described	data call parameters not displayed
ATA	as described	no data calls
ATD	as described	no data calls
ATDI<n>	as described	not usable
ATO	as described	not usable
ATS0 <sup>1)</sup>	as described	not usable
ATS3 <sup>1)</sup>	as described	as described
ATS4 <sup>1)</sup>	as described	as described
ATS5 <sup>1)</sup>	as described	not usable
ATS6 <sup>1)</sup>	as described	not usable
ATS7 <sup>1)</sup>	as described	not usable

Command	Behaviour on channel 1	Differences on channel 2+3
ATS8 <sup>1)</sup>	as described	not usable
ATS10 <sup>1)</sup>	as described	not usable
ATS18 <sup>1)</sup>	as described	not usable
ATI<Q>n>	as described	not usable
ATZ	as described	data call parameters not changed

- <sup>1)</sup> Siemens GSM engines support the registers S0 - S29. You can change S0, S3, S4, S5, S6, S7, S8, S10 and S18 using the related ATSn commands (see starting from pg. 32).
- <sup>2)</sup> MC35 allows to use the GPRS commands on all logical channels, but to remain compatible to future releases it is recommended to use them on channel 1 only. PDP contexts can be defined on any channel, but are visible and usable only on the channel on which they are defined (thus it is not possible to define a context on channel 2 and activate it on channel 3). GPRS data calls can be initiated on any channel but will be always established on channel 1.
- <sup>3)</sup> The applicability of the +++ escape sequence depends on the customer's external application based on the Multiplexer Protocol. Recommendations for implementing an appropriate modem status command (MSC) are provided in [5], Chapter "Escape Sequence". The demo program PC MUX uses +++ as described in Chapter 2.2.

Table 9: Summary of AT commands with different behaviour in Multiplex mode

Command	Description	Chapter
ATI<Q>n>	It is recommended to use hardware flow control (ATI<Q>3). XON/XOFF flow control (ATI<Q>1) is not supported in Multiplex mode	2.3
ATH	Terminates any voice, fax or CSD call in progress, no matter what channel was used to enter ATH.  Terminates GPRS connections or clears active PDP context if issued on the same channel.	2.12
AT&V	Different default configurations on channels 1, 2 and 3	2.37
AT+IPR	Before you start Multiplex mode, it is recommended to set the ME to 57600 bps. For GPRS we suggest to use 115200 bps .  The bit rate cannot be changed while Multiplex mode is active, therefore do not use AT+IPR=<rate> in this mode.	2.45
AT+IPR=0	Autobauding is not compatible with Multiplex mode. It is neither possible to start MUX when autobauding is active, nor to set autobauding during Multiplex mode.	2.45.1
AT+CALA	Alarm calls can be separately configured on each channel. The read command returns the total number of alarm calls activated on all channels.	4.2
AT+CMEE	Presentation mode can be separately configured for each channel.	4.25
AT+CNMA	If Multiplex mode is activated the +CNMI parameter will be set to zero on all channels, if one channel fails to acknowledge an incoming message within the required time.	5.9
AT+CNMI	Phase 2+ parameters can only be used on one channel. The parameter for <mt> and <ds> on the other channels have to be set to zero. If either a SM or a Status Report is not acknowledged, all +CNMI parameter will be set to zero on all channels.	5.10

## 4.29 AT+COPN Read operator names

Test command AT+COPN=?	Response <b>OK</b>
Execute command AT+COPN	<p>TA returns the list of operator names from the ME. Each operator code &lt;numeric&gt; that has an alphanumeric equivalent &lt;alphan&gt; in the ME memory is returned.</p> <p>Response +COPN: numeric &lt;numeric1&gt;,long alphanumeric &lt;alpha1&gt;&lt;CR&gt;&lt;LF&gt; +COPN:.....<b>OK</b></p> <p>If error is related to ME functionality: +CME ERROR: &lt;err&gt;</p> <p>Parameter            &lt;numeric&gt;      string type; operator in numeric form; GSM location area identification number            &lt;alphan&gt;        string type; operator in long alphanumeric format; can contain up to 16 characters         </p>
Reference GSM 07.07	Note See also AT^SPLM, pg. 217



### 4.30 AT+COPS Operator selection

This command can be used to query the present status of the ME's network registration and to determine whether automatic or manual network selection shall be used.

Automatic mode:	Lets the ME automatically search for the home operator. If successful the ME registers to the home network and enters the IDLE mode. If the home network is not found, ME goes on searching. If then a permitted operator is found, ME registers to this operator. If no operator is found the ME remains unregistered.
Manual mode:	Desired operator can be manually entered, using the AT+COPS write command syntax. If operator is found, ME registers to this operator. If the selected operator is forbidden, the ME remains unregistered.
Manual/automatic:	In this mode, the ME first tries to find the operator that was manually entered. If the ME fails to register to this operator, then it starts to select automatically another network.

Test command AT+COPS=?	<p>TA returns a list of quadruplets, each representing an operator present in the network. The list of operators is presented in the following order: Home network, networks referenced in SIM, and other networks. Two commas in a succession (,,) are a placeholder for the non-implemented <code>&lt;format&gt;1</code> (short alphanumeric operator name).</p> <p>Response</p> <p><b>+COPS:</b> (list of supported (<code>&lt;stat&gt;</code>, long alphanumeric <code>&lt;oper&gt;</code>,, numeric <code>&lt;oper&gt;s</code>) [(list of supported <code>&lt;mode&gt;s</code>), (list of supported <code>&lt;format&gt;s</code>)] <b>OK</b></p> <p>If error is related to ME functionality:</p> <p><b>+CME ERROR:</b> <code>&lt;err&gt;</code></p> <p>Parameters</p> <table><tr><td><code>&lt;stat&gt;</code></td><td>0</td><td>unknown</td></tr><tr><td></td><td>1</td><td>operator available</td></tr><tr><td></td><td>2</td><td>current operator (registered)</td></tr><tr><td></td><td>3</td><td>forbidden operator</td></tr></table> <p><code>&lt;oper&gt;</code> operator as per <code>&lt;format&gt;</code></p> <p><code>&lt;mode&gt;</code> <u>0</u> - 4 see write command</p> <p><code>&lt;format&gt;</code> <u>0</u> - 2 see write command</p>	<code>&lt;stat&gt;</code>	0	unknown		1	operator available		2	current operator (registered)		3	forbidden operator
<code>&lt;stat&gt;</code>	0	unknown											
	1	operator available											
	2	current operator (registered)											
	3	forbidden operator											
Read command AT+COPS?	<p>TA returns the current mode and, if registered, the currently used operator. If the ME is unregistered, <code>&lt;format&gt;</code> and <code>&lt;oper&gt;</code> are omitted.</p> <p>Response</p> <p><b>+COPS:</b> <code>&lt;mode&gt;</code>[, <code>&lt;format&gt;</code>[, <code>&lt;oper&gt;</code>]] <b>OK</b></p> <p>If error is related to ME functionality:</p> <p><b>+CME ERROR:</b> <code>&lt;err&gt;</code></p> <p>Parameters</p> <p>See write command</p>												
Write command AT+COPS= <code>&lt;mode&gt;</code> [, <code>&lt;format&gt;</code> [, <code>&lt;oper&gt;</code> ]]	<p>The write command allows you to choose whether the GSM network operator is to be selected automatically or manually. When using the manual mode, the <code>&lt;operator&gt;</code> must be entered, no matter whether you want to search for the home operator or another one.</p>												

	<p>Response</p> <p><b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p> <p>Parameters</p> <p><b>&lt;mode&gt;</b></p> <table> <tr> <td>0</td><td>automatic mode; &lt;oper&gt; field is ignored</td></tr> <tr> <td>1</td><td>manual operator selection</td></tr> <tr> <td>2</td><td>&lt;oper&gt; field must be present, &lt;format&gt; can only be = 2 manually deregister from network and remain unregistered until mode 0,1,4 is selected</td></tr> <tr> <td>3</td><td>set &lt;format&gt; for read command +COPS?</td></tr> <tr> <td>4</td><td>combination of manual/automatic mode; if manual selection fails, ME switches to automatic mode (&lt;mode&gt;=0). (&lt;oper&gt; field must be present)</td></tr> </table> <p><b>&lt;oper&gt;</b> operator as per &lt;format&gt;</p> <p><b>&lt;format&gt;</b></p> <table> <tr> <td>0</td><td>long format alphanumeric &lt;oper&gt;; up to 16 characters</td></tr> <tr> <td>2</td><td>numeric &lt;oper&gt;; GSM Location Area Identification number</td></tr> </table>	0	automatic mode; <oper> field is ignored	1	manual operator selection	2	<oper> field must be present, <format> can only be = 2 manually deregister from network and remain unregistered until mode 0,1,4 is selected	3	set <format> for read command +COPS?	4	combination of manual/automatic mode; if manual selection fails, ME switches to automatic mode (<mode>=0). (<oper> field must be present)	0	long format alphanumeric <oper>; up to 16 characters	2	numeric <oper>; GSM Location Area Identification number
0	automatic mode; <oper> field is ignored														
1	manual operator selection														
2	<oper> field must be present, <format> can only be = 2 manually deregister from network and remain unregistered until mode 0,1,4 is selected														
3	set <format> for read command +COPS?														
4	combination of manual/automatic mode; if manual selection fails, ME switches to automatic mode (<mode>=0). (<oper> field must be present)														
0	long format alphanumeric <oper>; up to 16 characters														
2	numeric <oper>; GSM Location Area Identification number														
Reference GSM 07.07	Note														
Example 1	<p>To query the present status of ME's network registration using the test command:</p> <pre>AT+COPS=? +COPS: (2,"D2",,"26202"),(3,"E-Plus",,"26203"),(3,"T-D1",,"26201"),(3,"Interkom",,"26207"),(0-4),(0,2) OK</pre> <p>Registered operator is D2. The other operators are present in the network, but not allowed to be used with the current SIM card.</p> <p>To query the status of the ME's network registration using the read command:</p> <pre>AT+COPS? +COPS: 0,0,"D2" (command returns mode, format, registered operator) OK</pre>														
Example 2	<p>Attempt to manually select a forbidden operator:</p> <pre>AT+COPS=1,2,26203 OK</pre> <p>If the selected operator was not allowed, the ME is now unregistered. The read command will return only the mode, but no operator:</p> <pre>AT+COPS? +COPS: 1</pre> <p>In this case, the test command returns only that the desired operator is available (&lt;stat=1&gt;). Nevertheless, the registration is not successful. Please use the AT+CREG command (Chapter 4.41) to verify the registration status.</p> <pre>AT+COPS=? +COPS: (1,"D2",,"26202"),(3,"E-Plus",,"26203"),(3,"T-D1",,"26201"),(3,"Interkom",,"26207"),(0-4),(0,2) OK AT+CREG? +CREG: 0,3 (where 3 = registration denied) OK</pre>														

**4.31 AT+CPAS Mobile equipment activity status**

Test command AT+CPAS=?	Response <b>+CPAS:</b> (list of supported <pas>s) <b>OK</b> Parameter See execute command
Execute command AT+CPAS	Response TA returns the activity status of ME. <b>+CPAS:</b> <pas> <b>OK</b> If error is related to ME functionality: <b>+CME ERROR:</b> <err> Parameter <pas>    0    ready 3    incoming call (ringing) 4    call in progress or call hold
Reference GSM 07.07	Note

### 4.32 AT+CPBR Read current phonebook entries

<p>Test command</p> <p>AT+CPBR=?</p>	<p>Response</p> <p>TA returns location range supported by the current storage as a compound value and the maximum length of &lt;number&gt; and &lt;text&gt; fields.</p> <p>Note:</p> <p>If SIM storage is selected, the length may not be available. If storage does not offer format information, the format list should be empty parentheses.</p> <p>+CPBR: (list of supported &lt;index&gt;s), &lt;nlength&gt;, &lt;tlength&gt; OK</p> <p>If error is related to ME functionality:</p> <p>+CME ERROR: &lt;err&gt;</p> <p>Parameter</p> <p>&lt;index&gt; supported range of location numbers (maximum number depends on storage type)</p> <p>&lt;nlength&gt; max. length of phone number, normally 20, for a small number of locations 40</p> <p>&lt;tlength&gt; max. length of text assigned to phone number (depending on storage type 16 - 18 characters including blanks)</p>
<p>Execute command</p> <p>AT+CPBR=&lt;index1&gt;[,&lt;index2&gt;]</p>	<p>Response</p> <p>TA returns phonebook entries in location number range &lt;index1&gt; ... &lt;index2&gt; from the current phonebook memory storage selected with +CPBS. If &lt;index2&gt; is left out, only location &lt;index1&gt; is returned.</p> <p>+CPBR: &lt;index1&gt;, &lt;number&gt;, &lt;type&gt;, &lt;text&gt;[&lt;CR&gt;&lt;LF&gt;]+CPBR: .....+CPBR: &lt;index2&gt;, &lt;number&gt;, &lt;type&gt;, &lt;text&gt;] OK</p> <p>If error is related to ME functionality:</p> <p>+CME ERROR</p> <p>Parameter</p> <p>&lt;index1&gt; location number where reading starts</p> <p>&lt;index2&gt; location number where reading ends</p> <p>&lt;number&gt; phone number</p> <p>&lt;type&gt; type of address octet in integer format; 145 when dialling string includes international access code character "+", otherwise 129.</p> <p>&lt;text&gt; string type field of maximum length &lt;tlength&gt;. Character set as specified with +CSCS.</p>
<p>Example</p>	<ol style="list-style-type: none"> <li>First, run the <i>Test command</i> to find out the maximum range of entries stored in the active phonebook:  AT+CPBR=?  TA returns the supported values in the format: +CPBR: (1-100),20,17 where 100 is the supported range of location numbers, 20 is the length of the phone number and 17 is the maximum length of the text associated text.</li> <li>Now, run the <i>Execute command</i> to display the phonebook entries sorted by location numbers.  AT+CPBR =1,100  +CPBR 1,"+999999",145,"Charlie"  +CPBR: 2,"+777777",145,"Bill"  +CPBR: 3,"+888888",145,"Arthur" .....</li> </ol>
<p>Reference</p> <p>GSM 07.07</p>	<p>Note</p>

### 4.33 AT+CPBS Select phonebook memory storage

Test command AT+CPBS=?	<p>Response</p> <p>+CPBS: (list of supported &lt;storage&gt;s) OK</p> <p>If error is related to ME functionality: +CME ERROR: &lt;err&gt;</p> <p>Parameter</p> <p>See write command</p>
Read command AT+CPBS?	<p>Response</p> <p>TA returns currently selected memory: +CPBS: &lt;storage&gt;,&lt;used&gt;,&lt;total&gt; OK</p> <p>If error is related to ME functionality: +CME ERROR: &lt;err&gt;</p> <p>Parameter</p> <p>See write command</p>
Write command AT+CPBS= <storage>	<p>Response</p> <p>TA selects current phonebook memory storage, which is used by other phonebook commands. OK</p> <p>If error is related to ME functionality: +CME ERROR: &lt;err&gt;</p>
	<p>Parameter</p> <p>&lt;storage&gt;    "SM"   SIM phonebook (storage depends on SIM Card)</p> <p>              "FD"   SIM fixdialling phonebook (FD Phonebook storage pos.1-7).                  If the mobile is locked to FD, only the numbers stored to the                  FD memory can be dialled. To edit the FD phonebook PIN 2                  is required. See AT+CLCK Facility lock, AT^SLCK Facility                  lock and AT+CPIN2 Enter PIN2.</p> <p>              "LD"   SIM last-dialling-phonebook (LD Phonebook storage pos.1-                  10) (+CPBW not be applicable to this storage)</p> <p>              "MC"   ME missed (unanswered received) calls (MC Phonebook                  storage pos.1-10) list (+CPBW not applicable to this storage)</p> <p>              "RC"   ME received calls list (+CPBW not applicable for this stor-                  age) (RC Phonebook storage pos.1-10)</p> <p>              "ON"   SIM (or ME) own numbers (MSISDNs) list</p> <p>              "ME"   ME Phonebook (storage pos.1-50)</p> <p>&lt;used&gt;       Integer type value indicating the number of used locations in se-                  lected memory</p> <p>&lt;total&gt;       Integer type value indicating the maximum number of locations al-                  lowed in the selected memory</p>
Reference GSM 07.07	<p>Note</p> <p>This command can be used right after power-on to get selected &lt;storage&gt;. Since data need to be loaded from the SIM, values of &lt;used&gt; and &lt;total&gt; might not be available for the first 20 seconds.</p>

#### 4.34 AT+CPBW Write phonebook entry

<p>Test command</p> <p>AT+CPBW=?</p>	<p>Response</p> <p>TA returns location range supported by the current storage, the maximum length of &lt;number&gt; field, supported number formats of the storage and the maximum length of &lt;text&gt; field.</p> <p>Note: The length may not be available while SIM storage is selected. If storage does not offer format information, the format list should be empty parentheses.</p> <p>+CPBW: (list of supported &lt;index&gt;s), &lt;nlength&gt;, (list of supported &lt;type&gt;s), &lt;tlength&gt; OK</p> <p>If error is related to ME functionality: +CME ERROR: &lt;err&gt;</p> <p>Parameter</p> <p>See write command.</p>
<p>Write command</p> <p>AT+CPBW= [&lt;index&gt;] [,&lt;number&gt; [,&lt;type&gt;] [,&lt;text&gt;]]]</p>	<p>This command writes a phonebook entry to the memory location &lt;index&gt; of the active memory.</p> <p>The memory location number &lt;index&gt; is followed by the phone number &lt;number&gt; (in the format &lt;type&gt;) and the associated &lt;text&gt;.</p> <p>If writing fails, an ME error +CME ERROR: &lt;err&gt; is returned.</p> <p>Parameter</p> <p>&lt;index&gt; Location number within phonebook memory, total range is given in test command response</p> <p>&lt;number&gt; Phone number, maximum length is given as &lt;nlength&gt; in test command response</p> <p>&lt;type&gt; Type of phone number (address octet in integer format); 145 when dialling string includes international access code character "+", otherwise 129 (refer GSM 04.08 subclause 10.5.4.7)</p> <p>&lt;text&gt; Text assigned to the phone number, maximum length is given in test command response &lt;tlength&gt;. Character set as specified with +CSCS. See note below.</p> <p>&lt;nlength&gt; Max. length of phone number, normally 20, for a small number of locations 40</p> <p>&lt;tlength&gt; Max. length of text assigned to phone number (depending on storage type 16 - 18 characters including blanks)</p> <p>Response</p> <p><b>OK/ERROR/+CME ERROR</b></p> <p>To delete a phonebook entry simply enter the location number: AT+CPBW=&lt;index&gt;</p> <p>To write a phonebook entry to the first free location number: AT+CPBW=,&lt;number&gt;,&lt;type&gt;,&lt;text&gt;</p>
<p>Reference</p> <p>GSM 07.07</p>	<p>Note</p> <p>If &lt;text&gt; contains characters which are coded differently in ASCII and GSM (e.g. Ä, Ö, Ü), these characters have to be entered via escape sequences as described in Chapter 1.5.</p>

### 4.35 AT+CPIN Enter PIN

Test command AT+CPIN=?	Response <b>OK</b>																		
Read command AT+CPIN?	<p>Response</p> <p>TA returns an alphanumeric string indicating whether or not a password is required.</p> <p><b>+CPIN: &lt;code&gt; OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p> <p>Parameter <b>&lt;code&gt;</b></p> <p><u>SIM PIN authentication</u></p> <table> <tr> <td>READY</td><td>PIN has already been entered. No further entry needed.</td></tr> <tr> <td>SIM PIN</td><td>ME is waiting for SIM PIN1.</td></tr> <tr> <td>SIM PUK</td><td>ME is waiting for SIM PUK1 if PIN1 was disabled after three failed attempts to enter PIN1.</td></tr> <tr> <td>SIM PIN2</td><td>ME is waiting for PIN2, when the attempt to access PIN2 requiring features was acknowledged with +CME ERROR:17 (e.g. if client attempts to edit the FD phonebook).</td></tr> <tr> <td>SIM PUK2</td><td>ME is waiting for PUK2 to unblock a disabled PIN2. Necessary if preceding command was acknowledged with error +CME ERROR:18.</td></tr> </table> <p><u>Phone security locks set by client or factory</u></p> <table> <tr> <td>PH-SIM PIN</td><td>ME is waiting for phone-to-SIM card password if "PS" lock is active and user inserts other SIM card than the one used for the lock. ("PS" lock is also referred to as phone or antitheft lock).</td></tr> <tr> <td>PH-SIM PUK</td><td>ME is waiting for Master Phone Code, if the above "PS" lock password was incorrectly entered three times.</td></tr> </table> <p><u>Factory set SIM locks</u></p> <table> <tr> <td>PH-FSIM PIN</td><td>ME is waiting for phone-to-very-first-SIM card. Necessary when "PF" lock was set. When powered up the first time, ME locks itself to the first SIM card put into the card holder. As a result, operation of the mobile is restricted to this one SIM card (unless the PH-FSIM PUK is used as described below).</td></tr> <tr> <td>PH-FSIM PUK</td><td>ME is waiting for phone-to-very-first-SIM card unblocking password to be given. Necessary when "PF" lock is active and other than first SIM card is inserted.</td></tr> </table>	READY	PIN has already been entered. No further entry needed.	SIM PIN	ME is waiting for SIM PIN1.	SIM PUK	ME is waiting for SIM PUK1 if PIN1 was disabled after three failed attempts to enter PIN1.	SIM PIN2	ME is waiting for PIN2, when the attempt to access PIN2 requiring features was acknowledged with +CME ERROR:17 (e.g. if client attempts to edit the FD phonebook).	SIM PUK2	ME is waiting for PUK2 to unblock a disabled PIN2. Necessary if preceding command was acknowledged with error +CME ERROR:18.	PH-SIM PIN	ME is waiting for phone-to-SIM card password if "PS" lock is active and user inserts other SIM card than the one used for the lock. ("PS" lock is also referred to as phone or antitheft lock).	PH-SIM PUK	ME is waiting for Master Phone Code, if the above "PS" lock password was incorrectly entered three times.	PH-FSIM PIN	ME is waiting for phone-to-very-first-SIM card. Necessary when "PF" lock was set. When powered up the first time, ME locks itself to the first SIM card put into the card holder. As a result, operation of the mobile is restricted to this one SIM card (unless the PH-FSIM PUK is used as described below).	PH-FSIM PUK	ME is waiting for phone-to-very-first-SIM card unblocking password to be given. Necessary when "PF" lock is active and other than first SIM card is inserted.
READY	PIN has already been entered. No further entry needed.																		
SIM PIN	ME is waiting for SIM PIN1.																		
SIM PUK	ME is waiting for SIM PUK1 if PIN1 was disabled after three failed attempts to enter PIN1.																		
SIM PIN2	ME is waiting for PIN2, when the attempt to access PIN2 requiring features was acknowledged with +CME ERROR:17 (e.g. if client attempts to edit the FD phonebook).																		
SIM PUK2	ME is waiting for PUK2 to unblock a disabled PIN2. Necessary if preceding command was acknowledged with error +CME ERROR:18.																		
PH-SIM PIN	ME is waiting for phone-to-SIM card password if "PS" lock is active and user inserts other SIM card than the one used for the lock. ("PS" lock is also referred to as phone or antitheft lock).																		
PH-SIM PUK	ME is waiting for Master Phone Code, if the above "PS" lock password was incorrectly entered three times.																		
PH-FSIM PIN	ME is waiting for phone-to-very-first-SIM card. Necessary when "PF" lock was set. When powered up the first time, ME locks itself to the first SIM card put into the card holder. As a result, operation of the mobile is restricted to this one SIM card (unless the PH-FSIM PUK is used as described below).																		
PH-FSIM PUK	ME is waiting for phone-to-very-first-SIM card unblocking password to be given. Necessary when "PF" lock is active and other than first SIM card is inserted.																		

	<p>PH-NET PIN ME is waiting for network personalisation password</p> <p>PH-NET PUK ME is waiting for network personalisation unblocking password</p> <p>PH-NS PIN ME is waiting for network subset personalisation password</p> <p>PH-NS PUK ME is waiting for network subset unblocking password</p> <p>PH-SP PIN ME is waiting for service provider personalisation password</p> <p>PH-SP PUK ME is waiting for service provider personalisation unblocking password</p> <p>PH-C PIN ME is waiting for corporate personalisation password</p> <p>PH-C PUK ME is waiting for corporate personalisation unblocking password</p> <p>See Chapters 4.21 and 8.13 for information on lock types.</p>
<p>Write command</p> <p>AT+CPIN=&lt;pin&gt; [,&lt;new pin&gt;]</p>	<p>Response</p> <p>The write command lets the ME store the entered password. This may be for example the SIM PIN1 to register to the GSM network, or the SIM PUK1 to replace a disabled PIN with a new one, or the PH-SIM PIN if the client has taken precautions for preventing damage in the event of loss or theft etc. See above for the list of passwords.</p> <p><b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p> <p>If no PIN request is pending (for example if PIN authentication has been done and the same PIN is entered again) ME responds <b>+CME ERROR: operation not allowed</b>. No action is required from your part.</p> <p>Parameter</p> <p><b>&lt;pin&gt;</b> password (string type), usually SIM PIN1. If the requested password was a PUK, such as SIM PUK1 or PH-SIM PUK or PH-FSIM PUK or another password, then &lt;pin&gt; must be followed by &lt;newpin&gt;.</p> <p><b>&lt;new pin&gt;</b> if the requested code was a PUK: specify a new password or restore the former disabled password. See Chapter 4.35.1 for more information about when you may need to enter the PUK.</p>
<p>Reference</p> <p>GSM 07.07</p>	<p>Note</p> <ul style="list-style-type: none"> <li>Caution: After entering a password with AT+CPIN all other commands that need access to data on the SIM card may be blocked for up to 20 seconds!</li> <li>Successful PIN authentication only confirms that the entered PIN was recognized and correct. The output of the result code <b>OK</b> does not necessarily imply that the mobile is registered to the desired network.</li> </ul> <p>Typical example: PIN was entered and accepted with <b>OK</b>, but the ME fails to register to the network. This may be due to missing network coverage, denied network access with currently used SIM card, no valid roaming agreement between home network and currently available operators etc.</p>



MC35 offers various options to verify the present status of network registration: For example, the AT+COPS? (Chapter 4.30) command indicates the currently used network. With AT+CREG (Chapter 4.41) you can also check the current status and activate an unsolicited result code which appears whenever the status of the network registration changes (e.g. when the ME is powered up, or when the network cell changes).

- Wait 10 seconds after PIN input before using SMS related commands.
- <pin> and <new pin> can also be entered in quotation marks (e.g. "1234").
- To check the number of remaining attempts to enter the passwords use the AT^SPIC command. See Chapter 8.32.
- See also Chapter 9.2 "Summary of PIN requiring AT Commands".
- See Chapters 4.38 and 8.36 for information on passwords.

### 4.35.1 What to do if PIN or password authentication fails?

**PIN1 / PUK1:** After three failures to enter PIN 1, the SIM card is blocked (except for emergency calls). To unblock the SIM card, the client needs to enter the associated PUK (= PIN Unblocking Key / Personal Unblocking Key). After ten failed attempts to enter the PUK, the SIM card will be invalidated and no longer operable. In such a case, the card needs to be replaced.

To unblock a disabled PIN1, use the AT+CPIN command and enter the PUK when prompted by the response +CME ERROR: 12. Alternatively, you can use the ATD command followed by the GSM code `**05*PUK*newPIN*newPIN#`.

**PIN2 / PUK2:** PIN2 prevents unauthorized access to the features listed in Chapter 4.36. The handling of PIN2 varies with the provider. PIN2 may either be a specific code supplied along with an associated PUK2, or a default code such as 0000. In either case, the client is advised to replace it with an individual code. Incorrect input of PUK2 will permanently block the additional features subject to PIN2 authentication, but usually has no affect on PIN1.

To unblock a disabled PIN2, use the AT+CPIN command and enter the PUK2 when prompted by the response +CPIN: SIM PUK2 or after the equivalent error code: +CME ERROR: 18 was returned. Alternatively, you can use the ATD command followed by the GSM code `**052*PUK*newPIN*newPIN#`.

**Phone lock:** If the mobile was locked to a specific SIM card (= "PS" lock or phone lock), the PUK that came with the SIM card cannot be used to remove the lock. After three failed attempts to enter the correct password, ME returns +CPIN: PH-SIM PUK (= response to read command AT+CPIN?), i.e. it is now waiting for the Master Phone Code. This is an 8-digit device code associated to the IMEI number of the mobile which can only be obtained from the manufacturer or provider. When needed, contact Siemens AG and request the Master Phone Code of the specific module.

There are three ways to enter the Master Phone code:

- You can send it with ATD followed by `*#0003*<number>#`.
- You can enter the Master Phone Code when prompted after input of AT+CPIN. For instructions see the examples provided in Chapter 4.21.2).
- As an alternative, you can use the AT+CPWD command and specify a new password for `<fac>="PS"`. To do so, enter the Master Phone Code for `<oldpwd>` followed by `<newpwd>`, where `<newpwd>` may be the former disabled "PS" password or a new one (see examples in Chapters 4.21.2 and 4.38).

Usually, the Master Phone Code will be supplied by mail or e-mail. If the received number is enclosed in the `*#` codes typically used for the ATD option, it is important to crop the preceding `*#0003*` characters and the appended `#`.

Example: You may be given the string `*#0003*12345678#`. When prompted for the PH-SIM PUK simply enter 12345678.

If incorrectly input, the Master Phone Code is governed by a specific timing algorithm:  $(n-1) \cdot 256$  seconds (see table below). The timing should be considered by system integrators when designing an individual MMI.

Table 10: Timing algorithm of incorrect password input

Number of failed attempts	Time to wait before next input is allowed
1 <sup>st</sup> failed attempt	No time to wait
2 <sup>nd</sup> failed attempt	4 seconds
3 <sup>rd</sup> failed attempt	3 * 256 seconds
4 <sup>th</sup> failed attempt	4 * 256 seconds
5 <sup>th</sup> failed attempt	5 * 256 seconds
6 <sup>th</sup> failed attempt and so forth	6 * 256 seconds and so forth

- 
- SIM locks:** These are factory set locks, such as "PF", "PN", "PU", "PP", "PC". An 8-digit unlocking code is required to operate the mobile with a different SIM card, or to lift the lock. The code can only be obtained from the provider.  
Failure to enter the password is subject to the same timing algorithm as the Master Phone Code (see Table 10).
- Call barring:** Supported modes are "AO", "OI", "OX", "AI", "IR", "AB", "AG", "AC". If the call barring password is entered incorrectly three times, the client will need to contact the service provider to obtain a new one.
- Summary of related chapters:** Related +CME errors are listed in Chapter 9.1.1. For further instructions and examples see Chapters 4.21 (AT+CLCK Facility lock), 8.13 (AT^SLCK Facility lock, 4.38 (AT+CPWD Change password) and 8.36 (AT^SPWD Change password for a lock. A complete list of \*\*# codes is provided in Chapter 9.4.

### 4.36 AT+CPIN2 Enter PIN2

Test command AT+CPIN2=?	Response <b>OK</b>									
Read command AT+CPIN2?	Response TA returns an alphanumeric string indicating whether some password is required or not. <b>+CPIN2: &lt;code&gt; OK</b> If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b> Parameter <table><tr><td>&lt;code&gt;</td><td>READY</td><td>ME is not pending for any password</td></tr><tr><td></td><td>SIM PIN2</td><td>ME is waiting for SIM PIN2. This &lt;code&gt; is returned only when PIN2 authentication has not yet been done or has failed (+CME ERROR:17).</td></tr><tr><td></td><td>SIM PUK2</td><td>ME is waiting for SIM PUK2. This &lt;code&gt; is returned only when PIN2 authentication has failed and ME is pending for SIM PUK2 (i.e. +CME ERROR:18).</td></tr></table>	<code>	READY	ME is not pending for any password		SIM PIN2	ME is waiting for SIM PIN2. This <code> is returned only when PIN2 authentication has not yet been done or has failed (+CME ERROR:17).		SIM PUK2	ME is waiting for SIM PUK2. This <code> is returned only when PIN2 authentication has failed and ME is pending for SIM PUK2 (i.e. +CME ERROR:18).
<code>	READY	ME is not pending for any password								
	SIM PIN2	ME is waiting for SIM PIN2. This <code> is returned only when PIN2 authentication has not yet been done or has failed (+CME ERROR:17).								
	SIM PUK2	ME is waiting for SIM PUK2. This <code> is returned only when PIN2 authentication has failed and ME is pending for SIM PUK2 (i.e. +CME ERROR:18).								
Write command AT+CPIN2=<pin>[,<new pin>]	Response The write command lets the ME store the entered password. This may be for example the SIM PIN2 to benefit from the features listed below, or the SIM PUK2 to replace a disabled PIN2 with a new one. Note that PIN2 can only be entered if PIN1 authentication was done.  <b>OK</b> If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>  If the ME is requesting SIM PUK2, use <pin> to enter the PUK2, followed by <newpin> to specify your new PIN2.  Parameter <table><tr><td>&lt;pin&gt;</td><td>password (string type), usually SIM PIN2 or, if requested, SIM PUK2</td></tr><tr><td>&lt;new pin&gt;</td><td>if the requested code was SIM PUK2: new password (PIN2). See Chapter 4.35.1 for more information about when you may need to enter the PUK.</td></tr></table>	<pin>	password (string type), usually SIM PIN2 or, if requested, SIM PUK2	<new pin>	if the requested code was SIM PUK2: new password (PIN2). See Chapter 4.35.1 for more information about when you may need to enter the PUK.					
<pin>	password (string type), usually SIM PIN2 or, if requested, SIM PUK2									
<new pin>	if the requested code was SIM PUK2: new password (PIN2). See Chapter 4.35.1 for more information about when you may need to enter the PUK.									
Reference	Note Functions accessible only after PIN2 authentication: <ul style="list-style-type: none"><li>• AT+CACM: Accumulated call meter (ACM) reset or query</li><li>• AT+CAMM: Accumulated call meter maximum (ACMmax) set or query</li><li>• AT+CLCK: Facility lock to "FD" (Fixed dialling phonebook)</li><li>• AT^SLCK: Facility lock to "FD" (Fixed dialling phonebook)</li><li>• AT+CPWD: Change "P2"password</li><li>• AT^SPWD: Change "P2"password</li><li>• AT+CPUC: Price per unit and currency table</li><li>• AT+CPIN2: Enter SIM PIN2 or SIM PUK2 if requested.</li></ul> For example, SIM PIN2 will be needed when you attempt to edit the "FD" phonebook and ME returns +CME Error 17 or +CPIN: SIM PIN2.									

	Once the required <pin> has been entered correctly, PIN2 authentication code changes to READY. After 300s, a repetition of the authentication process is required (PIN2 authentication code changes from READY to SIM PIN2).
Example 1	To change PIN2: AT+CPWD=P2,0000,8888 (where 0000 = old PIN2 and 8888 = new PIN2)
Example 2	To write to "FD" phonebook: AT+CPBS="FD" OK  AT+CPBW=2,"+493012345678",145,"Charly" +CME Error 17 (access denied due to missing PIN2 authentication)  AT+CPIN2=8888 OK  AT+CPBW=2,"+493012345678",145,"Charly" OK
Example 3	To change price per unit: AT+CPUC="dm","5",8888

### 4.37 AT+CPUC Price per unit and currency table

Test command AT+CPUC=?	Response <b>OK</b>
Read command AT+CPUC?	<p>Response</p> <p>Read command returns the current parameters of PUC.</p> <p><b>+CPUC: &lt;currency&gt;, &lt;ppu&gt; OK</b></p> <p>If error is related to ME functionality:</p> <p><b>+CME ERROR: &lt;err&gt;</b></p> <p>Parameter</p> <p>See write command</p>
Write command AT+CPUC=<currency>,<ppu>[,<passwd>]	<p>Response</p> <p>Write command sets the parameters of Advice of Charge related price per unit and currency table. SIM PIN2 is usually required to set the parameters.</p> <p>If error is related to ME functionality:</p> <p><b>+CME ERROR: &lt;err&gt;</b></p> <p>Parameter</p> <p><b>&lt;currency&gt;</b> string type; three-character currency code (e.g. "GBP", "DEM"); character set as specified with AT+CSCS. If the currency name is longer than three characters, all characters will be cut off after the third position. Before they are written to the SIM Card, these characters are converted to the standard GSM alphabet.</p> <p><b>&lt;ppu&gt;</b> string type; price per unit; dot is used as a decimal separator (e.g. "2.66"). The length is limited to 20 characters. If the string length is exceeded, the command is terminated with an error. This string may only contain digits and a dot. Leading zeros are removed from the string. The minimum and maximum value are determined by the structure of the SIM-PUCT file. The maximum price per unit value is 999 999 999.00. When successfully entered, this value is rounded to maximum accuracy.</p> <p>Note: Due to storage in mantisse (range 0-4095) and exponent (-7 to 7) it is possible that rounding errors occur.</p> <p><b>&lt;passwd&gt;</b> string type; SIM PIN2. String parameter which can contain any combination of characters. The maximum string length is limited to 8 characters. If this value is exceeded, the command terminates with an error message. If the PIN2 is incorrect, a CME error (<b>+CME ERROR: incorrect password</b>) is output.</p>
Reference GSM 07.07	Note

### 4.38 AT+CPWD Change password

Use this command when you want to

- change PIN1 or PIN2
- change the password supplied from your provider for call barring
- set individual phone security passwords

See Chapters 4.21 and 8.13 for more information on the various lock features. The AT^SPWD command is a Siemens defined command equivalent to AT+CPWD. See Chapter 8.36.

Test command AT+CPWD=?	<p>Response</p> <p>TA returns a list of pairs which represent the available facilities and the maximum length of the associated password. <b>+CPWD:</b> (list of supported (&lt;fac&gt;, &lt;pwdlength&gt;)s) <b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR:</b> &lt;err&gt;</p> <p>Parameter</p> <p>&lt;fac&gt;            see execute command &lt;pwdlength&gt;   integer max. length of password</p>
Execute command AT+CPWD = <fac>, [<oldpwd>], <newpwd>	<p>Response</p> <p>TA sets a new password for the facility lock function. <b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR:</b> &lt;err&gt;</p> <p>Parameter</p> <p>&lt;fac&gt;   <u>Phone security locks set by manufacturer or client:</u>              "SC"   SIM (lock SIM card). SIM asks SIM PIN1 when ME is switched on and when this lock command is issued.              "P2"   SIM PIN2. Used to access the functions listed in Chapter 4.36.              "PS"   Phone locked to SIM (device code). The "PS" password may either be individually specified by the client or, depending on the subscription, supplied from the provider (e.g. with a prepaid mobile).</p> <p>Note:   Each, SIM PIN1 and SIM PIN2 are assigned a PUK to unblock a disabled PIN.              The "PS" password, however, is never associated with a PUK. If it is incorrectly entered three times, the Master Phone Code is required. See Chapter 4.35.1</p> <p><u>Locks set by the manufacturer:</u>              "PF"   lock Phone to the very first SIM card              "PN"   Network Personalisation              "PU"   Network-subset Personalisation              "PP"   Service-Provider Personalisation              "PC"   Corporate Personalisation</p> <p>Note:   Typical examples of factory set locks are prepaid phones or network locks (e.g. if the operation of a mobile is restricted to a specific provider or operator). The locks can only be set by the manufacturer and need to be agreed upon between the parties</p>

	<p>concerned, e.g. provider, operator, distributor etc. on the one side and the manufacturer on the other side. For details contact your local dealer or Siemens AG.</p> <p>The client should be aware that each of these lock types can only be unlocked if the associated password is available. See Chapter 4.35 and 4.35.1 for further instructions.</p> <p><u>Supplementary Service: Call barring</u></p> <p>"AO" BAOC (Bar All Outgoing Calls)</p> <p>"OI" BOIC ( Bar Outgoing International Calls)</p> <p>"OX" BOIC-exHC ( Bar Outgoing International Calls except to Home Country)</p> <p>"AI" BAIC (Bar All Incoming Calls)</p> <p>"IR" BIC-Roam (Bar Incoming Calls when Roaming outside the home country)</p> <p>"AB" All Barring services (applicable only for &lt;mode&gt; = 0)</p> <p>"AG" All outGoing barring services (applicable only for &lt;mode&gt; = 0)</p> <p>"AC" All inComing barring services (applicable only for &lt;mode&gt; = 0)</p> <p>Note: The availability of the Supplementary Services varies with the network. To benefit from call barring the client will need to subscribe them, though a limited number of call barring types may be included in the basic tariff package. Call barring is protected by a password supplied from the provider or operator. Usually there is <u>one</u> password which applies to all call barring options. For details contact your provider.</p> <p>&lt;oldpwd&gt; password specified for the facility. Can be ignored if no old password was allocated to the facility. Take into account that a password may have already been set by factory, or that the service is subject to a password issued by the provider. See notes above or contact provider. if &lt;fac&gt; = "SC" then PIN if &lt;fac&gt; = "AO"... "AC" (barring) then network password (if needed) if &lt;fac&gt; = "P2" then PIN2 if &lt;fac&gt; = "PS" then password</p> <p>&lt;newpwd&gt; new password</p> <p>To delete a password use the following syntax: <b>at+cpwd=&lt;fac&gt;,&lt;oldpwd&gt;</b></p>
Reference GSM 07.07	<p>Note</p> <p>CAUTION: After three attempts to enter a false PIN you will be prompted to enter the PUK. Failure to enter the PUK will permanently diasble the SIM card. See Chapter 4.35.1 for more information.</p>
Example 1	<p>To change PIN2: AT+CPWD=P2, 0000, 8888 (where 0000 = old PIN2 and 8888 = new PIN2)</p>
Example 2	<p>To set password used to enable or disable barring of all outgoing calls: AT+CPWD=ao, 0000, 3333</p>



Example 3	<p>To change the "PS" lock password, using the correct old password: <code>AT+CPWD=PS,1111,2222</code> (where 1111 = old "PS" password and 2222 = new password)</p> <p>To specify a new "PS" lock password, after the old password was disabled, e.g. after three failed attempts to enter the password (only if Master Phone Code is available): <code>AT+CPWD=PS,12345678,1111</code> (where 12345678 is the Master Phone code and 1111 is the new password. You may also use &lt;newpwd&gt; to restore the former disabled password). This operation deactivates the present phone lock and sets a new one. See also Chapter 4.35.1.</p> <p>Alternatively, without giving a new password: <code>AT+CPWD=PS,12345678</code> Deactivates the present phone lock.</p>
-----------	---

#### 4.39 AT+CR Service reporting control

Test command AT+CR=?	<p>Response</p> <p><b>+CR:</b> (list of supported &lt;mode&gt;s) <b>OK</b></p> <p>Parameter</p> <p>See write command</p>
Read command AT+CR?	<p>Response</p> <p><b>+CR:</b> &lt;mode&gt; <b>OK</b></p> <p>Parameter</p> <p>See write command</p>
Write command AT+CR=<mode>	<p>Response</p> <p>Configures the TA whether or not to transmit an intermediate result code <b>+CR:</b> &lt;serv&gt; to TE when a call is being set up.</p> <p><b>OK</b></p> <p>Parameter</p> <p>&lt;mode&gt; 0 disable 1 enable</p>
	<p>Intermediate result code</p> <p>If enabled, an intermediate result code is transmitted at the point during connect negotiation when the TA has determined the speed and quality of service to be used, before any error control or data compression reports are transmitted, and before any final result code (e.g. CONNECT) appears.</p> <p><b>+CR:&lt;serv&gt;</b></p> <p>Parameter</p> <p>&lt;serv&gt; REL ASYNC asynchronous non-transparent</p>
Reference GSM 07.07	<p>Note</p> <p>The PLMN influences the second air interface (to the terminator), therefore another mode may be established from the network</p>

#### 4.40 AT+CRC Set Cellular Result Codes for incoming call indication

Test command AT+CRC=?	Response +CRC: (list of supported <mode>s) OK Parameter See write command
Read command AT+CRC?	Response +CRC: <mode> OK Parameter See write command
Write command AT+CRC= [<mode>]	Response Specifies whether or not to use the extended format of incoming call indication. OK Parameters <mode> 0 disable extended format 1 enable extended format
	Unsolicited result code If enabled, the unsolicited result code +CRING: <type> replaces the normal RING code to indicate the incoming call and the type of the call.  Parameter <type> REL ASYNC asynchronous non-transparent FAX facsimile VOICE voice
Reference GSM 07.07	Note

#### 4.41 AT+CREG Network registration

Test command AT+CREG=?	<p>Response <b>+CREG:</b> (list of supported &lt;n&gt;s) <b>OK</b></p> <p>Parameter See write command</p>
Read command AT+CREG?	<p>ME returns the URC presentation mode &lt;n&gt; and an integer &lt;stat&gt; that shows the registration status of the ME. The location information elements &lt;lac&gt; and &lt;ci&gt; are returned only when &lt;n&gt;=2 and ME is registered to the network.</p> <p>Response <b>+CREG:</b> &lt;n&gt;,&lt;stat&gt;[,&lt;lac&gt;,&lt;ci&gt;] <b>OK</b></p> <p>or if an error occurs which is related to ME functionality: <b>+CME ERROR:</b> &lt;err&gt; (for error text see Chapter 9.1.1. or set AT+CME=2)</p>
Write command AT+CREG= [<n>]	<p>Use the write command to select the type of URC. Two types of URCs are available: <b>+CREG:</b> &lt;stat&gt; if &lt;n&gt;=1. To be issued when the ME's network registration status changes or <b>+CREG:</b> &lt;stat&gt;[,&lt;lac&gt;,&lt;ci&gt;] if &lt;n&gt;=2. To be issued when ME's network registration or network cell changes.</p> <p>Response <b>OK</b></p> <p>or if an error occurs which is related to ME functionality: <b>+CME ERROR:</b> &lt;err&gt;</p> <p>&lt;err&gt;            256    If &lt;n&gt; = 0: Attempt to set once again &lt;n&gt;=0 causes error code 256.                               If &lt;n&gt; &gt; 0: Attempt to activate a URC mode that is already active is acknowledged with OK.</p> <p>Parameter</p> <p>&lt;n&gt;            0        disable URCs                  1        enable URC <b>+CREG:&lt;stat&gt;</b> to report status of network registration                  2        enable URC <b>+CREG:&lt;stat&gt;[,&lt;lac&gt;,&lt;ci&gt;]</b> to report status of network registration including location information. Please note that optional parameters will not be displayed during call.</p> <p>&lt;stat&gt;        0        not registered, ME is currently not searching for new operator                  1        registered, home network                  2        not registered, but ME is currently searching for a new operator                  3        registration denied                  4        unknown                  5        registered, roaming</p> <p>&lt;lac&gt;        string type; two byte location area code in hexadecimal format (e.g. "00C3" equals 193 in decimal)</p> <p>&lt;ci&gt;        string type; two byte cell ID in hexadecimal format</p>

	<p>Unsolicited result code</p> <p>If <b>&lt;n&gt;=1</b> and there is a change in the ME network registration status: <b>+CREG: &lt;stat&gt;</b></p> <p>If <b>&lt;n&gt;=2</b> and there is a change in the ME network registration status or a change of the network cell: <b>+CREG: &lt;stat&gt;[,&lt;lac&gt;,&lt;ci&gt;]</b></p>									
Reference GSM 07.07	<p>Note</p> <p>Optional parameters will not be displayed during a call.</p>									
Example	<table><tr><td>AT+CREG=2 OK</td><td>Activates extended URC mode.</td></tr><tr><td>AT+COPS=0 OK</td><td>Forces ME to automatically search network operator.</td></tr><tr><td>+CREG: 2</td><td>URC reports that ME is currently searching.</td></tr><tr><td>+CREG: 1, "0145", "291A"</td><td>URC reports that operator has been found.</td></tr></table>		AT+CREG=2 OK	Activates extended URC mode.	AT+COPS=0 OK	Forces ME to automatically search network operator.	+CREG: 2	URC reports that ME is currently searching.	+CREG: 1, "0145", "291A"	URC reports that operator has been found.
AT+CREG=2 OK	Activates extended URC mode.									
AT+COPS=0 OK	Forces ME to automatically search network operator.									
+CREG: 2	URC reports that ME is currently searching.									
+CREG: 1, "0145", "291A"	URC reports that operator has been found.									

#### 4.42 AT+CRLP Select radio link protocol param. for orig. non-transparent data call

Test command AT+CRLP=?	Response TA returns values supported by the TA as a compound value. +CRLP: (list of supported <iws>s), (list of supported <mws>s), (list of supported <T1>s), (list of supported <N2>s) OK Parameter See write command															
Read command AT+CRLP?	Response TA returns current settings for the supported RLP version 0. +CRLP: <iws>,<mws>,<T1>,<N2>[,<verx>] OK Parameter See write command															
Write command AT+CRLP= [<iws> [,<mws> [,<T1> [,<N2 >]]]]	Response TA sets radio link protocol (RLP) parameters used when non-transparent data calls are originated. OK Parameter <table><tr><td>&lt;iws&gt;</td><td>0-<u>61</u></td><td>Interworking window size (IWF to MS)</td></tr><tr><td>&lt;mws&gt;</td><td>0-<u>61</u></td><td>Mobile window size (MS to IWF)</td></tr><tr><td>&lt;T1&gt;</td><td>48-<u>78</u>-255</td><td>Acknowledgement timer (T1 in 10 ms units)</td></tr><tr><td>&lt;N2&gt;</td><td>1-<u>6</u>-255</td><td>Re-transmission attempts N2</td></tr><tr><td>&lt;verx&gt;</td><td>0</td><td>RLP version number in integer format; when version indication is not present it shall equal 0.</td></tr></table>	<iws>	0- <u>61</u>	Interworking window size (IWF to MS)	<mws>	0- <u>61</u>	Mobile window size (MS to IWF)	<T1>	48- <u>78</u> -255	Acknowledgement timer (T1 in 10 ms units)	<N2>	1- <u>6</u> -255	Re-transmission attempts N2	<verx>	0	RLP version number in integer format; when version indication is not present it shall equal 0.
<iws>	0- <u>61</u>	Interworking window size (IWF to MS)														
<mws>	0- <u>61</u>	Mobile window size (MS to IWF)														
<T1>	48- <u>78</u> -255	Acknowledgement timer (T1 in 10 ms units)														
<N2>	1- <u>6</u> -255	Re-transmission attempts N2														
<verx>	0	RLP version number in integer format; when version indication is not present it shall equal 0.														
Reference GSM 07.07	Note <ul style="list-style-type: none"><li>• RLP version 0: single-link basic version;</li><li>• RLP version 1: single-link extended version (e.g. extended by data compression);</li><li>• RLP version 2: multi-link version.</li><li>• Compression and multi-link are not supported.</li></ul>															

#### 4.43 AT+CRSM Restricted SIM access

Test command AT+CRSM=?	Response <b>OK</b>												
Write command AT+CRSM=<command>[,<fileId> [,<P1>,<P2>,<P3> [,<data>]]]	<p>By using this command the TE has access to the SIM database. SIM access is restricted to the commands which are listed below.</p> <p>As response to the command the ME sends the current SIM information parameters and response data. ME error result code +CME ERROR may be returned when the command cannot be passed to the SIM, but failure in the execution of the command in the SIM is reported in &lt;sw1&gt; and &lt;sw2&gt; parameters.</p> <p>Response</p> <p><b>+CRSM: &lt;sw1&gt;, &lt;sw2&gt; [,&lt;response&gt;]</b>  <b>OK / ERROR / +CME ERROR: &lt;err&gt;</b></p> <p>Parameter</p> <table> <tr> <td><b>&lt;command&gt;</b></td><td>176 READ BINARY</td></tr> <tr> <td></td><td>178 READ RECORD</td></tr> <tr> <td></td><td>192 GET RESPONSE</td></tr> <tr> <td></td><td>214 UPDATE BINARY</td></tr> <tr> <td></td><td>220 UPDATE RECORD</td></tr> <tr> <td></td><td>242 STATUS</td></tr> </table> <p>all other values are reserved; refer GSM 11.11.</p> <p><b>&lt;fileId&gt;</b> integer type; this is the identifier for an elementary data file on SIM. Mandatory for every command except STATUS</p> <p><b>&lt;P1&gt;,&lt;P2&gt;,&lt;P3&gt;</b> integer type, range 0 - 255 parameters to be passed on by the ME to the SIM; refer GSM 11.11.</p> <p><b>&lt;data&gt;</b> information which shall be written to the SIM (hexadecimal character format)</p> <p><b>&lt;sw1&gt;, &lt;sw2&gt;</b> integer type, range 0 - 255 status information from the SIM about the execution of the actual command. These parameters are delivered to the TE in both cases, on successful or failed execution of the command; refer GSM 11.11.</p> <p><b>&lt;response&gt;</b> response of a successful completion of the command previously issued (hexadecimal character format)</p>	<b>&lt;command&gt;</b>	176 READ BINARY		178 READ RECORD		192 GET RESPONSE		214 UPDATE BINARY		220 UPDATE RECORD		242 STATUS
<b>&lt;command&gt;</b>	176 READ BINARY												
	178 READ RECORD												
	192 GET RESPONSE												
	214 UPDATE BINARY												
	220 UPDATE RECORD												
	242 STATUS												
Reference GSM 07.07 GSM 11.11	Note												

#### 4.44 AT+CSCS Set TE character set

Test command AT+CSCS=?	Response +CSCS: (list of supported <chset>s) <b>OK</b>
Read command AT+CSCS?	Response +CSCS: <chset> <b>OK</b>
Write command AT+CSCS=[<chset>]	Response Write command informs TA which character set <chset> is used by the TE. TA is then able to convert character strings correctly between TE and ME character sets. <b>OK</b>
	Parameters <chset>:  <b>"GSM"</b> GSM default alphabet (GSM 03.38 subclause 6.2.1); Note: This setting may cause software flow control problems since the codes used to stop and resume data flow (XOFF = decimal 19, (XON = decimal 17) are interpreted as normal characters.  <b>"UCS2"</b> 16-bit universal multiple-octet coded character set (ISO/IEC10646 [32]); UCS2 character strings are converted to hexadecimal numbers from 0000 to FFFF; e.g. "004100620063" equals three 16-bit characters with decimal values 65, 98 and 99, \$(AT R97)\$
Reference GSM 07.07	Note <ul style="list-style-type: none"> <li>Also see chapter 1.5 ("Supported character sets").</li> <li>When TA-TE interface is set to 8-bit operation and used TE alphabet is 7-bit, the highest bit will be set to zero.</li> </ul>



#### 4.45 AT+CSNS Single Numbering Scheme

The AT+CSNS command enables the ME to accept incoming calls when no bearer capability information is provided with the call, e.g. single numbering scheme calls or calls originating from analog devices.

The command must be set before the call comes. By default, when you do not modify the settings, all calls received without bearer element are assumed to be voice.

Please note that you can use the command if PIN authentication has been done during current session. The setting will be automatically saved when you power down the GSM engine with AT^SMSO.

Test command AT+CSNS=?	Response +CSNS: (list of supported <mode>s) <b>OK</b>
Read command AT+CSNS?	Response +CSNS: <mode> <b>OK</b>
Write command AT+CSNS=[<mode>]	Response Write command <b>OK</b> Parameters <mode>: <div style="margin-left: 40px;"> <u>0</u>    Voice    Each call received without bearer element is assumed to be speech.               2    Fax    Each call received without bearer element is assumed to be an incoming fax.               4    Data    Each call received without bearer element is assumed to be a data call.              Please take into account that the bearer service parameters set with AT+CBST apply to all data calls including those received without bearer capability. To avoid conflicts see Chapter 4.5.           </div>
Reference GSM 07.07	Note

#### 4.46 AT+CSQ Signal quality

Test command AT+CSQ=?	Response +CSQ: (list of supported <rss>s), (list of supported <ber>) OK Parameter See execute command														
Execute command AT+CSQ	<p>Response TA returns received signal strength indication &lt;rss&gt; and channel bit error rate &lt;ber&gt; from the ME. +CSQ: &lt;rss&gt;, &lt;ber&gt; OK</p> <p>Parameter</p> <p>&lt;rss&gt;      Receive level:</p> <table> <tr> <td>0</td><td>-113 dBm or less</td></tr> <tr> <td>1</td><td>-111 dBm</td></tr> <tr> <td>2...30</td><td>-109... -53 dBm</td></tr> <tr> <td>31</td><td>-51 dBm or greater</td></tr> <tr> <td>99</td><td>not known or not detectable</td></tr> </table> <p>&lt;ber&gt;      Bit error rate:</p> <table> <tr> <td>0...7</td><td>as RXQUAL values in the table in GSM 05.08 section 8.2.4.</td></tr> <tr> <td>99</td><td>not known or not detectable.</td></tr> </table> <p>To check the bit error rate there must be a call in progress to obtain realistic values. If no call is set up, there is no BER to be determined. In this case the indicated value may be 0 or 99, depending on the SIM card.</p>	0	-113 dBm or less	1	-111 dBm	2...30	-109... -53 dBm	31	-51 dBm or greater	99	not known or not detectable	0...7	as RXQUAL values in the table in GSM 05.08 section 8.2.4.	99	not known or not detectable.
0	-113 dBm or less														
1	-111 dBm														
2...30	-109... -53 dBm														
31	-51 dBm or greater														
99	not known or not detectable														
0...7	as RXQUAL values in the table in GSM 05.08 section 8.2.4.														
99	not known or not detectable.														
Reference GSM 07.07	Note														

#### 4.47 AT+CSSN Supplementary service notifications

Test command AT+CSSN=?	Response +CSSN: (list of supported <n>s), (list of supported <m>s)OK Parameter  <table><tr><td>&lt;n&gt;</td><td>0</td><td>Suppresses the +CSSI messages</td></tr><tr><td></td><td>1</td><td>Activates the +CSSI messages</td></tr><tr><td>&lt;m&gt;</td><td>0</td><td>Suppresses the +CSSU messages</td></tr><tr><td></td><td>1</td><td>Activates the +CSSU messages</td></tr></table>	<n>	0	Suppresses the +CSSI messages		1	Activates the +CSSI messages	<m>	0	Suppresses the +CSSU messages		1	Activates the +CSSU messages
<n>	0	Suppresses the +CSSI messages											
	1	Activates the +CSSI messages											
<m>	0	Suppresses the +CSSU messages											
	1	Activates the +CSSU messages											
Read command AT+CSSN?	Response +CSSN: <n>,<m>OK Parameter  <table><tr><td>&lt;n&gt;</td><td>See Test command</td></tr><tr><td>&lt;m&gt;</td><td>See Test command</td></tr></table>	<n>	See Test command	<m>	See Test command								
<n>	See Test command												
<m>	See Test command												
Write command AT+CSSN=<n>[,<m>]	Response OK Parameter  <table><tr><td>&lt;n&gt;</td><td>See read command</td></tr><tr><td>&lt;m&gt;</td><td>See read command</td></tr></table>	<n>	See read command	<m>	See read command								
<n>	See read command												
<m>	See read command												
	Unexpected message  +CSSI: <code1> When <n>=1 and a supplementary service notification is received after a mobile originated call setup, intermediate result code +CSSI: <code1> is sent to TE before any other MO call setup result codes  +CSSU: <code2> When <m>=1 and a supplementary service notification is received during a mobile terminated call setup or during a call, unsolicited result code +CSSU: <code2> is sent to TE.  Parameter <table><tr><td>&lt;code1&gt;</td><td>Intermediate result code</td></tr><tr><td>3</td><td>Waiting call is pending</td></tr><tr><td>&lt;code2&gt;</td><td>Unsolicited result code</td></tr><tr><td>0</td><td>The incoming call is a forwarded call.</td></tr><tr><td>5</td><td>Held call was terminated</td></tr></table>	<code1>	Intermediate result code	3	Waiting call is pending	<code2>	Unsolicited result code	0	The incoming call is a forwarded call.	5	Held call was terminated		
<code1>	Intermediate result code												
3	Waiting call is pending												
<code2>	Unsolicited result code												
0	The incoming call is a forwarded call.												
5	Held call was terminated												
Reference GSM 07.07	Note												

#### 4.48 AT+CUSD Unstructured supplementary service data

Test command AT+CUSD=?	<p>Response</p> <p><b>+CUSD:</b> (list of supported &lt;n&gt;s) <b>OK</b></p> <p>Parameter</p> <p>See write command</p>								
Read command AT+ CUSD?	<p>Response</p> <p>TA returns the current &lt;n&gt; value.</p> <p><b>+CUSD: &lt;n&gt; OK</b></p> <p>If error is related to ME functionality:</p> <p><b>+CME ERROR: &lt;err&gt;</b></p>								
Write command AT+ CUSD= <n>[,<str>[,<dc>]]	<p>This command allows control of the Unstructured Supplementary Service Data (USSD) according to GSM 02.90. Both network and mobile initiated operations are supported. Parameter &lt;n&gt; is used to disable/enable the presentation of an unsolicited result code (USSD response from the network, or network initiated operation) <b>+CUSD:&lt;m&gt;[,&lt;str&gt;,&lt;dc&gt;]</b> to the TE.</p> <p>When &lt;str&gt; is given, a mobile initiated USSD string or a response USSD string to a network initiated operation is sent to the network. The response USSD string from the network is returned in a subsequent unsolicited <b>+CUSD</b> result code.</p> <p>The interaction of this command with other commands based on other GSM supplementary services is described in the GSM standard.</p> <p>Parameter</p> <table> <tr> <td>&lt;n&gt;</td><td> <p><u>0</u>      disable the result code presentation in the TA</p> <p>1        enable the result code presentation in the TA</p> <p>2        cancel session (not applicable to read command response)</p> </td></tr> <tr> <td>&lt;str&gt;</td><td> <p>string type USSD-string (when &lt;str&gt; parameter is not given, network is not interrogated).</p> <p>If &lt;dc&gt; indicates that GSM 03.38 default alphabet is used ME/TA converts GSM alphabet into current TE character set according to rules of GSM 07.05 Annex A.</p> </td></tr> <tr> <td>&lt;dc&gt;</td><td> <p>GSM 03.38 Cell Broadcast Data Coding Scheme in integer format (default 15)</p> </td></tr> <tr> <td>&lt;m&gt;</td><td> <p>0        no further user action required (network initiated USSD-Notify, or no further information needed after mobile initiated operation)</p> <p>1        further user action required (network initiated USSD-Request, or further information needed after mobile initiated operation)</p> <p>2        USSD terminated by network</p> </td></tr> </table> <p>Response</p> <p><b>OK</b></p> <p>If error is related to ME functionality:</p> <p><b>+CME ERROR: &lt;err&gt;</b></p>	<n>	<p><u>0</u>      disable the result code presentation in the TA</p> <p>1        enable the result code presentation in the TA</p> <p>2        cancel session (not applicable to read command response)</p>	<str>	<p>string type USSD-string (when &lt;str&gt; parameter is not given, network is not interrogated).</p> <p>If &lt;dc&gt; indicates that GSM 03.38 default alphabet is used ME/TA converts GSM alphabet into current TE character set according to rules of GSM 07.05 Annex A.</p>	<dc>	<p>GSM 03.38 Cell Broadcast Data Coding Scheme in integer format (default 15)</p>	<m>	<p>0        no further user action required (network initiated USSD-Notify, or no further information needed after mobile initiated operation)</p> <p>1        further user action required (network initiated USSD-Request, or further information needed after mobile initiated operation)</p> <p>2        USSD terminated by network</p>
<n>	<p><u>0</u>      disable the result code presentation in the TA</p> <p>1        enable the result code presentation in the TA</p> <p>2        cancel session (not applicable to read command response)</p>								
<str>	<p>string type USSD-string (when &lt;str&gt; parameter is not given, network is not interrogated).</p> <p>If &lt;dc&gt; indicates that GSM 03.38 default alphabet is used ME/TA converts GSM alphabet into current TE character set according to rules of GSM 07.05 Annex A.</p>								
<dc>	<p>GSM 03.38 Cell Broadcast Data Coding Scheme in integer format (default 15)</p>								
<m>	<p>0        no further user action required (network initiated USSD-Notify, or no further information needed after mobile initiated operation)</p> <p>1        further user action required (network initiated USSD-Request, or further information needed after mobile initiated operation)</p> <p>2        USSD terminated by network</p>								
Reference GSM 07.07	<p>Note</p> <ul style="list-style-type: none"> <li>For the write command &lt;dc&gt;=15 is supported only.</li> <li>On an unsolicited result code with parameter &lt;m&gt;=1 a '&gt;' is given for further user action. The user action is finished with a &lt;ctrl-Z&gt; or aborted with &lt;ESC&gt;.</li> </ul>								

#### 4.49 AT+VTD=<n> Tone duration

Test command AT+VTD=?	<p>This command refers to an integer <b>&lt;duration&gt;</b> that defines the length of tones transmitted with the +VTS command.</p> <p>Response <b>+VTD</b> (list of supported <b>&lt;duration&gt;s</b>) <b>OK</b></p> <p>Parameter See write command</p>
Read command AT+VTD?	<p>Response <b>&lt;duration&gt; OK</b></p> <p>Parameter See write command</p>
Write command AT+VTD= <duration>	<p>Response <b>OK</b></p> <p>Parameter <b>&lt;duration&gt;</b> <u>1</u> – 255 duration of the tone in 1/10 second</p>
Reference GSM 07.07	Note

#### 4.50 AT+VTS DTMF and tone generation (<Tone> in {0-9, \*, #, A, B, C, D})

Test command AT+VTS=?	<p>Response <b>+VTS:</b> (list of supported <b>&lt;dtmf&gt;s</b>)[, (list of supported <b>&lt;duration&gt;s</b>)] <b>OK</b></p> <p>Parameter See write command</p>
Write command	<p>Response</p> <p>The Write command is intended for sending ASCII characters or strings which cause the MSC (Mobile Switching Center) to transmit DTMF tones to a remote subscriber. The Write can only be used during an active voice call.</p>
1. AT+VTS=<dtmf-string>  2. AT+VTS=<dtmf>,<duration>	<p>1. Allows the user to send a sequence of DTMF tones with a duration that was defined with the AT+VTD command.</p> <p>2. Allows the user to send a single DTMF tone. In this case, the duration can be individually determined during the call.</p> <p><b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p> <p>Parameter</p> <p><b>&lt;dtmfstring&gt;</b> String of ASCII characters in the set 0-9,#,*,A, B, C, D. Maximal length of the string is 29. The string must be enclosed in quotation marks ("").</p> <p><b>&lt;dtmf&gt;</b> ASCII character in the set 0-9,#,*, A, B, C, D.</p> <p><b>&lt;duration&gt;</b> <u>1</u>-255 duration of a tone in 1/10 second</p>
Reference GSM 07.07	<p>Note</p> <p>The AT+VTS command is usable before PIN1 authentication has been done.</p>

**4.51 AT+WS46 Select wireless network**

Test command AT+WS46=?	Response (list of supported <n>s) <b>OK</b>
Read command AT+WS46?	Response <n> <b>OK/ERROR/+CME ERROR</b>
	Parameter <n>      12      GSM digital cellular
Write command AT+WS46=[<n>]	Response <b>OK/ERROR/+CME ERROR</b>
Reference GSM 07.07	Note

## 5 AT commands originating from GSM 07.05 for SMS

The SMS related AT Commands are according to the GSM 07.05 specification issued by ETSI (European Telecommunications Standards Institute).

### 5.1 AT+CMGC Send an SMS command

Test command AT+CMGC=?	Response <b>OK</b>
Write command if text mode (AT+CMGF=1): AT+CMGC=<fo>,<ct>[,<pid> [,<mn>[,<da>[,<toda>]]]]<CR> text is entered <ctrl-Z/ESC>	Response if text mode (+CMGF=1) and sending successful: <b>+CMGC: &lt;mr&gt;[,&lt;scts&gt;]</b> if sending fails: <b>+CMS ERROR: &lt;err&gt;</b>
Write command if PDU mode (AT+CMGF=0): AT+CMGC=<length><CR> PDU is given <ctrl-Z/ESC> +CMGC=?	Response if PDU mode (+CMGF=0) and sending successful: <b>+CMGC: &lt;mr&gt;[,&lt;ackpdu&gt;]</b> if sending fails: <b>+CMS ERROR: &lt;err&gt;</b>
	Parameter <length> Length of PDU <pdu> See "AT+CMGL" <mr> Message reference <fo> depending on the command or result code: first octet of GSM 03.40 SMS-DELIVER, SMS-SUBMIT (default 17), SMS-STATUS-REPORT, or SMS-COMMAND (default 2) in integer format <ct> GSM 03.40 TP-Command-Type in integer format (default 0) <pid> GSM 03.40 TP-Protocol-Identifier in integer format (default 0) <toda> GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format (when first character of <da> is + (IRA 43) default is 145, otherwise default is 129) <da> GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted into characters; type of address given by <toda> <scts> GSM 03.40 TP-Service-Centre-Time-Stamp in time-string format (refer to <dt> )
Reference GSM 07.05	Note <ul style="list-style-type: none"> <li>• After invoking the commands CMGW, CMGS, CMGC wait for the prompt "&gt;" before entering text or PDU.</li> <li>• At baudrates below 19200 it is recommended to use the line termination character only (refer to +ATS3, default &lt;CR&gt;, pg. 32) before entering the text/pdu. Use of the line termination character followed by the response formatting character (refer to +ATS4, default &lt;LF&gt;, pg. 32) can cause problems.</li> </ul>

## 5.2 AT+CMGD Delete SMS message

Test command AT+CMGD=?	Response <b>OK</b> Parameter
Execute command AT+CMGD= <index>	Response TA deletes message from preferred message storage <mem1> location <index>. <b>OK</b> If error is related to ME functionality: <b>+CMS ERROR &lt;err&gt;</b> Parameter <index> integer type; value in the range of location numbers supported by the associated memory
Reference GSM 07.05	Note If there is no SMS stored at the selected index, the response is OK too.

## 5.3 AT+CMGF Select SMS message format

Test command AT+CMGF=?	Response <b>+CMGF:</b> (list of supported <mode>s) <b>OK</b> Parameter See write command
Read command AT+CMGF?	Response <b>+CMGF: &lt;mode&gt; OK</b> Parameter See write command
Write command AT+CMGF = [<mode>]	Response TA sets parameter which specifies the input and output format of messages to be used. <b>OK</b> Parameter <div style="display: flex; align-items: center;"> <div style="margin-right: 20px;">&lt;mode&gt;</div> <div style="margin-right: 20px;"> <u>0</u> 1 </div> <div> PDU mode text mode </div> </div>
Reference GSM 07.05	Note



## 5.4 AT+CMGL List SMS messages from preferred store

Test command AT+CMGL=?	Response +CMGL: (list of supported <stat>s) OK  Parameter See execute command																														
Execute command AT+CMGL[= <stat>]	Parameter  1) If text mode: <table><tr><td>&lt;stat&gt;</td><td>“REC UNREAD”</td><td>Received unread messages (default)</td></tr><tr><td></td><td>“REC READ”</td><td>Received read messages</td></tr><tr><td></td><td>“STO UNSENT”</td><td>Stored unsent messages</td></tr><tr><td></td><td>“STO SENT”</td><td>Stored sent messages</td></tr><tr><td></td><td>“ALL ”</td><td>All messages</td></tr></table> <u>2) If PDU mode:</u> <table><tr><td>&lt;stat&gt;</td><td>0</td><td>Received unread messages (default)</td></tr><tr><td></td><td>1</td><td>Received read messages</td></tr><tr><td></td><td>2</td><td>Stored unsent messages</td></tr><tr><td></td><td>3</td><td>Stored sent messages</td></tr><tr><td></td><td>4</td><td>All messages</td></tr></table>  Response TA returns messages with status value <stat> from message storage <mem1> to the TE. If status of the message is ‘received unread’, status in the storage changes to ‘received read’.  Note: If the selected <mem1> can contain different types of SMs (e.g. SMS-DELIVERs, SMS- SUBMITs, SMS- STATUS-REPORTs and SMS-COMMANDs), the response may be a mix of the responses of different SM types. TE application can recognize the response format by examining the third response parameter.	<stat>	“REC UNREAD”	Received unread messages (default)		“REC READ”	Received read messages		“STO UNSENT”	Stored unsent messages		“STO SENT”	Stored sent messages		“ALL ”	All messages	<stat>	0	Received unread messages (default)		1	Received read messages		2	Stored unsent messages		3	Stored sent messages		4	All messages
<stat>	“REC UNREAD”	Received unread messages (default)																													
	“REC READ”	Received read messages																													
	“STO UNSENT”	Stored unsent messages																													
	“STO SENT”	Stored sent messages																													
	“ALL ”	All messages																													
<stat>	0	Received unread messages (default)																													
	1	Received read messages																													
	2	Stored unsent messages																													
	3	Stored sent messages																													
	4	All messages																													
	Response  <u>1) If text mode (+CMGF=1) and command successful:</u>  for SMS- SUBMITs and/or SMS-DELIVERs: +CMGL: <index>,<stat>,<oa/da>,<[alpha]>,<[scts]> ,<tooa/toda>,<length> <CR><LF><data> <CR><LF> +CMGL: <index>,<stat>,<da/oa>,<[alpha]>,<[scts]> ,<tooa/toda>,<length> <CR><LF><data>[...]  OK  for SMS-STATUS-REPORTs: +CMGL: <index>,<stat>,<fo>,<mr>,<[ra> ,<tora> ,<scts>,<dt>,<st> <CR><LF> +CMGL: <index>,<stat>,<fo>,<mr>,<[ra> ,<tora> ,<scts>,<dt>,<st>[...]  OK																														

	<p>for SMS-COMMANDS:  <b>+CMGL: &lt;index&gt;,&lt;stat&gt;,&lt;fo&gt;,&lt;ct&gt;[&lt;CR&gt;&lt;LF&gt;</b>  <b>+CMGL: &lt;index&gt;,&lt;stat&gt;,&lt;fo&gt;,&lt;ct&gt;[...]] OK</b></p> <p><u>2) If PDU mode (+CMGF=0) and command successful:</u></p> <p><b>+CMGL: &lt;index&gt;,&lt;stat&gt;,[&lt;alpha&gt;],&lt;length&gt;&lt;CR&gt;&lt;LF&gt;&lt;pdu&gt;</b>  <b>[&lt;CR&gt;&lt;LF&gt;+CMGL: &lt;index&gt;,&lt;stat&gt;,[alpha],&lt;length&gt;&lt;CR&gt;&lt;LF&gt;&lt;pdu&gt;</b>  <b>[...]] OK</b></p> <p><u>3) If error is related to ME functionality:</u>  <b>+CMS ERROR: &lt;err&gt;</b></p>
	<p>Parameter</p> <p><b>&lt;alpha&gt;</b> string type alphanumeric representation of &lt;da&gt; or &lt;oa&gt; corresponding to the entry found in phonebook; implementation of this feature is manufacturer- specific</p> <p><b>&lt;ct&gt;</b> GSM 03.40 TP-Command-Type in integer format (default 0)</p> <p><b>&lt;da&gt;</b> GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted into characters; type of address given by &lt;tda&gt;</p> <p><b>&lt;data&gt;</b>  <i>In case of SMS: GSM 03.40 TP-User-Data in text mode responses; format:</i></p> <ul style="list-style-type: none"> <li>- if <b>&lt;dcs&gt;</b> indicates that GSM 03.38 default alphabet is used and &lt;fo&gt; indicates that GSM 03.40 TP-User-Data-Header-Indication is not set: ME/TA converts GSM alphabet into current TE character set according to rules of Annex A</li> <li>- if <b>&lt;dcs&gt;</b> indicates that 8-bit or UCS2 data coding scheme is used, or &lt;fo&gt; indicates that GSM 03.40 TP-User-Data-Header-Indication is set: ME/TA converts each 8-bit octet into hexadecimal numbers containing two IRA characters (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65))</li> </ul>
	<p>Parameter</p> <p><b>&lt;dt&gt;</b> GSM 03.40 TP-Discharge-Time in time-string format: "yy/MM/dd,hh:mm:ss±zz", where characters indicate year (two last digits), month, day, hour, minutes, seconds and time zone. For example, 6th of May 1994, 22:10:00 GMT+2 hours equals "94/05/06,22:10:00+08"</p> <p><b>&lt;fo&gt;</b> depending on the command or result code: first octet of GSM 03.40 SMS-DELIVER, SMS-SUBMIT (default 17), SMS- STATUS-REPORT, or SMS -COMMAND (default 2) in integer format</p> <p><b>&lt;length&gt;</b> integer type value indicating in the text mode (+CMGF=1) the length of the message body &lt;data&gt; (or &lt;cdata&gt;) in characters; or in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length)</p> <p><b>&lt;index&gt;</b> integer type; value in the range of location numbers supported by</p>

	<p>the associated memory</p> <p><b>&lt;mr&gt;</b> GSM 03.40 TP-Message-Reference in integer format</p> <p><b>&lt;oa&gt;</b> GSM 03.40 TP-Originating-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted into characters; type of address given by &lt;tooa&gt;</p> <p><b>&lt;pdu&gt;</b> In the case of SMS: GSM 04.11 SC address followed by GSM 03.40 TPDU in hexadecimal format: ME/TA converts each octet of TP data unit into hexadecimal numbers containing two IRA characters (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)). In the case of CBS: GSM 03.41 TPDU in hexadecimal format.</p> <p><b>&lt;ra&gt;</b> GSM 03.40 TP-Recipient-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted into characters; type of address given by &lt;tora&gt;</p> <p><b>&lt;scts&gt;</b> GSM 03.40 TP- Service-Centre-Time-Stamp in time-string format (refer &lt;dt&gt;)</p> <p><b>&lt;st&gt;</b> GSM 03.40 TP-Status in integer format</p> <p><b>&lt;toda&gt;</b> GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format (when first character of &lt;da&gt; is + (IRA 43) default is 145, otherwise default is 129)</p> <p><b>&lt;tooa&gt;</b> GSM 04.11 TP-Originating-Address Type-of-Address octet in integer format (default refer&lt;toda&gt;)</p> <p><b>&lt;tora&gt;</b> GSM 04.11 TP-Recipient-Address Type-of-Address octet in integer format (default refer&lt;toda&gt;)</p>
Reference GSM 07.05	<p>Note</p> <p>The parameters &lt;ra&gt; and &lt;tora&gt; will only be displayed if AT^SSCONF=1 has been set before. See Chapter 8.38 for details on AT^SSCONF.</p>

## 5.5 AT+CMGR Read SMS message

Test command AT+CMGR=?	Response OK								
Execute command AT+CMGR= <index>	<p>Parameter &lt;index&gt; integer type; value in the range of location numbers supported by the associated memory</p> <p>Response TA returns SMS message with location value &lt;index&gt; from message storage &lt;mem1&gt; to the TE. If status of the message is 'received unread', status in the storage changes to 'received read'.</p> <p><u>1) If text mode (+CMGF=1) and command successful:</u> for SMS-DELIVER: +CMGR: &lt;stat&gt;,&lt;oa&gt;,[&lt;alpha&gt;],&lt;scts&gt; [,&lt;tooa&gt;,&lt;fo&gt;,&lt;pid&gt;,&lt;dc&gt;,&lt;sca&gt;,&lt;tosca&gt;,&lt;length&gt;]&lt;CR&gt;&lt;LF&gt;&lt;data&gt;</p> <p>for SMS-SUBMIT: +CMGR: &lt;stat&gt;,&lt;da&gt;,[&lt;alpha&gt;] [,&lt;toda&gt;,&lt;fo&gt;,&lt;pid&gt;,&lt;dc&gt;,&lt;vp&gt;],&lt;sca&gt;,&lt;tosca&gt;,&lt;length&gt;]&lt;CR&gt;&lt;LF&gt;&lt;data&gt;</p> <p>for SMS-STATUS-REPORT: +CMGR: &lt;stat&gt;,&lt;fo&gt;,&lt;mr&gt;,[&lt;ra&gt;],[&lt;tora&gt;],&lt;scts&gt;,&lt;dt&gt;,&lt;st&gt;</p> <p>for SMS- COMMAND: +CMGR: &lt;stat&gt;,&lt;fo&gt;,&lt;ct&gt; [,&lt;pid&gt;,&lt;mn&gt;],[&lt;da&gt;],[&lt;toda&gt;],&lt;length&gt;]&lt;CR&gt;&lt;LF&gt;&lt;cdata&gt;]</p> <p><u>2) If PDU mode (+CMGF=0) and command successful:</u> +CMGR: &lt;stat&gt;,[&lt;alpha&gt;],&lt;length&gt;&lt;CR&gt;&lt;LF&gt;&lt;pdu&gt; OK</p> <p><u>3) If error is related to ME functionality:</u> +CMS ERROR: &lt;err&gt;</p> <p>Parameter &lt;alpha&gt; string type alphanumeric representation of &lt;da&gt; or &lt;oa&gt; corresponding to the entry found in phonebook; implementation of this feature is manufacturer specific &lt;stat&gt; integer type in PDU mode (default 0), or string type in text mode (default "REC UNREAD"); indicates the status of message in memory: defined values:</p> <table> <tr> <td>0</td><td>"REC UNREAD" received unread message (i.e. new message)</td></tr> <tr> <td>1</td><td>"REC READ" received read message</td></tr> <tr> <td>2</td><td>"STO UNSENT" stored unsent message (only applicable to SMS)</td></tr> <tr> <td>3</td><td>"STO SENT" stored sent message (only applicable to SMS)</td></tr> </table>	0	"REC UNREAD" received unread message (i.e. new message)	1	"REC READ" received read message	2	"STO UNSENT" stored unsent message (only applicable to SMS)	3	"STO SENT" stored sent message (only applicable to SMS)
0	"REC UNREAD" received unread message (i.e. new message)								
1	"REC READ" received read message								
2	"STO UNSENT" stored unsent message (only applicable to SMS)								
3	"STO SENT" stored sent message (only applicable to SMS)								

<ct>	GSM 03.40 TP-Command-Type in integer format (default 0)
<da>	GSM 03.40 TP- Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted into characters; type of address given by <tda>
<data>	<p><i>In case of SMS: GSM 03.40 TP-User-Data in text mode responses; format:</i></p> <p>-if &lt;dc&gt; indicates that GSM 03.38 default alphabet is used and &lt;fo&gt; indicates that GSM 03.40 TP-User-Data-Header-Indication is not set: ME/TA converts GSM alphabet into current TE character set according to rules covered in Annex A</p> <p>-if &lt;dc&gt; indicates that 8-bit or UCS2 data coding scheme is used, or &lt;fo&gt; indicates that GSM 03.40 TP-User-Data-Header-Indication is set: ME/TA converts each 8-bit octet into hexadecimal numbers containing two IRA characters (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65))</p>
<dc>	depending on the command or result code: GSM 03.38 SMS Data Coding Scheme (default 0), or Cell Broadcast Data Coding Scheme in integer format
<cdata>	GSM 03.40 TP-Command-Data in text mode responses; ME/TA converts each 8-bit octet into two IRA character long hexadecimal numbers (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65))
<dt>	GSM 03.40 TP-Discharge-Time in time-string format: "yy/MM/dd,hh:mm:ss±zz", where characters indicate year (two last digits), month, day, hour, minutes, seconds and time zone. For example, 6th of May 1994, 22:10:00 GMT+2 hours equals "94/05/06,22:10:00+08"
<fo>	depending on the command or result code: first octet of GSM 03.40 SMS- DELIVER, SMS-SUBMIT (default 17), SMS-STATUS-REPORT, or SMS-COMMAND (default 2) in integer format
<length>	integer type value indicating in text mode (+CMGF=1) the length of the message body <data> (or <cdata>) in characters; or in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length).
	In text mode, the maximum length of an SMS depends on the used coding scheme: It is <b>160</b> characters if the 7 bit GSM coding scheme is used, and <b>140</b> characters according to the 8 bit GSM coding scheme.
<index>	integer type; value in the range of location numbers supported by the associated memory
<mr>	GSM 03.40 TP-Message-Reference in integer format
<oa>	GSM 03.40 TP-Originating-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted into characters; type of address given by <toa>
<pdu>	In the case of SMS: GSM 04.11 SC address followed by GSM 03.40 TPDU in hexadecimal format: ME/TA converts each octet of TP data unit into hexadecimal numbers containing two IRA characters (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)). In the case of CBS: <ra> GSM 03.40 TP-Recipient-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted into characters; type of address given by <tora>

	<p><b>&lt;pid&gt;</b> GSM 03.40 TP-Protocol-Identifier in integer format (default 0)</p> <p><b>&lt;ra&gt;</b> GSM 03.40 TP-Recipient-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (refer command AT+CSCS Select TE character set.); type of address given by <b>&lt;tora&gt;</b></p> <p><b>&lt;sca&gt;</b> GSM 04.11 RP SC address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted to characters of the currently selected TE character set (refer command AT+CSCS Select TE character set.); type of address given by <b>&lt;tosca&gt;</b></p> <p><b>&lt;scts&gt;</b> GSM 03.40 TP-Service-Centre-Time-Stamp in time-string format (refer <b>&lt;dt&gt;</b>)</p> <p><b>&lt;st&gt;</b> GSM 03.40 TP-Status in integer format</p> <p><b>&lt;toda&gt;</b> GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format (when first character of <b>&lt;da&gt;</b> is + (IRA 43) default is 145, otherwise default is 129)</p> <p><b>&lt;tooa&gt;</b> GSM 04.11 TP-Originating-Address Type-of-Address octet in integer format (default refer <b>&lt;toda&gt;</b>)</p> <p><b>&lt;tora&gt;</b> GSM 04.11 TP-Recipient-Address Type-of-Address octet in integer format (default refer <b>&lt;toda&gt;</b>)</p> <p><b>&lt;tosca&gt;</b> GSM 04.11 RP SC address Type-of-Address octet in integer format (default refer <b>&lt;toda&gt;</b>)</p> <p><b>&lt;vp&gt;</b> depending on SMS-SUBMIT <b>&lt;fo&gt;</b> setting: GSM 03.40 TP-Validity-Period either in integer format (default 167) or in time-string format (refer <b>&lt;dt&gt;</b>)</p>
Reference GSM 07.05	<p>Note</p> <ul style="list-style-type: none"> <li>• Response to a CMGR to an empty record index: +CMGR: 0,,0</li> <li>• Response to a CMGR to a not existing record index: +CMS ERROR: invalid memory index</li> <li>• The parameters <b>&lt;ra&gt;</b> and <b>&lt;tora&gt;</b> will only be displayed if AT^SSCONF=1 has been set before. See Chapter 8.38 for details on AT^SSCONF.</li> </ul>

## 5.6 AT+CMGS Send SMS message

Test command AT+CMGS=?	Response <b>OK</b> Parameter
Execute command 1) If text mode (+CMGF=1): +CMGS=<da> [,<toda>]<CR> text is entered <ctrl-Z/ESC>  2) If PDU mode (+CMGF=0): +CMGS=<length><CR> PDU is given <ctrl-Z/ESC> ESC aborts message	<p>Response</p> <p>TA transmits SMS message from TE to network (SMS-SUBMIT). Message reference value &lt;mr&gt; is returned to TE on successful message delivery. Value can be used to identify message upon unsolicited delivery status report result code.</p> <p>1) If text mode (+CMGF=1) and sending successful: <b>+CMGS: &lt;mr&gt;[,scts]&lt;CR&gt; OK</b></p> <p>2) If PDU mode (+CMGF=0) and sending successful: <b>+CMGS: &lt;mr&gt;[,ackpdu]&lt;CR&gt; OK</b></p> <p>3) If error is related to ME functionality: <b>+CMS ERROR: &lt;err&gt;</b></p> <p>Parameter</p> <p>&lt;da&gt; GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted into characters; type of address given by &lt;toda&gt;</p> <p>&lt;toda&gt; GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format (when first character of &lt;da&gt; is + (IRA 43) default is <b>145</b>, otherwise default is <b>129</b>)</p> <p>&lt;length&gt; integer type value indicating in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length).</p> <p>&lt;mr&gt; GSM 03.40 TP-Message-Reference in integer format</p> <p>&lt;scts&gt; GSM 03.40 TP-Service-Centre-Time-Stamp in time-string format (refer &lt;dt&gt;)</p> <p>&lt;dt&gt; GSM 03.40 TP-Discharge-Time in time-string format: "yy/MM/ dd,hh:mm:ss±zz", where characters indicate year (two last digits), month, day, hour, minutes, seconds and time zone. For example, 6th of May 1994, 22:10:00 GMT+2 hours equals "94/05/06,22:10:00+08"</p> <p>&lt;ackpdu&gt; GSM 03.40 RP-User-Data element of RP-ACK PDU; format is same as for &lt;pdu&gt; in case of SMS, but without GSM 04.11 SC address field and parameter shall be enclosed in double quote characters like a normal string type parameter</p> <p>&lt;pdu&gt; For SMS: GSM 04.11 SC address followed by GSM 03.40 TPDU in hexadecimal format: ME/TA converts each octet of TP data unit into hexadecimal numbers containing two IRA characters (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)). In the case of CBS: GSM 03.41 TPDU in hexadecimal format.</p>

## Reference

## GSM 07.05

## Note

- After invoking the commands CMGW, CMGS, CMGC wait for the prompt ">" and then start to send text to the module.
- To send the message simply enter <CTRL-Z>. See Execute command for possible responses.
- Sending can be aborted by entering <ESC>. Of course, the message will not be sent, though the operation is acknowledged with OK.
- When sending e-mails via SMS check that, depending on the provider, the @ symbol will be recognized and correctly interpreted. If not, make sure what character to use instead. A widely used alternative is typing "\*".
- At baudrates lower than 19200 it is recommended to use the line termination character only (refer to +ATS3, default <CR>, pg. 32) before entering the text/pdu. Use of the line termination character followed by the response formatting character (see +ATS4, default <LF>, pg. 32) can cause problems.
- All characters entered behind the ">" prompt will be recognized as GSM characters. For example, "Backspace" (ASCII character 8) does not delete a character, but will be inserted into the SMS as an additional physical character. As a result, the character you wanted to delete still appears in the text, plus the GSM code equivalent of the Backspace key. See also Chapter 9.5 which provides the supported alphabet tables.
- In text mode, the maximum length of an SMS depends on the used coding scheme: It is **160** characters if the 7 bit GSM coding scheme is used, and **140** characters according to the 8 bit GSM coding scheme.



## 5.7 AT+CMGW Write SMS message to memory

Test command AT+CMGW=?	Response <b>OK</b>
Execute command 1) If text mode (+CMGF=1): +CMGW[=<oa/da> [,<toa/toda>[,<stat>]]]<CR> text is entered <ctrl-Z/ESC> <ESC> quits without sending  2) If PDU mode (+CMGF=0): +CMGW=<length> [,<stat>]<CR> PDU is given <ctrl-Z/ESC>	<p>Response</p> <p>TA transmits SMS (either SMS-DELIVER or SMS-SUBMIT) from TE to memory storage &lt;mem2&gt;. Memory location &lt;index&gt; of the stored message is returned. Message status will be set to 'stored unsent' unless otherwise given in parameter &lt;stat&gt;.</p> <p>Note: SMS-COMMANDs and SMS-STATUS-REPORTs cannot be stored in text mode.</p> <p>If writing is successful: <b>+CMGW: &lt;index&gt; OK</b></p> <p>If writing fails, for example, if a message is too long, the result code depends on the current setting of the AT^SM20 command (see Chapter 8.18): If the AT^SM20 parameter &lt;m&gt; equals 1 (factory default) then failure to write a message is followed by: <b>OK</b> Users should be aware that, in this case, the message will not be written to the selected SMS storage.</p> <p>If the AT^SM20 parameter &lt;m&gt; equals 0, then failure to write a message is followed by: <b>+CMS ERROR: &lt;err&gt;</b> For example, if a message was too long &lt;err&gt; code 305 ("Invalid text mode parameter") is returned.</p> <p>Parameter</p> <p>&lt;oa&gt; GSM 03.40 TP-Originating-Address Address value field in string format; BCD numbers (or GSM default alphabet characters) are converted into characters; type of address given by &lt;toa&gt;</p> <p>&lt;da&gt; GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted into characters; type of address given by &lt;toda&gt;</p> <p>&lt;toa&gt; GSM 04.11 TP-Originating-Address Type-of-Address octet in integer format (default refer &lt;toda&gt;)</p> <p>&lt;toda&gt; GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format (when first character of &lt;da&gt; is + (IRA 43) default is 145, otherwise default is 129)</p> <p>&lt;length&gt; integer type value indicating in PDU mode (+CMGF=0), the length of the actual TP data unit in octets (i.e. the RP layer SMSC address octets are not counted in the length).</p> <p>&lt;stat&gt; integer type in PDU mode (default 0), or string type in text mode (default "REC UNREAD"); indicates the status of message in memory; defined values:</p>

	<p>0 "REC UNREAD" Received unread messages (default)</p> <p>1 "REC READ" Received read messages</p> <p>2 "STO UNSENT" Stored unsent messages</p> <p>3 "STO SENT" Stored sent messages</p> <p>&lt;pdu&gt; In the case of SMS: GSM 04.11 SC address followed by GSM 03.40 TPDU in hexadecimal format: ME/TA converts each octet of TP data unit into hexadecimal numbers containing two IRA characters (e.g. octet with integer value 42 is presented to TE as two characters 2A (IRA 50 and 65)). In the case of CBS: GSM 03.41 TPDU in hexadecimal format.</p> <p>&lt;index&gt; Index of message in selected storage &lt;mem2&gt;</p>
<p>Reference</p> <p>GSM 07.05</p>	<p>Note</p> <ul style="list-style-type: none"> <li>• After invoking the commands CMGW, CMGS, CMGC wait for the prompt "&gt;" and then start to send text to the module.</li> <li>• To store the message simply enter &lt;CTRL-Z&gt;. See Execute command for possible responses.</li> <li>• Writing can be aborted by entering &lt;ESC&gt;. Of course, the message will not be stored, though the operation is acknowledged with OK.</li> <li>• When sending e-mails via SMS the @ character may be replaced with "*" as defined in GSM 03.40 (3GPP TS 23.040).</li> <li>• At baudrates lower than 19200 it is recommended to use the line termination character only (refer to +ATS3, default &lt;CR&gt;, pg. 32) before entering the text/pdu. Use of the line termination character followed by the response formatting character (refer to +ATS4, default &lt;LF&gt;, pg. 32) can cause problems.</li> <li>• All characters entered behind the "&gt;" prompt will be recognized as GSM characters. For example, "Backspace" (ASCII character 8) does not delete a character, but will be inserted into the SMS as an additional physical character. As a result, the character you wanted to delete still appears in the text, plus the GSM code equivalent of the Backspace key. See Chapter 9.5 which provides the supported alphabet tables. Also refer to Chapter 1.5 for general remarks on character sets.</li> <li>• In text mode, the maximum length of an SMS depends on the used coding scheme: It is <b>160</b> characters if the 7 bit GSM coding scheme is used, and <b>140</b> characters according to the 8 bit GSM coding scheme.</li> </ul>

## 5.8 AT+CMSS Send SMS message from storage

Test command AT+CMSS=?	Response <b>OK</b>  Parameter
Execute command +CMSS= <index>[,<da> [,<toda>]]	<p>Response</p> <p>TA sends message with location value &lt;index&gt; from message storage &lt;mem2&gt; to the network (SMS-SUBMIT or SMS-COMMAND). If new recipient address &lt;da&gt; is given for SMS-SUBMIT, it shall be used instead of the one stored with the message. Reference value &lt;mr&gt; is returned to the TE on successful message delivery. Values can be used to identify message upon unsolicited delivery status report result code.</p> <p>1) If text mode (+CMGF=1) and send successful: <b>+CMSS: &lt;mr&gt;[,scts] OK</b></p> <p>2) If PDU mode (+CMGF=0) and send successful: <b>+CMSS: &lt;mr&gt;[,ackpdu] OK</b></p> <p>3) If error is related to ME functionality: <b>+CMS ERROR: &lt;err&gt;</b></p> <p>Parameter</p> <p>&lt;ackpdu&gt; GSM 03.40 RP-User-Data element of RP-ACK PDU; format is same as for &lt;pdu&gt; in case of SMS, but without GSM 04.11 SC address field and parameter shall be bounded by double quote characters like a normal string type parameter.</p> <p>&lt;index&gt; integer type; value in the range of location numbers supported by the associated memory</p> <p>&lt;da&gt; GSM 03.40 TP-Destination-Address Address-Value field in string format; BCD numbers (or GSM default alphabet characters) are converted into characters; type of address given by &lt;toda&gt;</p> <p>&lt;scts&gt; GSM 03.40 TP-Service-Centre-Time-Stamp in time-string format.</p> <p>&lt;toda&gt; GSM 04.11 TP-Destination-Address Type-of-Address octet in integer format (when first character of &lt;da&gt; is + (IRA 43) default is 145, otherwise default is 129)</p> <p>&lt;mr&gt; GSM 03.40 TP-Message-Reference in integer format</p>
Reference GSM 07.05	Note

## 5.9 AT+CNMA New SMS message acknowledge to ME/TE, only phase 2+

Test command AT+CNMA=?	<p>Response</p> <p>1) If text mode (+CMGF=1): <b>OK</b></p> <p>2) If PDU mode (+CMGF=0): <b>+CNMA:</b> (list of supported &lt;n&gt;s) <b>OK</b></p> <p>Parameters See execute command</p>
<p>Execute command</p> <p>1) If text mode: AT+CNMA</p> <p>2) If PDU mode: AT+CNMA[=&lt;n&gt;]</p>	<p>Response</p> <p>TA confirms successful receipt of a new message (SMS-DELIVER or SMS-STATUS-REPORT) which is routed directly to the TE. TA shall not send another +CMT or +CDS result code to TE until previous one is acknowledged.</p> <p>If ME does not receive acknowledgment within required time (network timeout), ME sends RP-ERROR to the network. TA shall automatically disable routing to TE by setting both &lt;mt&gt; and &lt;ds&gt; values of +CNMI to zero.</p> <p>Note: The command shall o n l y be used when +CSMS parameter &lt;service&gt; equals 1 (= phase 2+).</p> <p>1) If text mode: <b>OK</b></p> <p>2) If PDU mode: <b>OK</b></p> <p>3) If error is related to ME functionality: <b>+CMS ERROR: &lt;err&gt;</b></p> <p>Parameters &lt;n&gt; 0 command operates similarly as defined for the text mode</p>
Reference GSM 07.05	<p>Note</p> <p>If multiplex mode is activated (+CMUX=0) the +CNMI parameter will be set to zero on all channels, if one channel fails to acknowledge an incoming message within the required time.</p>

## 5.10 AT+CNMI New SMS message indications

Test command AT+CNMI=?	<p>Response</p> <p><b>+CNMI:</b> (list of supported &lt;mode&gt;s), (list of supported &lt;mt&gt;s), (list of supported &lt;bm&gt;s), (list of supported &lt;ds&gt;s), (list of supported &lt;bfr&gt;s) <b>OK</b></p> <p>Parameter</p> <p>See set command</p>												
Read command AT+CNMI?	<p>Response</p> <p><b>+CNMI:</b> &lt;mode&gt;,&lt;mt&gt;,&lt;bm&gt;,&lt;ds&gt;,&lt;bfr&gt; <b>OK</b></p> <p>Parameter</p> <p>See set command</p>												
Write command AT+CNMI = [<mode>] [,<mt>][,<bm>] [,<ds>][,<bfr>]	<p>Response</p> <p>TA selects the procedure how the receipt of new SMS messages from the network is indicated to the TE when TE is active, e.g. DTR signal is ON. If TE is inactive (e.g. DTR signal is OFF), the reception of messages shall be performed as specified in GSM 03.38.</p> <p>Note1: If the DTR signal is not available or the state of the signal is ignored (V.25ter command &amp;D0), reliable message transfer can be assured by using +CNMA acknowledgment procedure.</p> <p>Note2: The rules &lt;mt&gt;=2 and &lt;mt&gt;=3 for storing received SM are possible only if phase 2+ compatibility is activated with +CSMS=1</p> <p>Note3: The parameter &lt;ds&gt;=1 is only available in phase 2+</p> <p><b>OK</b></p> <p>If error is related to ME functionality: <b>+CMS ERROR:</b> &lt;err&gt;</p> <p>Parameter</p> <p><b>&lt;mode&gt;</b></p> <table border="0"> <tr> <td><u>0</u></td><td>Buffer unsolicited result codes in the TA. If TA result code buffer is full, indications can be buffered in some other place or the oldest indications may be discarded and replaced with the new received indications.</td></tr> <tr> <td>1</td><td>Discard indication and reject new received message unsolicited result codes when TA-TE link is reserved (e.g. in on-line data mode). Otherwise forward them directly to the TE.</td></tr> <tr> <td>2</td><td>Buffer unsolicited result codes in the TA when TA-TE link is reserved (e.g. in on-line data mode) and flush them to the TE after reservation. Otherwise forward them directly to the TE.</td></tr> <tr> <td>3</td><td>Forward unsolicited result codes directly to the TE. TA-TE link specific inband technique used to embed result codes and data when TA is in on-line data mode.</td></tr> </table> <p><b>&lt;mt&gt;</b></p> <p>Rules for storing received SMS depend on the relevant data coding method (refer to GSM 03.38 [2]), preferred memory storage (+CPMS) setting and this value</p> <p>Note: If AT command interface is acting as the only display device, the ME must support storage of class 0 messages and messages in the message waiting indication group (discard message)</p> <table border="0"> <tr> <td><u>0</u></td><td>No SMS-DELIVER indications are routed to the TE.</td></tr> <tr> <td>1</td><td>If SMS-DELIVER is stored in ME/TA, indication of the memory location is routed to the TE using unsolicited result code: <b>+CMTI:</b> &lt;mem&gt;,&lt;index&gt;</td></tr> </table>	<u>0</u>	Buffer unsolicited result codes in the TA. If TA result code buffer is full, indications can be buffered in some other place or the oldest indications may be discarded and replaced with the new received indications.	1	Discard indication and reject new received message unsolicited result codes when TA-TE link is reserved (e.g. in on-line data mode). Otherwise forward them directly to the TE.	2	Buffer unsolicited result codes in the TA when TA-TE link is reserved (e.g. in on-line data mode) and flush them to the TE after reservation. Otherwise forward them directly to the TE.	3	Forward unsolicited result codes directly to the TE. TA-TE link specific inband technique used to embed result codes and data when TA is in on-line data mode.	<u>0</u>	No SMS-DELIVER indications are routed to the TE.	1	If SMS-DELIVER is stored in ME/TA, indication of the memory location is routed to the TE using unsolicited result code: <b>+CMTI:</b> <mem>,<index>
<u>0</u>	Buffer unsolicited result codes in the TA. If TA result code buffer is full, indications can be buffered in some other place or the oldest indications may be discarded and replaced with the new received indications.												
1	Discard indication and reject new received message unsolicited result codes when TA-TE link is reserved (e.g. in on-line data mode). Otherwise forward them directly to the TE.												
2	Buffer unsolicited result codes in the TA when TA-TE link is reserved (e.g. in on-line data mode) and flush them to the TE after reservation. Otherwise forward them directly to the TE.												
3	Forward unsolicited result codes directly to the TE. TA-TE link specific inband technique used to embed result codes and data when TA is in on-line data mode.												
<u>0</u>	No SMS-DELIVER indications are routed to the TE.												
1	If SMS-DELIVER is stored in ME/TA, indication of the memory location is routed to the TE using unsolicited result code: <b>+CMTI:</b> <mem>,<index>												

	<p>2 SMS-DELIVERs, except class 2 messages and messages in the message waiting indication group (store message) are routed directly to the TE using unsolicited result code:  <b>+CMT: ,&lt;length&gt;&lt;CR&gt;&lt;LF&gt;&lt;pdu&gt;</b> (PDU mode enabled)  <b>+CMT: &lt;oa&gt;,,&lt;scts&gt; [,&lt;tooa&gt;,&lt;fo&gt;,&lt;pid&gt;,&lt;dcs&gt;,&lt;sca&gt;,&lt;tosca&gt;,&lt;length&gt;] &lt;CR&gt; &lt;LF&gt; &lt;data&gt;</b> (text mode enabled)</p> <p>3 Class 3 SMS-DELIVERs are routed directly to the TE using unsolicited result codes defined in &lt;mt&gt;=2. Messages of other data coding schemes result in indication as defined in &lt;mt&gt;=1.</p> <p><b>&lt;bm&gt;</b> Rules for storing received CBMs depend on the relevant data coding method (refer to GSM 03.38 [2]), the setting of Select CBM Types (+CSCB) and this value:</p> <p><u>0</u> No CBM indications are routed to the TE.</p> <p>2 New CBMs are routed directly to the TE using unsolicited result code: <b>+CBM: &lt;length&gt;&lt;CR&gt;&lt;LF&gt;&lt;pdu&gt;</b> (PDU mode enabled) or <b>+CBM: &lt;sn&gt;,&lt;mid&gt;,&lt;dcs&gt;,&lt;page&gt;,&lt;pages&gt;&lt;CR&gt;&lt;LF&gt;&lt;data&gt;</b> (text mode enabled).</p> <p>3 Class 3 CBMs are routed directly to TE using unsolicited result codes defined in &lt;bm&gt;=2.</p> <p><b>&lt;ds&gt;</b></p> <p><u>0</u> No SMS-STATUS-REPORTs are routed to the TE.</p> <p>1 SMS-STATUS-REPORTs are routed to the TE using unsolicited result code: <b>+CDS: &lt;length&gt;&lt;CR&gt;&lt;LF&gt;&lt;pdu&gt;</b> (PDU mode enabled) or <b>+CDS: &lt;fo&gt;,&lt;mr&gt;,[&lt;ra&gt;],[&lt;tora&gt;],&lt;scts&gt;,&lt;dt&gt;,&lt;st&gt;</b> (text mode enabled)</p> <p>2 If SMS-STATUS-REPORT is routed into ME/TA, indication of the memory location is routed to the TE using unsolicited result code: <b>+CDSI: &lt;mem&gt;,&lt;index&gt;</b></p> <p><b>&lt;bfr&gt;</b> <u>1</u> TA buffer of unsolicited result codes defined within this command is cleared when &lt;mode&gt; 1...3 is entered.</p>
Unsolicited result code	<p>Syntax of responses output when SMS is received:</p> <p><b>+CMTI: &lt;mem&gt;,&lt;index&gt;</b> Indicates that new message has been received</p> <p><b>+CBMI: &lt;mem&gt;,&lt;index&gt;</b> Indicates that new CB message has been received</p> <p><b>+CMT: ,&lt;length&gt;&lt;CR&gt;&lt;LF&gt;&lt;pdu&gt;</b> Short message is output directly</p> <p><b>+CBM: &lt;length&gt;&lt;CR&gt;&lt;LF&gt;&lt;pdu&gt;</b> Cell broadcast message is output directly</p> <p>During each SMS or Cell Broadcast Messages the Ring Line goes Logic "1" for one second.</p>

Reference GSM 07.05	<p>General remarks:</p> <ul style="list-style-type: none"><li>Parameters <b>&lt;mt&gt;=2,3</b> and <b>&lt;ds&gt;=1</b> are only available with GSM phase 2+ (see <b>+CSMS=1</b>). Incoming SMs or Status Reports have to be acknowledged with <b>AT+CNMA=0</b> when using these phase 2+ parameters.</li><li>The parameters <b>&lt;ra&gt;</b> and <b>&lt;tora&gt;</b> will only be displayed if <b>AT^SSCONF=1</b> has been set before. See Chapter 8.38 for details on <b>AT^SSCONF</b>.</li><li>To allow SMS overflow presentation during data transfers via Break, use <b>AT+CNMI=3,1</b> (see Chapter 8.15).</li></ul> <p>Handling of Class 0 short messages:</p> <ul style="list-style-type: none"><li>If the host application is provided with a display and <b>AT^SSDA=1</b> has been set Class 0 short messages can be displayed immediately. Refer to Chapter 8.39 for details.</li><li>If the host application does not include a display, ME handles Class 0 short messages as though there was no message class, i.e. it will ignore bits 0 and 1 in the TP-DCS and normal rules for exceeded memory capacity shall apply. This approach is compliant with GSM 03.38.</li></ul> <p>Requirements specific to Multiplex mode:</p> <ul style="list-style-type: none"><li>In multiplex mode (<b>AT+CMUX=0</b>) only one channel can use a phase 2+ parameter. The parameter for <b>&lt;mt&gt;</b> and <b>&lt;ds&gt;</b> on the other channels have to be set to zero.</li><li>If either a SM or a Status Report is not acknowledged, all <b>+CNMI</b> parameters will be set to zero on all channels.</li></ul>
------------------------	---

## 5.11 AT+CPMS Preferred SMS message storage

Test command AT+CPMS=?	<p>Response</p> <p>+CPMS: (list of supported &lt;mem1&gt;s), (list of supported &lt;mem2&gt;s), (list of supported &lt;mem3&gt;s)</p> <p>Parameter</p> <p>See write command</p>
Read command AT+CPMS?	<p>Response</p> <p>+CPMS: &lt;mem1&gt;,&lt;used1&gt;,&lt;total1&gt;,&lt;mem2&gt;,&lt;used2&gt;,&lt;total2&gt;,&lt;mem3&gt;,&lt;used3&gt;,&lt;total3&gt; OK</p> <p>If error is related to ME functionality: +CMS ERROR</p> <p>Parameter</p> <p>See write command</p>
Write command AT+CPMS= <mem1> [,<mem2> [,<mem3>]]	<p>Response</p> <p>TA selects memory storages &lt;mem1&gt;, &lt;mem2&gt; and &lt;mem3&gt; to be used for reading, writing, etc.</p> <p>+CPMS: &lt;used1&gt;,&lt;total1&gt;,&lt;used2&gt;,&lt;total2&gt;,&lt;used3&gt;,&lt;total3&gt; OK</p> <p>If error is related to ME functionality: +CMS ERROR:&lt;err&gt;</p> <p>Parameter</p> <p>&lt;mem1&gt; Memory to be used when listing, reading and deleting messages:</p> <ul style="list-style-type: none"> <li>"SM" SIM message storage</li> <li>"ME" Mobile Equipment message storage</li> <li>"MT" Sum of "ME" and "SM" storages</li> </ul> <p>&lt;mem2&gt; Memory to be used when writing and sending messages:</p> <ul style="list-style-type: none"> <li>"SM" SIM message storage</li> <li>"ME" Mobile Equipment message storage</li> <li>"MT" Sum of "ME" and "SM" storages</li> </ul> <p>&lt;mem3&gt; Received messages will be placed to this storage if routing to TE is not set. See AT+CNMI command with parameter &lt;mt&gt;=2 (Chapter 5.10).</p> <ul style="list-style-type: none"> <li>"SM" SIM message storage</li> <li>"MT" Sum of "ME" and "SM" storages</li> </ul> <p>&lt;usedx&gt; Number of messages currently in &lt;memx&gt;</p> <p>&lt;totalx&gt; Number of messages storable in &lt;memx&gt;</p>
Reference GSM 07.05	<p>Note</p> <p>General remarks</p> <ul style="list-style-type: none"> <li>• The Mobile Equipment storage "ME" offers space for 25 short messages.</li> <li>• The storage "MT" is the sum of the storages "ME" and "SM". The indices (&lt;index&gt;) from 1 to 25 are associated to the "ME" storage. Indices equal to 26 and higher are allocated to the "SM" storage.</li> <li>• &lt;mem1&gt;, &lt;mem2&gt; and &lt;mem3&gt; are saved in the non-volatile memory.</li> <li>• The user should be aware that the setting "MT" involves "ME" and "SM", with "ME" being filled up first. If the "ME" storage is full, MC35 will proceed with the "SM" storage.</li> </ul> <p>Incoming Class 1 short messages (ME specific) will be preferably stored to</p>



“ME” and may be transferred to the “SM” storage if “ME” is used up. Incoming Class 2 messages (SIM specific) will be stored to the SIM card only, no matter whether or not there is free “ME” space. As a result, the ^SMGO: 2 indication (see AT^SMGO in Chapter 8.15) may be presented without prior indication of ^SMGO: 1. For more information regarding SIM and ME specific message classes refer to <dc> and the following specifications: GSM 03.38 and 3GPP TS 23.038.

Handling of <mem3> storage:

- Before switching <mem3> from “MT” to “SM” it is necessary to delete all short messages out of the “ME” storage.
- When <mem3> is switched from “MT” to “SM” all free “ME” locations will be filled with dummy short messages. This procedure can take up to 35 seconds, until all the 25 records are written.  
When <mem3> equals “SM”, do not delete the dummy messages in the “ME” storage. They will be automatically deleted when you switch back from “SM” to “MT”. Again, this may take up to 35 seconds.
- In Multiplex mode, the parameter <mem3> will be the same on all instances, but the settings of <mem1> and <mem2> may vary on each channel.
- To avoid inconsistencies, it is recommended to use the same parameter for all <memx>.

## 5.12 AT+CSCA SMS service centre address

Test command AT+CSCA=?	Response <b>OK</b>
Read command AT+CSCA?	Response <b>+CSCA: &lt;sca&gt;,&lt;tosca&gt; OK</b> Parameter See write command
Write command AT+CSCA=<sca> [,<tosca>]	<p>TA updates the SMSC address, through which mobile originated SMs are transmitted. In text mode, setting is used by send and write commands. In PDU mode, setting is used by the same commands, but only when the length of the SMSC address coded into &lt;pdu&gt; parameter equals zero.</p> <p>Note: This command writes the service centre address to non-volatile memory.</p> <p>Response <b>OK</b></p> <p>Parameter</p> <p><b>&lt;sca&gt;</b> GSM 04.11 RP SC address Address value field in string format; BCD numbers (or GSM default alphabet characters) are converted into characters; type of address given by &lt;tosca&gt; Maximum length of address: 20 characters</p> <p><b>&lt;tosca&gt;</b> Service centre address format GSM 04.11 RP SC address Type-of-Address octet in integer format (default refer &lt;to da&gt;)</p>
Reference GSM 07.05	Note If no parameter is entered after AT+CSCA= the content of <sca> will be deleted.

### 5.13 AT+CSCB Select cell broadcast messages

Test command AT+CSCB=?	Response +CSCB: (list of supported <mode>s)  Parameter See write command
Read command AT+CSCB?	Response +CSCB: <mode>,<mids>,<dcss>  Parameter See write command
Write command AT+CSCB=[<mode> [,<mids>[,<dcss>]]]	Parameter  <div style="display: flex; align-items: flex-start;"> <div style="margin-right: 20px;">           &lt;mode&gt;     <u>0</u>                         1         </div> <div>           Accepts messages that are defined in &lt;mids&gt; and &lt;dcss&gt;            Does not accept messages that are defined in &lt;mids&gt; and &lt;dcss&gt;         </div> </div> <div style="margin-top: 10px;">           &lt;mids&gt;     String type; combinations of CBM message IDs (e.g. "0,1,5,320-478,922"). The number of ranges in &lt;mids&gt; parameter string is limited to 6         </div> <div style="margin-top: 10px;">           &lt;dcss&gt;     String type; combinations of CBM data coding schemes (e.g. "0-3,5")         </div> <div style="margin-top: 20px;">           Note:            If &lt;mode&gt;=1 is selected the parameter &lt;mids&gt; has to be given as only one area (e.g. "0-99")         </div>
Reference GSM 07.05	Note

### 5.14 AT+CSDH Show SMS text mode parameters

Test command AT+CSDH=?	Response <b>+CSDH:</b> (list of supported <show>s) <b>OK</b>  Parameter See write command
Read command AT+CSDH?	Response <b>+CSDH:&lt;show&gt; OK</b>  Parameter See write command
Write command AT+CSDH= <show>	Response TA sets whether or not detailed header information is shown in text mode result codes. <b>OK</b>  Parameter <div style="display: flex; align-items: flex-start;"> <div style="margin-right: 20px;"> <p>&lt;show&gt;     <u>0</u></p> <p>             1</p> </div> <div> <p>do not show header values defined in commands +CSCA and +CSMP (&lt;sca&gt;, &lt;tosca&gt;, &lt;fo&gt;, &lt;vp&gt;, &lt;pid&gt; and &lt;dc&gt;) nor &lt;length&gt;, &lt;toda&gt; or &lt;tooa&gt; in +CMT, +CMGL, +CMGR result codes for SMS-DELIVERs and SMS-SUBMITs in text mode; for SMS-COMMANDs in +CMGR result code, do not show &lt;pid&gt;, &lt;mn&gt;, &lt;da&gt;, &lt;toda&gt;, &lt;length&gt; or &lt;cdata&gt;</p> <p>show the values in result codes</p> </div> </div>
Reference GSM 07.05	Note

### 5.15 AT+CSMP Set SMS text mode parameters

Test command AT+CSMP=?	Response <b>OK</b>
Read command AT+CSMP?	Response <b>+CSMP:&lt;fo&gt;,&lt;vp/scts&gt;,&lt;pid&gt;,&lt;dc&gt; OK</b>  Parameter See set command
Set command AT+CSMP= <fo>[,<vp/scts>[ ,<pid> [,<dc>]]]	<p>Response</p> <p>TA selects values for additional parameters needed when SM is sent to the network or placed in a storage when text format message mode is selected. It is possible to set the validity period starting from when the SM is received by the SMSC (&lt;vp&gt; is in range 0... 255) or define the absolute time of the validity period termination (&lt;vp&gt; is a string). The format of &lt;vp&gt; is given by &lt;fo&gt;. If TA supports the enhanced validity period format, see GSM 03.40), it shall be given as a hexadecimal coded string (refer e.g. &lt;pdu&gt;) with quotes.</p> <p>Note:</p> <p>When storing a SMS_DELIVER from the TE to the preferred memory storage in text mode (refer write command to Message Memory +CMGW), &lt;vp&gt; field can be used for &lt;scts&gt;</p> <p>Parameter</p> <p>&lt;fo&gt; depending on the command or result code: first octet of GSM 03.40 SMS-DELIVER, SMS-SUBMIT (default 17), or SMS-COMMAND (default 2) in integer format</p> <p>&lt;scts&gt; GSM 03.40 TP-Service-Centre-Time-Stamp in time-string format (refer &lt;dt&gt;)</p> <p>&lt;vp&gt; depending on SMS-SUBMIT &lt;fo&gt; setting: GSM 03.40 TP-Validity-Period either in integer format (default 167) , in time-string format (refer &lt;dt&gt;), or if is supported, in enhanced format (hexadecimal coded string with quotes)</p> <p>&lt;pid&gt; Protocol-Identifier in integer format (default 0), refer GSM 03.40</p> <p>&lt;dc&gt; SMS Data Coding Scheme (default 0), or Cell Broadcast Data Coding Scheme in integer format depending on the command or result code: GSM 03.38</p>
Reference GSM 07.05	Note The command writes the parameters to the non-volatile memory.

## 5.16 AT+CSMS Select Message Service

Test command AT+CSMS=?	<p>Response</p> <p>+CSMS: (list of supported &lt;service&gt;s) OK</p> <p>Parameter</p> <p>See write command</p>
Read command AT+CSMS?	<p>Response</p> <p>+CSMS: &lt;service&gt;,&lt;mt&gt;,&lt;mo&gt;,&lt;bm&gt; OK</p> <p>Parameter</p> <p>See write command</p>
Write command AT+CSMS= <service>	<p>Response</p> <p>+CSMS: &lt;mt&gt;,&lt;mo&gt;,&lt;bm&gt; OK</p> <p>If error is related to ME functionality: +CMS ERROR: &lt;err&gt;</p> <p>Parameter</p> <p>&lt;service&gt;    <u>0</u>    GSM 03.40 and 03.41 (the syntax of SMS AT commands is compatible with GSM 07.05 Phase 2 version 4.7.0; Phase 2+ features which do not require new command syntax may be supported, e.g. correct routing of messages with new Phase 2+ data coding schemes)</p> <p>                  1    GSM 03.40 and 03.41 (the syntax of SMS AT commands is compatible with GSM 07.05 Phase 2+ version; the requirement of &lt;service&gt; setting 1 is mentioned under corresponding command descriptions).</p> <p>&lt;mt&gt;        Mobile Terminated Messages:</p> <p>                  0    Type not supported</p> <p>                  1    Type supported</p> <p>&lt;mo&gt;        Mobile Originated Messages:</p> <p>                  0    Type not supported</p> <p>                  1    Type supported</p> <p>&lt;bm&gt;        Broadcast Type Messages:</p> <p>                  0    Type not supported</p> <p>                  1    Type supported</p>
Reference GSM 07.05	<p>Note</p> <p>If CSMS Mode is switched from Phase 2+ to Phase 2 and one or more CNMI Parameter are Phase 2+ specific a '+CMS ERROR: unknown error' will appear. It is recommended to switch the CNMI Parameters to Phase 2 specific values before entering Phase 2.</p>

## 6 GPRS AT commands in accordance with GSM 07.07

This chapter provides GPRS specific AT commands. For information on using GPRS commands in multiplex mode see chapter 4.28.

### 6.1 Commands specific to MTs supporting GPRS

This clause defines commands that a TE (Terminal Equipment, i.e. an application running on a controlling PC) may use to control a GPRS MT (Mobile Termination, the Wireless Module). Refer to Chapter 6.4 for selected examples of using GPRS AT commands.

#### 6.1.1 AT+CGATT GPRS attach and detach

Test command AT+CGATT=?	<p>The test command is used for requesting information on the supported GPRS service states.</p> <p>Response <b>+CGATT:</b> (list of supported &lt;state&gt;s) <b>OK/ERROR/+CME ERROR</b></p> <p>Parameter &lt;state&gt;                      See write command</p>
Read command AT+CGATT?	<p>The read command returns the current GPRS service state.</p> <p>Response <b>+CGACT:</b> &lt;state&gt; <b>OK/ERROR/+CME ERROR</b></p> <p>Parameter &lt;state&gt;                      See write command</p>
Write command AT+CGATT= [<state>]	<p>The execution command enables the MT get attached to or detached from the GPRS service. After the command has completed, the MT remains in V.25ter command state. If the MT is already in the requested state, the command is ignored and the OK response is returned. Any active PDP contexts will be automatically deactivated when the attachment state changes to detached.</p> <p>If the MT is not able to attach for more than 5 minutes, the command returns an error code, though the MT is still trying to attach.</p> <p>Parameter &lt;state&gt;                      indicates the state of GPRS attachment                                  0 – detached                                  1 – attached</p> <p>Response <b>OK/ERROR/+CME ERROR</b></p>
Reference GSM 07.07	

### 6.1.2 AT+CGACT PDP context activate or deactivate

<p>Test command</p> <p>AT+CGACT=?</p>	<p>The test command is used for requesting information on the supported PDP context activation states.</p> <p>Response</p> <p><b>+CGACT: (list of supported &lt;state&gt;s)</b></p> <p><b>OK/ERROR/+CME ERROR</b></p> <p>Parameter</p> <p><b>&lt;state&gt;</b> See write command</p>
<p>Read command</p> <p>AT+CGACT?</p>	<p>The read command returns the current activation states for all the defined PDP contexts.</p> <p>Response</p> <p><b>+CGACT: &lt;cid&gt;, &lt;state&gt; [&lt;CR&gt;&lt;LF&gt;+CGACT: &lt;cid&gt;, &lt;state&gt;...]</b></p> <p><b>OK/ERROR/+CME ERROR</b></p> <p>Parameter</p> <p><b>&lt;cid&gt;</b> See write command</p> <p><b>&lt;state&gt;</b> See write command</p>
<p>Write command</p> <p>AT+CGACT=[&lt;state&gt;[,&lt;cid&gt;[,&lt;cid&gt;[,...]]]]</p>	<p>This command is used to activate or deactivate the specified PDP context(s). After the command has completed, the MT remains in V.25ter command state. If any PDP context is already in the requested state, the state for that context remains unchanged. If the MT is not GPRS attached when the activation form of the command is executed, the MT first performs a GPRS attach and then attempts to activate the specified contexts. If no &lt;cid&gt;s are specified the activation/deactivation form of the command activates/deactivates all defined contexts.</p> <p>Response</p> <p><b>OK/ERROR/+CME ERROR</b></p> <p>Parameter</p> <p><b>&lt;state&gt;</b> indicates the state of PDP context activation</p> <p>0 – deactivated</p> <p><u>1</u> – activated</p> <p><b>&lt;cid&gt;</b> PDP Context Identifier is a numeric parameter which specifies a particular PDP context definition. The parameter is local to the TE-MT interface and is used in other PDP context-related commands.</p> <p>Note: The range of supported cids is returned by AT+CGDCONT=?</p> <p>Response</p> <p><b>+CGACT: (list of supported &lt;state&gt;s)</b></p> <p><b>OK/ERROR/+CME ERROR</b></p>
<p>Reference</p> <p>GSM 07.07</p>	<p>Note</p> <p>Please note that ATH deactivates a PDP context if executed on the same logical channel (see Chapters 2.12, 6.3.2)</p>



### 6.1.3 AT+CGDATA Enter data state

<p>Test command</p> <p>AT+CGDATA=?</p>	<p>The test command is used for requesting information on the supported layer 2 protocols to be used between the TE and MT.</p> <p>Response</p> <p><b>+CGDATA:</b> (list of supported &lt;L2P&gt;s)</p> <p><b>OK/ERROR/+CME ERROR</b></p> <p>Parameter</p> <p>&lt;L2P&gt;                      See write command</p>
<p>Write command</p> <p>+CGDATA=[&lt;L2P&gt;, [&lt;cid&gt;[,&lt;cid&gt;,...]]]</p>	<p>The execution command causes the MT to perform whatever actions are necessary to establish communication between the TE and the network using one or more GPRS PDP types. This may include performing a GPRS attach and one or more PDP context activations. Commands following +CGDATA command in the AT command line shall not be processed by the MT.</p> <p>Parameter</p> <p>&lt;L2P&gt;                      layer 2 protocol to be used between the TE and MT PPP or 1 for layer2 protocol PPP</p> <p>&lt;cid&gt;                      PDP Context Identifier is a numeric parameter which specifies a particular PDP context definition. The parameter is local to the TE-MT interface and is used in PDP context-related commands. If no context is specified, an internal context 0 with default QoS (network subscribed) and APN from EEPROM (if there is one) is used.</p> <p>1</p> <p>2</p> <p>Response</p> <p>If successful, the MT issues the intermediate result code CONNECT and enters V.25ter online data state:</p> <p><b>CONNECT</b></p> <p>After data transfer is complete, and the layer 2 protocol termination procedure has completed successfully, the command state is re-entered and the MT returns the final result code</p> <p><b>OK</b></p> <p>If the &lt;L2P&gt; parameter value is unacceptable to the MT, the MT returns an ERROR or +CME ERROR response:</p> <p><b>ERROR/+CME ERROR</b></p> <p>In the event of erroneous termination or a failure to start up, the command state is re-entered and the MT returns</p> <p><b>NO CARRIER</b></p> <p>or, if enabled,</p> <p><b>+CME ERROR</b></p>

### 6.1.4 AT+CGDCONT Define PDP Context

<p>Test command AT+CGDCONT=?</p>	<p>The test command returns values supported as a compound value. If the MT supports several PDP types, the parameter value ranges for each &lt;PDP_type&gt; are returned on a separate line.</p> <p>Response +CGDCONT: (range of supported &lt;cid&gt;s), &lt;PDP_type&gt;,,(list of supported &lt;d_comp&gt;s), (list of supported &lt;h_comp&gt;s) [&lt;CR&gt;&lt;LF&gt;+CGDCONT: ...] <b>OK/ERROR/+CME ERROR</b></p> <p>Parameter</p> <table> <tr> <td>&lt;cid&gt;</td><td>See write command</td></tr> <tr> <td>&lt;PDP_type&gt;</td><td>See write command</td></tr> <tr> <td>&lt;d_comp&gt;</td><td>numeric parameter that controls PDP data compression 0 off</td></tr> <tr> <td>&lt;h_comp&gt;</td><td>numeric parameter that controls PDP header compression 0 off</td></tr> </table>	<cid>	See write command	<PDP_type>	See write command	<d_comp>	numeric parameter that controls PDP data compression 0 off	<h_comp>	numeric parameter that controls PDP header compression 0 off				
<cid>	See write command												
<PDP_type>	See write command												
<d_comp>	numeric parameter that controls PDP data compression 0 off												
<h_comp>	numeric parameter that controls PDP header compression 0 off												
<p>Read command AT+CGDCONT?</p>	<p>The read command returns the current settings for each defined context. If there is no context define simply <b>OK</b> will be returned.</p> <p>Response +CGDCONT: &lt;cid&gt;, &lt;PDP_type&gt;, &lt;APN&gt;, &lt;PDP_addr&gt;, &lt;data_comp&gt;, &lt;head_comp&gt; [&lt;CR&gt;&lt;LF&gt;+CGDCONT: ...] <b>OK/ERROR/+CME ERROR</b></p> <p>Parameter</p> <table> <tr> <td>&lt;cid&gt;</td><td>See write command</td></tr> <tr> <td>&lt;PDP_type&gt;</td><td>See write command</td></tr> <tr> <td>&lt;APN&gt;</td><td>See write command</td></tr> <tr> <td>&lt;PDP_addr&gt;</td><td>See write command</td></tr> <tr> <td>&lt;d_comp&gt;</td><td>See test command</td></tr> <tr> <td>&lt;h_comp&gt;</td><td>See test command</td></tr> </table>	<cid>	See write command	<PDP_type>	See write command	<APN>	See write command	<PDP_addr>	See write command	<d_comp>	See test command	<h_comp>	See test command
<cid>	See write command												
<PDP_type>	See write command												
<APN>	See write command												
<PDP_addr>	See write command												
<d_comp>	See test command												
<h_comp>	See test command												
<p>Write command AT+CGDCONT=[&lt;cid&gt;[,&lt;PDP_type&gt;[,&lt;APN&gt;[,&lt;PDP_addr&gt;]]]]</p>	<p>This command specifies PDP context parameter values for a PDP context identified by the (local) context identification parameter, &lt;cid&gt;. A special form of the set command, +CGDCONT= &lt;cid&gt; causes the values for context number &lt;cid&gt; to become undefined. AT&amp;F and ATZ will undefine every context which is not active or not online.</p> <p>Parameter</p> <table> <tr> <td>&lt;cid&gt;</td><td>This PDP Context Identifier is a numeric parameter which specifies a particular PDP context definition. The parameter is local to the TE-MT interface and is also used in other PDP context-related commands. If no cid is given, nothing will be changed (neither context definition nor undefinition). 1 2</td></tr> </table>	<cid>	This PDP Context Identifier is a numeric parameter which specifies a particular PDP context definition. The parameter is local to the TE-MT interface and is also used in other PDP context-related commands. If no cid is given, nothing will be changed (neither context definition nor undefinition). 1 2										
<cid>	This PDP Context Identifier is a numeric parameter which specifies a particular PDP context definition. The parameter is local to the TE-MT interface and is also used in other PDP context-related commands. If no cid is given, nothing will be changed (neither context definition nor undefinition). 1 2												

	<p><b>&lt;PDP_type&gt;</b> Packet Data Protocol type is a string parameter which specifies the type of packet data protocol: <b>IP</b> Internet Protocol (IETF STD 5)</p> <p><b>&lt;APN&gt;</b> Access Point Name is a string parameter (framed by quotation marks) which is a logical name that is used to select the GGSN or the external packet data network. If the value is null or omitted, then the subscription value will be requested.</p> <p><b>&lt;PDP_addr&gt;</b> String parameter that identifies the MT in the address space applicable to the PDP (e.g. IP V4 address for PDP type IP). If the value is null or omitted, then a value may be provided by the TE during the PDP startup procedure or, failing that, a dynamic address will be requested.</p> <p>Response <b>OK/ERROR/+CME ERROR</b></p>
Reference GSM 07.07	

### 6.1.5 AT+CGQMIN Quality of Service Profile (Minimum acceptable)

<p>Test command</p> <p>AT+CGQMIN=?</p>	<p>The test command returns values supported as a compound value. If the MT supports several PDP types, the parameter value ranges for each PDP type are returned on a separate line.</p> <p>Response</p> <p>+CGQMIN: &lt;PDP_type&gt;, (list of supported &lt;precedence&gt;s), (list of supported &lt;delay&gt;s), (list of supported &lt;reliability&gt;s) , (list of supported &lt;peak&gt;s), (list of supported &lt;mean&gt;s) [&lt;CR&gt;&lt;LF&gt;+CGQMIN: ...]</p> <p><b>OK/ERROR/+CME ERROR</b></p> <p>Parameter</p> <table> <tr> <td>&lt;PDP_type&gt;</td><td>String parameter of Packet Data Protocol type IP</td></tr> <tr> <td>&lt;precedence&gt;</td><td>See write command</td></tr> <tr> <td>&lt;delay&gt;</td><td>See write command</td></tr> <tr> <td>&lt;reliability&gt;</td><td>See write command</td></tr> <tr> <td>&lt;peak&gt;</td><td>See write command</td></tr> <tr> <td>&lt;mean&gt;</td><td>See write command</td></tr> </table>	<PDP_type>	String parameter of Packet Data Protocol type IP	<precedence>	See write command	<delay>	See write command	<reliability>	See write command	<peak>	See write command	<mean>	See write command
<PDP_type>	String parameter of Packet Data Protocol type IP												
<precedence>	See write command												
<delay>	See write command												
<reliability>	See write command												
<peak>	See write command												
<mean>	See write command												
<p>Read command</p> <p>AT+CGQMIN?</p>	<p>Response</p> <p>The read command returns the current settings for each defined context. If no minimum profile was explicitly specified for a context, simply <b>OK</b> will be returned, but default values will be used for that context.</p> <p>+CGQMIN: &lt;cid&gt;, &lt;precedence&gt;, &lt;delay&gt;, &lt;reliability&gt;, &lt;peak&gt;, &lt;mean&gt; [&lt;CR&gt;&lt;LF&gt;+CGQMIN: ...]</p> <p><b>OK/ERROR/+CME ERROR</b></p> <p>Parameter</p> <table> <tr> <td>&lt;cid&gt;</td><td>See write command</td></tr> <tr> <td>&lt;precedence&gt;</td><td>See write command</td></tr> <tr> <td>&lt;delay&gt;</td><td>See write command</td></tr> <tr> <td>&lt;reliability&gt;</td><td>See write command</td></tr> <tr> <td>&lt;peak&gt;</td><td>See write command</td></tr> <tr> <td>&lt;mean&gt;</td><td>See write command</td></tr> </table>	<cid>	See write command	<precedence>	See write command	<delay>	See write command	<reliability>	See write command	<peak>	See write command	<mean>	See write command
<cid>	See write command												
<precedence>	See write command												
<delay>	See write command												
<reliability>	See write command												
<peak>	See write command												
<mean>	See write command												
<p>Write command</p> <p>AT+CGQMIN=</p> <p>[&lt;cid&gt;[,&lt;precedence&gt;[,&lt;delay&gt;[,&lt;reliability&gt;[,&lt;peak&gt;[,&lt;mean&gt;]]]]]]</p>	<p>This command allows the TE to specify a minimum acceptable profile which is checked by the MT against the negotiated profile returned in the Activate PDP Context Accept message.</p> <p>The set command specifies a profile for the context identified by the (local) context identification parameter, &lt;cid&gt;.</p> <p>A special form of the set command, +CGQMIN= &lt;cid&gt; causes the minimum acceptable profile for context number &lt;cid&gt; to become undefined. In this case no check is made against the negotiated profile.</p> <p>AT&amp;F and ATZ will undefine the minimum QoS profiles of every context which is not active or not online.</p>												

## Parameter

<b>&lt;cid&gt;</b>	numeric PDP Context Identifier; if no cid is specified, nothing will be changed (no profile definition / undefinition) 1 2																														
<b>&lt;precedence&gt;</b>	numeric parameter for the precedence class 0 network subscribed value 1 High Priority Service commitments shall be maintained ahead of precedence classes 2 and 3 2 Normal priority Service commitments shall be maintained ahead of precedence class 3 3 Low priority Service commitments shall be maintained ahead of precedence classes 1 and 2																														
<b>&lt;delay&gt;</b>	numeric parameter for the delay class 0 network subscribed value SDU size: 128 octets: <table><tr><td><i>Delay Class</i></td><td><i>Mean Transfer Delay</i></td><td><i>95 percentile Delay</i></td></tr><tr><td>1 (Predictive)</td><td>&lt;0.5</td><td>&lt;1.5</td></tr><tr><td>2 (Predictive)</td><td>&lt; 5</td><td>&lt; 25</td></tr><tr><td>3 (Predictive)</td><td>&lt; 50</td><td>&lt; 250</td></tr><tr><td>4 (Best Effort)</td><td>Unspecified</td><td></td></tr></table> SDU size: 1024 octets: <table><tr><td><i>Delay Class</i></td><td><i>Mean Transfer Delay</i></td><td><i>95 percentile Delay</i></td></tr><tr><td>1 (Predictive)</td><td>&lt;0.5</td><td>&lt;1.5</td></tr><tr><td>2 (Predictive)</td><td>&lt; 5</td><td>&lt; 25</td></tr><tr><td>3 (Predictive)</td><td>&lt; 50</td><td>&lt; 250</td></tr><tr><td>4 (Best Effort)</td><td>Unspecified</td><td></td></tr></table> The delay parameter defines the end-to-end transfer delay incurred in the transmission of SDUs through the GPRS network(s).	<i>Delay Class</i>	<i>Mean Transfer Delay</i>	<i>95 percentile Delay</i>	1 (Predictive)	<0.5	<1.5	2 (Predictive)	< 5	< 25	3 (Predictive)	< 50	< 250	4 (Best Effort)	Unspecified		<i>Delay Class</i>	<i>Mean Transfer Delay</i>	<i>95 percentile Delay</i>	1 (Predictive)	<0.5	<1.5	2 (Predictive)	< 5	< 25	3 (Predictive)	< 50	< 250	4 (Best Effort)	Unspecified	
<i>Delay Class</i>	<i>Mean Transfer Delay</i>	<i>95 percentile Delay</i>																													
1 (Predictive)	<0.5	<1.5																													
2 (Predictive)	< 5	< 25																													
3 (Predictive)	< 50	< 250																													
4 (Best Effort)	Unspecified																														
<i>Delay Class</i>	<i>Mean Transfer Delay</i>	<i>95 percentile Delay</i>																													
1 (Predictive)	<0.5	<1.5																													
2 (Predictive)	< 5	< 25																													
3 (Predictive)	< 50	< 250																													
4 (Best Effort)	Unspecified																														
<b>&lt;reliability&gt;</b>	numeric parameter for the reliability class 0 network subscribed value 1 Non real-time traffic , error-sensitive application that cannot cope with data loss 2 Non real-time traffic, error-sensitive application that can cope with infrequent data loss 3 Non real-time traffic, error-sensitive application that can cope with data loss, GMM/SM, and SMS 4 Real-time traffic, error-sensitive application that can cope with data loss 5 Real-time traffic, error non-sensitive application that can cope with data loss																														

<b>&lt;peak&gt;</b>	numeric parameter for the peak throughput class	
	<u>0</u> network subscribed value	
	<i>Peak Throughput</i>	<i>Class Peak Throughput</i>
		<i>(in octets per second)</i>
	1	Up to 1 000 (8 kbit/s)
	2	Up to 2 000 (16 kbit/s)
	3	Up to 4 000 (32 kbit/s)
	4	Up to 8 000 (64 kbit/s)
	5	Up to 16 000 (128 kbit/s)
	6	Up to 32 000 (256 kbit/s)
	7	Up to 64 000 (512 kbit/s)
	8	Up to 128 000 (1 024 kbit/s)
	9	Up to 256 000 (2 048 kbit/s)

<b>&lt;mean&gt;</b>	numeric parameter for the mean throughput class	
	<u>0</u> network subscribed value	
	<i>Mean Throughput Class</i>	<i>Mean Throughput</i>
		<i>(in octets per hour)</i>
	1	100 (~0.22 bit/s)
	2	200 (~0.44 bit/s)
	3	500 (~1.11 bit/s)
	4	1 000 (~2.2 bit/s)
	5	2 000 (~4.4 bit/s)
	6	5 000 (~11.1 bit/s)
	7	10 000 (~22 bit/s)
	8	20 000 (~44 bit/s)
	9	50 000 (~111 bit/s)
	10	100 000 (~0.22 kbit/s)
	11	200 000 (~0.44 kbit/s)
	12	500 000 (~1.11 kbit/s)
	13	1 000 000 (~2.2 kbit/s)
	14	2 000 000 (~4.4 kbit/s)
	15	5 000 000 (~11.1 kbit/s)
	16	10 000 000 (~22 kbit/s)
	17	20 000 000 (~44 kbit/s)
	18	50 000 000 (~111 kbit/s)
	31	best effort.

Note: If parameters are not defined, the parameter default values depend on the HLR-stored subscribed default values.

Definitions of parameters in GSM 02.60 and GSM 03.60 paragraph 15.2 "Quality of Service Profile".

If some of the QoS parameters are omitted, they will keep their current value (or the default value if not specified so far), e.g.

**at+cgqmin?**

**OK**

**at+cgqmin=1,0**

**OK**

**at+cgqmin?**

**+CGQMIN:1,0,0,0,0,0**

**OK**

	<b>at+cgqmin=1,0,0,0,1</b> <b>OK</b> <b>at+cgqmin?</b> <b>+CGQMIN:1,0,0,0,1,0</b> <b>OK</b> <b>at+cgqmin=1,1</b> <b>OK</b> <b>at+cgqmin?</b> <b>+CGQMIN:1,1,0,0,1,0</b> <b>OK</b>  Response <b>OK/ERROR/+CME ERROR</b>
Reference GSM 07.07	

### 6.1.6 AT+CGQREQ Quality of Service Profile (Requested)

<p>Test command</p> <p>AT+CGQREQ=?</p>	<p>The test command returns values supported as a compound value. If the MT supports several PDP types, the parameter value ranges for each PDP type are returned on a separate line.</p> <p>Response</p> <p><b>+CGQREQ: &lt;PDP_type&gt;, (list of supported &lt;precedence&gt;s), (list of supported &lt;delay&gt;s), (list of supported &lt;reliability&gt;s), (list of supported &lt;peak&gt;s), (list of supported &lt;mean&gt;s) [&lt;CR&gt;&lt;LF&gt;+CGQREQ: ...]</b></p> <p><b>OK/ERROR/+CME ERROR</b></p> <p>Parameter</p> <table> <tr> <td><b>&lt;PDP_type&gt;</b></td><td>String parameter of Packet Data Protocol type IP</td></tr> <tr> <td><b>&lt;precedence&gt;</b></td><td>See write command</td></tr> <tr> <td><b>&lt;delay&gt;</b></td><td>See write command</td></tr> <tr> <td><b>&lt;reliability&gt;</b></td><td>See write command</td></tr> <tr> <td><b>&lt;peak&gt;</b></td><td>See write command</td></tr> <tr> <td><b>&lt;mean&gt;</b></td><td>See write command</td></tr> </table>	<b>&lt;PDP_type&gt;</b>	String parameter of Packet Data Protocol type IP	<b>&lt;precedence&gt;</b>	See write command	<b>&lt;delay&gt;</b>	See write command	<b>&lt;reliability&gt;</b>	See write command	<b>&lt;peak&gt;</b>	See write command	<b>&lt;mean&gt;</b>	See write command
<b>&lt;PDP_type&gt;</b>	String parameter of Packet Data Protocol type IP												
<b>&lt;precedence&gt;</b>	See write command												
<b>&lt;delay&gt;</b>	See write command												
<b>&lt;reliability&gt;</b>	See write command												
<b>&lt;peak&gt;</b>	See write command												
<b>&lt;mean&gt;</b>	See write command												
<p>Read command</p> <p>AT+CGQREQ?</p>	<p>The read command returns the current settings for each defined context. If no requested profile was explicitly specified for a context, simply <b>OK</b> will be returned, but default values will be used for that context.</p> <p>Response</p> <p><b>+CGQREQ: &lt;cid&gt;, &lt;precedence&gt;, &lt;delay&gt;, &lt;reliability&gt;, &lt;peak&gt;, &lt;mean&gt; [&lt;CR&gt;&lt;LF&gt;+CGQREQ: ...]</b></p> <p><b>OK/ERROR/+CME ERROR</b></p> <table> <tr> <td><b>&lt;cid&gt;</b></td><td>See write command</td></tr> <tr> <td><b>&lt;precedence&gt;</b></td><td>See write command</td></tr> <tr> <td><b>&lt;delay&gt;</b></td><td>See write command</td></tr> <tr> <td><b>&lt;reliability&gt;</b></td><td>See write command</td></tr> <tr> <td><b>&lt;peak&gt;</b></td><td>See write command</td></tr> <tr> <td><b>&lt;mean&gt;</b></td><td>See write command</td></tr> </table>	<b>&lt;cid&gt;</b>	See write command	<b>&lt;precedence&gt;</b>	See write command	<b>&lt;delay&gt;</b>	See write command	<b>&lt;reliability&gt;</b>	See write command	<b>&lt;peak&gt;</b>	See write command	<b>&lt;mean&gt;</b>	See write command
<b>&lt;cid&gt;</b>	See write command												
<b>&lt;precedence&gt;</b>	See write command												
<b>&lt;delay&gt;</b>	See write command												
<b>&lt;reliability&gt;</b>	See write command												
<b>&lt;peak&gt;</b>	See write command												
<b>&lt;mean&gt;</b>	See write command												
<p>Write command</p> <p>AT+CGQREQ= [&lt;cid&gt;[,&lt;precedence&gt; ,&lt;delay&gt;[,&lt;reliability&gt; ,&lt;peak&gt;[,&lt;mean&gt;]]]]]</p>	<p>This command allows the TE to specify a Quality of Service Profile that is used when the MT sends an Activate PDP Context Request message to the network.</p> <p>The set command specifies a profile for the context identified by the (local) context identification parameter, &lt;cid&gt;.</p> <p>A special form of the set command, <b>+CGQREQ= &lt;cid&gt;</b> causes the requested profile for context number &lt;cid&gt; to become undefined.</p> <p>AT&amp;F and ATZ will undefine the QoS profiles of every context which is not active or not online.</p> <p>Parameter</p> <table> <tr> <td><b>&lt;cid&gt;</b></td><td>numeric PDP Context Identifier; if no cid is specified, nothing will be changed (neither profile definition nor undefinition)</td></tr> <tr> <td>1</td><td></td></tr> <tr> <td>2</td><td></td></tr> </table>	<b>&lt;cid&gt;</b>	numeric PDP Context Identifier; if no cid is specified, nothing will be changed (neither profile definition nor undefinition)	1		2							
<b>&lt;cid&gt;</b>	numeric PDP Context Identifier; if no cid is specified, nothing will be changed (neither profile definition nor undefinition)												
1													
2													



**<precedence>**

numeric parameter for the precedence class

0 network subscribed value

1 High Priority

Service commitments shall be maintained ahead of precedence classes 2 and 3

2 Normal priority

Service commitments shall be maintained ahead of precedence class 3

3 Low priority

Service commitments shall be maintained ahead of precedence classes 1 and 2

**<delay>**

numeric parameter for the delay class

0 network subscribed value

SDU size: 128 octets:

<i>Delay Class</i>	<i>Mean Transfer Delay</i>	<i>95 percentile Delay</i>
1 (Predictive)	<0.5	<1.5
2 (Predictive)	< 5	< 25
3 (Predictive)	< 50	< 250
4 (Best Effort)	Unspecified	

SDU size: 1024 octets:

<i>Delay Class</i>	<i>Mean Transfer Delay</i>	<i>95 percentile Delay</i>
1 (Predictive)	<0.5	<1.5
2 (Predictive)	< 5	< 25
3 (Predictive)	< 50	< 250
4 (Best Effort)	Unspecified	

The delay parameter defines the end-to-end transfer delay incurred in the transmission of SDUs through the GPRS network(s).

**<reliability>**

numeric parameter for the reliability class

0 network subscribed value

1 Non real-time traffic, error-sensitive application that cannot cope with data loss

2 Non real-time traffic, error-sensitive application that can cope with infrequent data loss

3 Non real-time traffic, error-sensitive application that can cope with data loss, GMM/SM, and SMS

4 Real-time traffic, error-sensitive application that can cope with data loss

5 Real-time traffic, error non-sensitive application that can cope with data loss

<peak>	numeric parameter for the peak throughput class	
	<u>0</u> network subscribed value	
	<i>Peak Throughput</i>	<i>Class Peak Throughput (in octets per second)</i>
	1	Up to 1 000 (8 kbit/s).
	2	Up to 2 000 (16 kbit/s).
	3	Up to 4 000 (32 kbit/s).
	4	Up to 8 000 (64 kbit/s).
	5	Up to 16 000 (128 kbit/s).
	6	Up to 32 000 (256 kbit/s).
	7	Up to 64 000 (512 kbit/s).
	8	Up to 128 000 (1 024 kbit/s).
	9	Up to 256 000 (2 048 kbit/s).
<mean>	numeric parameter for the mean throughput class	
	<u>0</u> network subscribed value	
	<i>Mean Throughput Class</i>	<i>Mean Throughput (in octets per hour)</i>
	1	100 (~0.22 bit/s)
	2	200 (~0.44 bit/s)
	3	500 (~1.11 bit/s)
	4	1 000 (~2.2 bit/s)
	5	2 000 (~4.4 bit/s)
	6	5 000 (~11.1 bit/s)
	7	10 000 (~22 bit/s)
	8	20 000 (~44 bit/s)
	9	50 000 (~111 bit/s)
	10	100 000 (~0.22 kbit/s)
	11	200 000 (~0.44 kbit/s)
	12	500 000 (~1.11 kbit/s)
	13	1 000 000 (~2.2 kbit/s)
	14	2 000 000 (~4.4 kbit/s)
	15	5 000 000 (~11.1 kbit/s)
	16	10 000 000 (~22 kbit/s)
	17	20 000 000 (~44 kbit/s)
	18	50 000 000 (~111 kbit/s)
	31	best effort.

Note: If parameters are not defined, the parameter default values depend on the HLR-stored subscribed default values.

If some of the QoS parameters are omitted, then they will keep their current value (or the default value if not specified so far), e.g.

```
at+cgqreq?
OK
at+cgqreq=1,0
OK
at+cgqreq?
+CGQREQ:1,0,0,0,0
OK
```

	<pre>at+cgqreq=1,0,0,1 OK at+cgqreq? +CGQREQ:1,0,0,1,0,0 OK at+cgqreq=1,1 OK at+cgqreq? +CGQREQ:1,1,0,1,0,0 OK</pre> <p>Definitions of parameters in GSM 02.60 and GSM 03.60 paragraph 15.2 "Quality of Service Profile".</p> <p>Response</p> <p><b>OK/ERROR/+CME ERROR</b></p>
Reference GSM 07.07	

### 6.1.7 AT+CGSMS Select service for MO SMS messages

Test command AT+CGSMS=?	<p>The test command lists the services and service preferences which can be selected with the AT+CGSMS write command.</p> <p>Response <b>+CGSMS:</b> (list of supported &lt;service&gt;s <b>OK</b></p> <p>Parameter &lt;service&gt;                      See write command</p>								
Read command AT+CGSMS?	<p>The read command returns the currently selected service or service preference.</p> <p>Response <b>+CGSMS:</b> &lt;service&gt; <b>OK/ERROR/+CME ERROR</b></p> <p>&lt;service&gt;                      See write command</p>								
Write command AT+CGSMS= [<service>]	<p>The write command specifies what service or service preference the MT shall use when sending MO SMS messages. If parameter &lt;service&gt; is not given, the current value remains unchanged.</p> <p>Parameter &lt;service&gt;      a numeric parameter which indicates the service or service preference to be used.</p> <table border="0"> <tr><td>0</td><td>GPRS</td></tr> <tr><td>1</td><td>circuit switched</td></tr> <tr><td>2</td><td>GPRS preferred (use circuit switched if mobile is not GPRS attached or during a CS call)</td></tr> <tr><td>3</td><td>circuit switched preferred (use GPRS if circuit switched is not available)</td></tr> </table> <p>Response <b>OK/ERROR/+CME ERROR</b></p>	0	GPRS	1	circuit switched	2	GPRS preferred (use circuit switched if mobile is not GPRS attached or during a CS call)	3	circuit switched preferred (use GPRS if circuit switched is not available)
0	GPRS								
1	circuit switched								
2	GPRS preferred (use circuit switched if mobile is not GPRS attached or during a CS call)								
3	circuit switched preferred (use GPRS if circuit switched is not available)								
Reference GSM 07.07	<p>Note:</p> <ul style="list-style-type: none"> <li>• Default value is 3 (circuit switched preferred).</li> <li>• Parameter cannot be stored to user profile (AT&amp;W).</li> </ul>								

### 6.1.8 AT^SGAUTH Set type of authentication for PPP connection

Test command AT^SGAUTH=?	<p>Response</p> <p><b>^SGAUTH:</b> (list of supported &lt;auth&gt;s) <b>OK/ERROR/+CME ERROR</b></p> <p>Parameter</p> <p>&lt;auth&gt;        indicates types of supported authentication</p> <p>0   None</p> <p>1   PAP</p> <p>2   CHAP</p> <p>3   PAP and CHAP</p>
Read command AT^SGAUTH?	<p>Response</p> <p><b>+CGACT:</b> &lt;auth&gt; <b>OK/ ERROR/ + CME ERROR</b></p> <p>Parameter</p> <p>See test command</p>
Write command AT^SGAUTH= <auth>	<p>Response</p> <p><b>OK/ ERROR/ + CME ERROR</b></p> <p>Parameter</p> <p>See test command</p>
Reference Siemens	<p>Note:</p> <ul style="list-style-type: none"> <li>• Power on default value is 3 (PAP and CHAP)</li> <li>• Parameter cannot be stored using <b>AT&amp;W</b></li> </ul>

## 6.2 Modem compatibility commands to MTs supporting GPRS

This subclause describes how existing AT commands, designed for use with a modem, may be used to control a GPRS MT. This is to provide backwards compatibility with existing communications software.

### 6.3 ATD \*99# Request GPRS service

<p>Execute command</p> <p>ATD*99[*[&lt;called_address&gt;] [*[&lt;L2P&gt;][*[&lt;cid&gt;]]]]#</p>	<p>This command causes the MT to perform whatever actions are necessary to establish communication between the TE and the external PDN.</p> <p>The V.25ter 'D' (Dial) command causes the MT to enter the V.25ter online data state and, with the TE, to start the specified layer 2 protocol. No further commands may follow on the AT command line. GPRS attachment and PDP context activation procedures may take place prior to or during the PDP startup if they have not already been performed using the +CGATT (see Chapter 6.1.1) and +CGACT (see Chapter 6.1.2) commands. If the context to be used is already activated, it will be deactivated first. This ensures that the right context parameters will be used (e.g. QoS changes since the last context activation or the called address specified by ATD).</p> <p>Examples on how to use this command are provided in chapter 6.5.</p> <p>Response</p> <p>To confirm acceptance of the command to entering the V.25ter online data state:</p> <p><b>CONNECT</b></p> <p>When the layer 2 protocol has terminated, either as a result of an orderly shut down of the PDP or an error, the MT enters V.25ter command state and returns</p> <p><b>NO CARRIER</b></p> <p>Parameter</p> <p><b>&lt;called_address&gt;</b> IP V4 address in the form w.x.y.z, see chapter "Using the GPRS dial command ATD", pg. 179 which identifies the called party; if it is provided, the MT will automatically set up a virtual call to the specified address after the context has been activated. This parameter is currently not used and needs not be specified.</p> <p><b>&lt;L2P&gt;</b> layer 2 protocol to be used between the TE and MT PPP or layer2 for PPP protocol</p> <p><b>&lt;cid&gt;:</b> numeric parameter which specifies a particular PDP context definition (see +CGDCONT command). If no context is specified, an internal context 0 with default QoS (network subscribed) and APN from EEPROM (if there is one) is used.</p> <p>1 2</p> <p>Note: The +CGDCONT, +CGQREQ, etc. commands may be used prior to set values for cid, PDP type, APN, QoS etc..</p>
<p>Reference</p> <p>GSM 07.07</p>	<p>Note</p> <p>ATD is used as a standard V.25ter AT Command, too.</p>

### 6.3.1 ATD \*98# Request GPRS IP service

<p>Execute command</p> <p>ATD*98[*&lt;cid&gt;]#</p>	<p>This command causes the MT to perform whatever actions are necessary to establish a communication between the TE and the external PDN.</p> <p>The V.25ter 'D' (Dial) command causes the MT to enter the V.25ter online data state and, with the TE, to start the layer 2 protocol.</p> <p>GPRS attachment and PDP context activation procedures may take place prior to or during the PDP startup if they have not already been performed using the +CGATT (see Chapter 6.1.1) and +CGACT (see Chapter 6.1.2) commands. If the context to be used is already activated, it will be deactivated first. This ensures that the right context parameters will be used (e.g. QoS changes since the last context activation).</p> <p>Note: An example of how to use this command can be seen in chapter 6.5</p> <p>Response</p> <p>To confirm acceptance of the command to entering the V.25ter online data state:</p> <p><b>CONNECT</b></p> <p>When the layer 2 protocol has terminated, either as a result of an orderly shut down of the PDP or an error, the MT enters V.25ter command state and return</p> <p><b>NO CARRIER</b></p> <p>Parameter</p> <p>&lt;cid&gt;:    numeric parameter which specifies a particular PDP context definition (see +CGDCONT command). If no context is specified, an internal context 0 with default QoS (network subscribed) and APN from EEPROM (if there is one) is used.</p> <p>          1</p> <p>          2</p> <p>Note: The +CGDCONT, +CGQREQ, etc. commands may be used prior to set values for cid, PDP type, APN, QoS etc..</p>
<p>Reference</p> <p>GSM 07.07</p>	<p>Note:</p> <p>ATD is used as a standard V.25ter AT-Command, too.</p>

**6.3.2 ATH Manual rejection of a network request for PDP context activation**

Execute command ATH	<p>Response</p> <p>The V.25ter 'H' or 'H0' (On-hook) command may be used to reject a network request for PDP context activation announced by the unsolicited result code <b>RING</b></p> <p>or</p> <p><b>+CRING: GPRS &lt;PDP_type&gt;,&lt;PDP_addr&gt;</b></p> <p>The MT responds with <b>OK</b></p>
Reference GSM 07.07	<p>Note</p> <ul style="list-style-type: none"><li>• In contrast to GSM 07.07 it is possible to cancel a connection with ATH after a break. This is done for compatibility reasons due to the “dial-up network” (“DFÜ-Netzwerk”) drivers of Microsoft® Windows®.</li><li>• ATH is used as a standard V.25ter AT Command, too. See Chapter 2.12.</li><li>• If any PDP context is activated, then it will be deactivated. In Mux mode, ATH only clears the active PDP context on the same channel where ATH was issued.</li></ul>



## 6.4 Using GPRS AT commands (examples)

### 6.4.1 Miscellaneous AT commands

Defining and using a Context Definition Id (CID):

Every time a CID is used as a parameter for a GPRS command the CID has to be defined before by the AT+CGDCONT command. To get the parameter of a CID use the AT+CGDCONT read option. If the response of 'AT+CGDCONT?' is OK only, there is no CID defined.

```
AT+CGDCONT?  
OK // there is no CID defined
```

All parameters of the CID are initiated by NULL or not present values and the CID itself is set to be undefined. To define a CID use the AT+CGDCONT Command with at least one CID parameter. At the moment the mobile supports CID 1 and CID 2 by using the AT+CGDCONT command.

Examples:

```
AT+CGDCONT=1,IP  
OK // defines CID 1 and sets the PDP type to IP  
// access point name and IP address aren't set
```

```
AT+CGDCONT=2,IP, "internet.t-d1.gprs", 111.222.123.234  
OK // defines CID 2 and sets PDP type, APN and IP addr
```

A following read command will respond

```
AT+CGDCONT?  
+CGDCONT:1,IP  
+CGDCONT:2,IP," internet.t-d1.gprs",111.222.123.234  
OK
```

```
AT+CGDCONT=1  
OK // sets the CID 1 to be undefined
```

A following read command will respond

```
AT+CGDCONT?  
+CGDCONT:2,IP, "internet.t-d1.gprs",111.222.123.234  
OK
```

Quality of Service (QoS) is a special parameter of a CID which consists of several parameters itself. The QoS consists of

- the precedence class
- the delay class
- the reliability class
- the peak throughput class
- the mean throughput class

and is divided in "requested QoS" and "minimum acceptable QoS".

All parameters of the QoS are initiated by default to the "network subscribed value (= 0)" but the QoS itself is set to be undefined. To define a QoS use the AT+CGQREQ or AT+CGQMIN command.

Examples:

```
AT+CGQREQ=1,2
OK                // overwrites the precedence class of QoS of CID 1 and sets
                  // the QoS of CID 1 to be present
```

A following read command will response

```
AT+CGQREQ?
+CGQREQ: 1,2,0,0,0,0
OK                // all QoS values of CID 1 are set to network subscribed
                  // except precedence class which is set to 2
```

```
AT+CGQREQ=1
OK                // set the QoS of CID 1 to not present
```

Once defined, the CID it can be activated. To activate a CID use

```
AT+CGACT=1,2
OK                // activate CID 2
```

If the CID is already active, the mobile responses OK at once.

If no CID is given, all defined CIDs will be activated by

```
AT+CGACT=         // NO CID and NO STATE given
OK                // all defined CIDs will be activated
```

If no CID is defined the mobile responses +CME ERROR: invalid index

Remark: If the mobile is NOT attached by AT+CGATT=1 before activating, the attach is automatically done by the AT+CGACT command.

After defining and activating a CID it may be used to get online by

```
AT+CGDATA=PPP,1
CONNECT           // the mobile is connected using the parameters of CID 1
```

```
AT+CDATA=
CONNECT           // the mobile is connected using default parameter
```

The mobile supports Layer 2 Protocol (L2P) PPP only.

Remark: If the mobile is NOT attached by AT+CGATT=1 and the CID is NOT activated before connecting, attaching and activating is automatically done by the AT+CGDATA command.

Some providers (e.g. D2 or E-Plus) require to use an APN to establish a GPRS connection. So if you use the Microsoft Windows Dial-Up Network and ATD\*9... to connect to GPRS you must provide the context definition as part of the modem definition (Modem properties/Connection/Advanced.../Extra settings). As an alternative, you can define and activate the context in a terminal program (e.g. Microsoft Hyperterminal) and then use the Dial-Up Network to send only the ATD command.

## 6.5 Using the GPRS dial command ATD

In addition to the GPRS AT Commands you can use the "D" command to dial into to the GPRS network.

There are two GPRS Service Codes for the ATD Command: Values 98 and 99.

Examples:

```
ATD*99#  
CONNECT          // establish a connection by service code 99  
  
ATD*99*123.124.125.126*PPP*1#  
CONNECT          // establish a connection by service code 99, IP address 123...  
                  //and L2P = PPP and using CID 1.  
                  // The CID has to be defined by AT+CGDCONT  
  
ATD*99**PPP#  
CONNECT          // establish a connection by service code 99 and L2P = PPP  
  
ATD*99***1#  
CONNECT          // establish a connection by service code 99 and using CID 1  
  
ATD*99**PPP*1#  
CONNECT          // establish a connection by service code 99 and L2P = PPP and  
                  // using CID 1. The CID has to be defined by AT+CGDCONT  
  
ATD*98#  
CONNECT          // establish an IP connection by service code 98  
  
ATD*98*1#  
CONNECT          // establish an IP connection by service code 98 using CID 1  
                  // The CID has to be defined by AT+CGDCONT
```

## 7 AT Commands for SIM Application Toolkit (GSM 11.14)

SIM Application Toolkit (SAT) is a technology that lets the SIM card execute a great variety of additional applications. Conventionally, SIM cards are intended to store user specific data, such as phone-books, secure user identification codes and messages, but they can also hold a lot of value-added mobile applications.

The SAT functionality integrated in MC35 and MC35T allows to execute network specific applications implemented on the SIM card. Typical examples are online banking and information services.

The commands exchanged between SAT and the SIM application fall into two categories:

- Proactive commands – sent from the SIM application to the module's SAT, e.g. DISPLAY TEXT.
- Envelope commands – sent from the module's SAT to the SIM application, e.g. MENU SELECTION.

The SAT implementation supports SAT class 3, GSM 11.14 Release 98, no support of letter classes. GSM 11.14 describes Proactive and Envelope Commands in detail.

**Note:** To give you an idea, this chapter contains a brief overview of the AT commands and responses related to the SIM Application Toolkit (SAT) implementation. The full set of SAT specific AT commands and a detailed description of the SAT functions is provided in a separate documentation: the "MC35 Remote-SAT User's Guide" supplied with MC35 and MC35 Terminal. Please contact your local dealer or Siemens AG for details.

## 7.1 AT^SSTA Remote-SAT Interface Activation

Test command AT^SSTA=?	Response ^SSTA:(list of supported <state>s), (list of supported <alphabet>s) Parameter description see below.						
Read command AT^SSTA?	<p>The read command can be used to request the current operating status and the used alphabet of the Remote-SAT interface.</p> <p>Response ^SSTA:&lt;state&gt;,&lt;alphabet&gt;,&lt;allowedInstance&gt;,&lt;SatProfile&gt;</p> <p>&lt;state&gt; device state:</p> <p>&lt;allowedInstance&gt;</p> <table> <tr> <td>0</td><td>SAT is already used on an other instance (logical channel in case of the multiplex protocol). Only test and read commands can be used.</td></tr> <tr> <td>1</td><td>SAT may be started on this instance via the write version of this command (see below).</td></tr> </table> <p>&lt;SatProfile&gt;</p> <p>SAT profile according to GSM 11.14. The profile tells the SIM application which features are supported by the SIM Application Toolkit implemented by the ME.</p>	0	SAT is already used on an other instance (logical channel in case of the multiplex protocol). Only test and read commands can be used.	1	SAT may be started on this instance via the write version of this command (see below).		
0	SAT is already used on an other instance (logical channel in case of the multiplex protocol). Only test and read commands can be used.						
1	SAT may be started on this instance via the write version of this command (see below).						
Write command AT^SSTA= <mode> [,<Alphabet>]	<p>The write command is used to activate the AT command interface to the SIM Application Toolkit in the ME, and must be issued after every power on. However, removing and inserting the SIM does not affect the activation status.</p> <p>SAT commands which are not using the AT interface (non MMI related SAT commands , e.g. PROVIDE LOCAL INFORMATION) may be executed without activating Remote-SAT.</p> <p>Response OK</p> <p>Parameter &lt;mode&gt;</p> <table> <tr> <td>1</td><td>Activate Remote-SAT (to enter state IDLE)</td></tr> </table> <p>&lt;Alphabet&gt;</p> <table> <tr> <td>0</td><td>ANSI character set Input of a character requests one byte , e.g. "Y".</td></tr> <tr> <td>1</td><td>UCS2 To display the 16 bit value of characters represented in UCS2 alphabet a 4 byte string is required, e.g. "0059" is coding the character "Y". For details please refer to ISO/IEC 10646.</td></tr> </table>	1	Activate Remote-SAT (to enter state IDLE)	0	ANSI character set Input of a character requests one byte , e.g. "Y".	1	UCS2 To display the 16 bit value of characters represented in UCS2 alphabet a 4 byte string is required, e.g. "0059" is coding the character "Y". For details please refer to ISO/IEC 10646.
1	Activate Remote-SAT (to enter state IDLE)						
0	ANSI character set Input of a character requests one byte , e.g. "Y".						
1	UCS2 To display the 16 bit value of characters represented in UCS2 alphabet a 4 byte string is required, e.g. "0059" is coding the character "Y". For details please refer to ISO/IEC 10646.						
Reference Siemens	Note						

## 7.2 ^SSTN Remote-SAT Notification

Proactive Commands	<p>Every time the SIM application issues a proactive command, via the ME, the TA will receive a notification. This indicates the type of proactive command issued. <b>AT^SSTGI</b> must then be used by the TA to request the parameters of the proactive command from the ME.</p> <p>Upon receiving the ^SSTGI response from the ME, the TA must send <b>AT^SSTR</b> to confirm the execution of the proactive command and provide any required user response, e.g. selected menu item.</p> <p>Unsolicited result code ^SSTN: &lt;cmdType&gt;</p> <p>Parameters &lt;cmdType&gt; Proactive command ID</p>
Terminate Proactive Command	<p>When the SIM application has issued a proactive command, via the ME, to the TA, it is possible that this command must be terminated. The ^SSTN Unsolicited Result Code is sent but with a different command type to indicate the termination of the specified command.</p> <p>Unsolicited result code ^SSTN: &lt;cmdTerminateValue&gt;</p> <p>Parameters &lt;cmdTerminateValue&gt; Terminate proactive command ID</p>
SIM Application returns to main menu	<p>Notification to the TA when the SIM Application has finished a command cycle and again enters its main menu.</p> <p>This URC should be used to open this menu on the screen.</p> <p>Unsolicited result code ^SSTN: &lt;254&gt;</p>
Reference Siemens	Note

### 7.3 AT^SSTGI Remote-SAT Get Information

Test command AT^SSTGI=?	<p>Response</p> <p>^SSTGI:(list of supported &lt;state&gt;s), (list of supported &lt;cmdType&gt;s)</p> <p>OK</p>
Read command AT^SSTGI?	<p>Response</p> <p>^SSTGI: &lt;state&gt;, &lt;cmdType&gt;</p> <p>OK</p> <p>Parameters</p> <p>&lt;state&gt; Remote-SAT interface states (refer to AT^SSTA)</p> <p>&lt;cmdType&gt; Ongoing Proactive Command</p>
Write command AT^SSTGI= <cmdType>	<p>Regularly this Write command is used upon receipt of an unsolicited result code ^SSTN:&lt;cmdType&gt;.</p> <p>The TA is expected to acknowledge the ^SSTGI response with AT^SSTR to confirm that the proactive command has been executed.</p> <p>AT^SSTR will also provide any user information, e.g. a selected menu item.</p> <p>The command type value is returned to the ME to identify which ^SSTN is being responded to.</p>
Reference Siemens	Note

## 7.4 AT^SSTR Remote-SAT Response

Test command AT^SSTR=?	Response ^SSTR:(list of supported <state>s), (list of supported <cmdType>s) OK
Read command AT^SSTR?	Response ^SSTR: <state>, <cmdType> OK  Parameters <state>                Remote-SAT interface state <cmdType>            Ongoing Proactive Command
Write command AT^SSTR= <cmdType>, <status> [,<itemId>] [,<inputString>]	The TA is expected to acknowledge the ^SSTGI response with AT^SSTR to confirm that the proactive command has been executed. AT^SSTR will also provide any user information, e.g. a selected menu item. Response OK  Parameters <cmdType>            Number related to Proactive command or event type  <status>              Command status return regarding the type of action that has taken place, e.g. action performed by the user.  <itemId>              id of menu item selected by user  <inputString>        string response entered by user
Reference Siemens	Note



## 8 Siemens defined AT commands for enhanced functions

Self-defined commands do not have to be implemented in accordance with the official syntax. The "+C" string can therefore be replaced by "^S" ("^" = 0x5E). If a self-defined command with the same syntax will be included in future in the GSM recommendations, the command can be addressed with both strings.

8.1 AT+CXXCID Display card ID (identical to AT^SCID)	
Test command AT+CXXCID=?	Response <b>OK</b> If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b> Parameter
Execute command AT+CXXCID	Response TA returns the card identification number in SIM (SIM file EF ICCID, see GSM 11.11 Chap.10.1.1) as string type. <b>See ^SCID</b> Parameter <b>See ^SCID</b>
Reference Siemens	Note

## 8.2 AT^MONI Monitor idle mode and dedicated mode

Test command	Response
AT^MONI=?	^MONI: (list of supported < period >s) OK
Write command	This command can be used to retrieve information of the serving/dedicated cell <i>automatically</i> every <i>n</i> seconds. It is cancelled by any character sent to serial port except if autobauding is enabled (+IPR=0). Then type character 'a' to abort.
AT^MONI[=<period>]	<p>Note:</p> <p>The two header lines (see below) are output after every ten data lines.</p> <p>Response</p> <p>See execute command</p> <p>Parameter</p> <p>&lt;period&gt;      1 – 254      Display period in seconds</p>
Execute command	This command can be used to retrieve the cell parameters of the serving/dedicated cell <i>on request</i> .
AT^MONI	<p>Note:</p> <p>The length of following output lines exceeds 80 characters. Therefore a terminal program may draw a carriage return on a screen. However, this is not part of the response.</p>

### Response (Examples)

#### ME is not connected:

##### a) ME is camping on a cell

```
Serving Cell
chann rs dBm PLMN LAC cell NCC BCC PWR RXLev C1 I chann TS timAdv PWR dBm Q ChMod
1013 21 -71 00101 1001 0103 7 7 33 -105 33 I No connection
```

##### b) ME camping on a cell, but searching for a better cell (cell reselection)

```
Serving Cell
chann rs dBm PLMN LAC cell NCC BCC PWR RXLev C1 I chann TS timAdv PWR dBm Q ChMod
1013 4 -106 00101 1001 0103 7 7 33 -105 -1 I in Reselecting
```

##### c) ME is not camping on a cell and could not (yet) find a suitable cell

```
Serving Cell
chann rs dBm PLMN LAC cell NCC BCC PWR RXLev C1 I chann TS timAdv PWR dBm Q ChMod
```

#### ME is connected:

```
Serving Cell
chann rs dBm PLMN LAC cell NCC BCC PWR RXLev C1 I chann TS timAdv PWR dBm Q ChMod
1013 19 -76 00101 1001 0103 7 7 33 -105 33 I 1015 1 0 5 -76 0 S HR
```

Parameters	<p><b>Serving Cell:</b></p> <p><b>chann</b> ARFCN (Absolute Frequency Channel Number) of the BCCH carrier</p> <p><b>rs</b> RSSI value 0 – 63 (RSSI = Received signal strength indication)</p> <p><b>dBm</b> receiving level of the BCCH carrier in dBm</p> <p><b>PLMN</b> PLMN ID code</p> <p><b>LAC</b> location area code, see note below.</p> <p><b>cell</b> cell ID, see note below.</p> <p><b>NCC</b> PLMN colour code</p> <p><b>BCC</b> base station colour code</p> <p><b>PWR</b> maximal power level used on RACH channel in dBm</p> <p><b>RXLev</b> minimal receiving level (in dBm) to allow registration</p> <p><b>C1</b> coefficient for base station selection</p>
------------	---

	<p><i>Dedicated channel:</i></p> <p><b>chann</b> ARFCN (Absolute Frequency Channel Number) of the TCH carrier Note: &lt;<b>chann</b>&gt; = <b>h</b> indicates frequency hopping.</p> <p><b>TS</b> timeslot number</p> <p><b>timAdv</b> timing advance in bits</p> <p><b>PWR</b> current power level</p> <p><b>dBm</b> receiving level of the traffic channel carrier in dBm</p> <p><b>Q</b> receiving quality (0–7)</p> <p><b>ChMod</b> channel mode (S_HR: Half rate, S_FR: Full rate, S_EFR: Enhanced Full Rate)</p>
Reference Siemens	<p>Note</p> <ul style="list-style-type: none"> <li>The parameters <b>LAC</b> and <b>cell</b> are presented as hexadecimal digits, the remaining parameters are composed of decimal digits.</li> <li>If the radio cell changes during a connection, the parameters <b>PWR</b> and <b>RXLv</b> of the 'Serving Cell' part cannot be updated under certain conditions and, therefore, are left blank (see also +CREG, pg 123). This is because the ME does not update the cell selection and reselection parameters since, in this mode, they are not relevant for operation. When the connections ends, and the ME is back to IDLE mode, both parameters will be updated. If the radio cell changes during a connection, it normally takes 1 or 2 seconds to update the parameter <b>cell</b>. Until the Cell ID is received from the new base station, the default value 0000 will be shown instead.</li> <li>If the BS supports frequency hopping <u>during a connection</u>, the dedicated channel (parameter <b>chann</b>) is not stable. This mode is indicated by <b>chann</b> = '<b>h</b>'.</li> <li>The cell information can be issued in the form of unsolicited result codes (related to &lt;<b>period</b>&gt;), or it can be queried directly using the Execute command AT^MONI. In the first case, the ME activates its RING line (Logic "1") for one second to send the URC to the connected application. In the second case, the RING line does not change.</li> </ul>

### 8.3 AT^MONP Monitor neighbour cells

Test command AT^MONP=?	Response ^MONP: (list of supported <period>s) OK																																																					
Write command AT^MONP=[<period>]	<p>This command can be used to retrieve information of up to six neighbour cells <i>automatically</i> every <i>n</i> seconds. It is cancelled by any character sent to the serial port except if autobauding is enabled (+IPR=0). Then type character 'a' to abort.</p> <p>Response See execute command</p> <p>Parameter &lt;period&gt;            1 – 254            Display period in seconds</p>																																																					
Execute command AT^MONP	<p>This command can be used to obtain information of up to six neighbour cells <i>on request</i>.</p> <table><tr><td>Response (Example)</td><td><table><tr><td>chann</td><td>rs</td><td>dBm</td><td>PLMN</td><td>BCC</td><td>C1</td><td>C2</td></tr><tr><td>504</td><td>18</td><td>-78</td><td>26203</td><td>1</td><td>27</td><td>27</td></tr><tr><td>476</td><td>15</td><td>-83</td><td>26203</td><td>3</td><td>22</td><td>22</td></tr><tr><td>421</td><td>13</td><td>-88</td><td>26203</td><td>1</td><td>17</td><td>17</td></tr><tr><td>440</td><td>10</td><td>-93</td><td>26203</td><td>7</td><td>12</td><td>12</td></tr><tr><td>446</td><td>9</td><td>-95</td><td>26203</td><td>7</td><td>10</td><td>10</td></tr><tr><td>417</td><td>8</td><td>-97</td><td>26203</td><td>4</td><td>8</td><td>8</td></tr></table></td></tr><tr><td></td><td>OK</td></tr></table> <p>Parameter:</p> <p><b>Chann</b>    ARFCN (Absolute Frequency Channel Number) of the BCCH carrier</p> <p><b>rs</b>        RSSI value 0 – 63 (RSSI = Received signal strength indication)</p> <p><b>dBm</b>      Receiving level in dBm</p> <p><b>PLMN</b>    PLMN ID code</p> <p><b>BCC</b>       Base Station colour code</p> <p><b>C1</b>        coefficient for base station selection</p> <p><b>C2</b>        coefficient for base station reselection</p>	Response (Example)	<table><tr><td>chann</td><td>rs</td><td>dBm</td><td>PLMN</td><td>BCC</td><td>C1</td><td>C2</td></tr><tr><td>504</td><td>18</td><td>-78</td><td>26203</td><td>1</td><td>27</td><td>27</td></tr><tr><td>476</td><td>15</td><td>-83</td><td>26203</td><td>3</td><td>22</td><td>22</td></tr><tr><td>421</td><td>13</td><td>-88</td><td>26203</td><td>1</td><td>17</td><td>17</td></tr><tr><td>440</td><td>10</td><td>-93</td><td>26203</td><td>7</td><td>12</td><td>12</td></tr><tr><td>446</td><td>9</td><td>-95</td><td>26203</td><td>7</td><td>10</td><td>10</td></tr><tr><td>417</td><td>8</td><td>-97</td><td>26203</td><td>4</td><td>8</td><td>8</td></tr></table>	chann	rs	dBm	PLMN	BCC	C1	C2	504	18	-78	26203	1	27	27	476	15	-83	26203	3	22	22	421	13	-88	26203	1	17	17	440	10	-93	26203	7	12	12	446	9	-95	26203	7	10	10	417	8	-97	26203	4	8	8		OK
Response (Example)	<table><tr><td>chann</td><td>rs</td><td>dBm</td><td>PLMN</td><td>BCC</td><td>C1</td><td>C2</td></tr><tr><td>504</td><td>18</td><td>-78</td><td>26203</td><td>1</td><td>27</td><td>27</td></tr><tr><td>476</td><td>15</td><td>-83</td><td>26203</td><td>3</td><td>22</td><td>22</td></tr><tr><td>421</td><td>13</td><td>-88</td><td>26203</td><td>1</td><td>17</td><td>17</td></tr><tr><td>440</td><td>10</td><td>-93</td><td>26203</td><td>7</td><td>12</td><td>12</td></tr><tr><td>446</td><td>9</td><td>-95</td><td>26203</td><td>7</td><td>10</td><td>10</td></tr><tr><td>417</td><td>8</td><td>-97</td><td>26203</td><td>4</td><td>8</td><td>8</td></tr></table>	chann	rs	dBm	PLMN	BCC	C1	C2	504	18	-78	26203	1	27	27	476	15	-83	26203	3	22	22	421	13	-88	26203	1	17	17	440	10	-93	26203	7	12	12	446	9	-95	26203	7	10	10	417	8	-97	26203	4	8	8				
chann	rs	dBm	PLMN	BCC	C1	C2																																																
504	18	-78	26203	1	27	27																																																
476	15	-83	26203	3	22	22																																																
421	13	-88	26203	1	17	17																																																
440	10	-93	26203	7	12	12																																																
446	9	-95	26203	7	10	10																																																
417	8	-97	26203	4	8	8																																																
	OK																																																					
Reference Siemens	<p>Note</p> <ul style="list-style-type: none"><li>Cell information can be issued in the form of unsolicited result codes (related to &lt;period&gt;), or it can be queried directly using the Execute command AT^MONI. In the first case, the ME activates its RING line (Logic “1”) for one second to send the URC to the connected application. In the second case, the RING line does not change.</li><li>Due to the fact that not all necessary information of the neighbour cells can be decoded <u>during a connection</u>, there are several constraints to be considered:<ul style="list-style-type: none"><li>Only neighbour cells that have already been visible in IDLE mode will be further updated, as long as they are still included in the list.</li><li>Though new neighbour cells can be added to the list (e.g. due to handover), their C1 and C2 parameters cannot be displayed until the connection is released. In this case “-” is presented for C1 and C2.</li></ul></li></ul>																																																					

## 8.4 AT^SACM Advice of charge and query of ACM and ACMmax

Test command AT^SACM=?	<p>Response</p> <p><b>^SACM:</b> (list of supported &lt;n&gt;s) <b>OK</b></p> <p>Parameter</p> <p>See write command</p>
Execute command AT^SACM	<p>The execute command can be used to query the current mode of the Advice of Charge supplementary service, the SIM values of the accumulated call meter (ACM) and accumulated call meter maximum (ACMmax).</p> <p>Response</p> <p><b>^SACM:</b> &lt;n&gt;,&lt;acm&gt;,&lt;acm_max&gt; <b>OK</b></p> <p>If error is related to ME functionality:</p> <p><b>+CME ERROR:</b> &lt;err&gt;</p> <p>Parameter</p> <p>&lt;n&gt;            See write command</p> <p>&lt;acm&gt;        ACM, string type; three bytes of the current ACM value in hexadecimal format (e.g. "00001E" indicates decimal value 30) 000000–FFFFFF</p> <p>&lt;acm_max&gt;   ACMmax, string type; three bytes of the max. ACM value in hexadecimal format (e.g. "00001E" indicates decimal value 30) 000000 disable ACMmax feature 000001-FFFFFF</p> <p>&lt;ccm&gt;        string type; three bytes of the current CCM value in hexadecimal format (e.g. "00001E" indicates decimal value 30); bytes are coded in the same way as ACMmax value in the SIM 000000-FFFFFF</p>
Write command AT^SACM=<n>	<p>The write command enables or disables the presentation of unsolicited result to report the call charges.</p> <p>Response</p> <p><b>OK</b> or if error is related to ME functionality: <b>+CME ERROR:</b> &lt;err&gt;</p> <p>Parameter</p> <p>&lt;n&gt;            <u>0</u>        suppress unsolicited result code                  1        display unsolicited result code</p> <p>When you power down or reset the ME with AT+CFUN=1,1 the URC presentation mode will be reset to its default. To benefit from the URC it is recommended to have the setting included in the user profile saved with AT&amp;W, or to select &lt;n&gt;=1 every time you reboot the ME.</p> <p>Unsolicited result code</p> <p>When activated, an unsolicited result code is sent when the CCM value changes, but not more often than every 10 seconds</p> <p><b>+CCCM:</b> &lt;ccm&gt;</p>
Reference Siemens	<p>Note</p> <p>See also GSM07.07: AT+CACM, AT+CAMM, AT+CAOC</p>

## 8.5 AT^SBC Battery charging / discharging and charge control

This chapter is only applicable to MC35, it is not intended for MC35 Terminal.

Responses returned by the AT^SBC command vary with the operating mode of the ME:

Normal mode:	ME is switched on by Ignition pin and running the SLEEP, IDLE, TALK or DATA mode. Charger is not connected. AT^SBC can be used to query the battery capacity and the power consumption of ME and application (if value of application was specified before as <current>).
Normal mode + charging:	Allows charging while ME is switched on by Ignition pin and running the SLEEP, IDLE, TALK or DATA mode. AT^SBC returns charger status and power consumption of ME / application. Battery capacity is not available.
Charge-only mode:	Allows charging while ME is detached from GSM network. When started, the mode is indicated by the URC "^SYSSTART CHARGE-ONLY MODE". AT^SBC returns charger status and power consumption of ME / application. Percentage of battery capacity is not available. In Charge-only mode a limited number of AT commands is accessible (see Table 11). There are several ways to activate the Charge-only mode: a) from Power Down mode: Connect charger while ME was powered down with AT^SMSO b) from Normal mode: Connect charger, then enter AT^SMSO.
Alarm mode:	No charging functionality, i.e. charging does not start even though the charger connects to the POWER lines. Battery parameters are not available.

Charging begins once the charger connects to the POWER pins of the ZIF connector (except for the Alarm mode). Please refer to the [1] for details on the charging process.

Test command	Response																				
AT^SBC=?	<p>^SBC: (list of supported &lt;bcs&gt;s),(list of supported &lt;bcl&gt;s),&lt;mpc&gt; module power consumption</p> <p>Defined values</p> <table><tr><td rowspan="6">&lt;bcs&gt;</td><td>0</td><td>No charging adapter is connected</td></tr><tr><td>1</td><td>Charging adapter is connected</td></tr><tr><td>2</td><td>Charging adapter is connected, charging in progress</td></tr><tr><td>3</td><td>Charging adapter is connected, charging has finished</td></tr><tr><td>4</td><td>Charging error, charging is interrupted</td></tr><tr><td>5</td><td>False charging temperature, charging is interrupted while temperature is beyond allowed range</td></tr></table> <table><tr><td rowspan="3">&lt;bcl&gt;</td><td>Battery capacity</td></tr><tr><td>0, 20, 40, 60, 80, 100 percent of remaining capacity (6 steps)</td></tr><tr><td>0 indicates that either the battery is exhausted or the capacity value is not available</td></tr></table> <table><tr><td rowspan="2">&lt;mpc&gt;</td><td>Average power consumption:</td></tr><tr><td>Value (0...5000) of average power consumption (mean value over a couple of seconds) in mA. See read and write command for details.</td></tr></table>	<bcs>	0	No charging adapter is connected	1	Charging adapter is connected	2	Charging adapter is connected, charging in progress	3	Charging adapter is connected, charging has finished	4	Charging error, charging is interrupted	5	False charging temperature, charging is interrupted while temperature is beyond allowed range	<bcl>	Battery capacity	0, 20, 40, 60, 80, 100 percent of remaining capacity (6 steps)	0 indicates that either the battery is exhausted or the capacity value is not available	<mpc>	Average power consumption:	Value (0...5000) of average power consumption (mean value over a couple of seconds) in mA. See read and write command for details.
<bcs>	0		No charging adapter is connected																		
	1		Charging adapter is connected																		
	2		Charging adapter is connected, charging in progress																		
	3		Charging adapter is connected, charging has finished																		
	4		Charging error, charging is interrupted																		
	5	False charging temperature, charging is interrupted while temperature is beyond allowed range																			
<bcl>	Battery capacity																				
	0, 20, 40, 60, 80, 100 percent of remaining capacity (6 steps)																				
	0 indicates that either the battery is exhausted or the capacity value is not available																				
<mpc>	Average power consumption:																				
	Value (0...5000) of average power consumption (mean value over a couple of seconds) in mA. See read and write command for details.																				

<p>Read command</p> <p>AT^SBC?</p>	<p>Response</p> <p><b>^SBC: &lt;bc&gt;,&lt;bcl&gt;,&lt;mpc&gt;</b></p> <p><b>&lt;bc&gt;</b> Connection status of battery pack</p> <p><b>&lt;bcl&gt;</b> Battery charge level</p> <p>While charging is in progress (charging adapter connected) the battery capacity is not available. Consequently, parameter <b>&lt;bcl&gt;</b>=0. To query the battery capacity disconnect the charger.</p> <p><b>&lt;mpc&gt;</b> Average power consumption</p> <p><b>&lt;mpc&gt;</b> is obtained from the ME's power consumption, plus the value you have specified for the application by using the write command <b>AT^SBC=&lt;current&gt;</b>. Remember that the ME's power consumption varies with its operating mode (IDLE, TALK, DATA, GPRS/DATA) and the power level.</p> <p>If <b>&lt;current&gt;</b> was not yet specified and no battery pack NTC is detected <b>&lt;mpc&gt;</b> returns only the module's present power consumption.</p> <p>If <b>&lt;current&gt;</b> was not yet specified, but the NTC of the connected battery pack is detected, an offset value of 200mA will, by default, be added. 200mA is an estimated value which represents the power consumption of a typical external application. Drawn from practical experience it serves as a precaution to ensure proper charging in case you have not entered <b>&lt;current&gt;</b>. It is strongly recommended that you enter the correct power consumption of your application as described below.</p> <p>Note: If the battery does not incorporate an NTC, or the battery and the NTC are not compliant with the requirements specified in [1], the battery cannot be detected by the ME.</p>
<p>Write command</p> <p>AT^SBC= &lt;current&gt;</p>	<p>Use the write command to specify the power consumption of your external application. This information enables the ME to calculate the average power consumption <b>&lt;mpc&gt;</b> and to properly control the charging process. If the value is not correct the entire charging process may be affected. Resulting problems may be wrong responses to the AT^SBC read command, overcharging, or the battery does not reach full capacity.</p> <p>The write command registers the serial port as the output channel for unsolicited result codes related to charging.</p> <p>When the ME is powered down or reset, the value of <b>&lt;current&gt;</b> is restored to its default. This affects the charging control and disables the presentation of unsolicited result codes. Therefore, the parameter should be set every time when needed after rebooting the ME.</p> <p>Response</p> <p><b>OK</b></p> <p>If error is related to ME functionality:</p> <p><b>+CME ERROR: &lt;err&gt;</b></p> <p>Parameter</p> <p><b>&lt;current&gt;</b> Enter the current consumption of your application in mA (0...5000). If used, the current provided over the by 2.9V VDD pin of the ZIF interface (maximum 70mA) must be added, too.</p>

	<p>Unsolicited result code</p> <p><b>^SBC: Undervoltage</b></p> <p>The message will be reported, for example, when you attempt to set up a call while the voltage is close to the critical limit and further power loss is caused during the transmit burst. To remind you that the battery needs to be charged soon, the URC appears several times before the module switches off.</p> <p>When the module is in IDLE mode it takes typically one minute to deregister from the network and to switch off.</p> <p>Undervoltage protection in mains operated applications:</p> <ul style="list-style-type: none"> <li>The undervoltage protection is also efficient in applications which are not battery operated, i.e. in applications where the ACCU_TEMP pin is not connected. To use this feature it is sufficient to issue the write command which automatically enables the presentation of URCs. You do not need to specify &lt;current&gt;. Please note, that in contrast to battery powered applications, the ME will present the undervoltage URC only once and will then switch off without sending any further messages.</li> </ul>
Reference Siemens	<p>Note</p> <ul style="list-style-type: none"> <li>If Multiplex mode is active, any virtual channel can be used to enter the write command and to specify &lt;current&gt;. The undervoltage URC appears simultaneously on all three channels.</li> <li>The URC "<b>^SYSSTART CHARGE-ONLY MODE</b>" is indicated automatically when the engine enters this mode (except when autobauding is active). Unlike the undervoltage URC, it cannot be disabled or enabled by the user.</li> </ul>

Table 11: Summary of AT commands available in Charge-only and Alarm mode

AT command	Use
AT+CALA	Set alarm time
AT+CCLK	Set date and time of RTC
AT^SBC	Monitor charging process Note: While charging is in progress, no battery capacity value is available. To query the battery capacity disconnect the charger. If the charger connects <i>externally</i> to the host device no charging parameters are transferred to the module. In this case, the command cannot be used.
AT^SCTM	Query temperature of GSM engine, enable or disable URCs
AT^SMSO	Power down GSM engine



**8.6 AT^SCID Display SIM card identification number**

Test command AT^SCID=?	Response <b>OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>  Parameter
Execute command AT^SCID	Response  TA returns the identification number of the SIM card (see GSM 11.11 Chapter 10.1.1).  <b>^SCID: &lt;cid&gt; OK</b>  If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b>  Parameter <b>&lt;cid&gt;</b> string type: card identification number of SIM card
Reference Siemens	Note

## 8.7 AT^SCKS Set SIM connection presentation mode and query SIM connection status

Test command AT^SCKS=?	<p>Response</p> <p><b>^SCKS:</b> (list of supported &lt;n&gt;s) <b>OK</b></p> <p>Parameter</p> <p>See write command</p>
Read command AT^SCKS?	<p>Response</p> <p>TA returns the URC presentation mode and the status of the SIM card connection.</p> <p><b>^SCKS:</b> &lt;n&gt;, &lt;m&gt; <b>OK</b></p> <p>Parameter</p> <p>See write command</p>
Write command AT^SCKS=<n>	<p>Response</p> <p>TA enables or disables the presentation of URCs to report whether or not the SIM card is connected.</p> <p>When the ME is powered down or reset with AT+CFUN=1,1 the presentation mode &lt;n&gt; will not be restored to its default. To benefit from the URCs, it is recommended to have the setting &lt;n&gt;=1 included in the user profile saved with AT&amp;W, or activate the setting every time you reboot the ME.</p> <p><b>OK</b></p> <p>Parameter</p> <p>&lt;n&gt;     0 Suppress unsolicited result codes          1 Output unsolicited result codes</p> <p>&lt;m&gt;     0 No card          1 Card in card reader</p> <p>Unsolicited result code</p> <p>When the status "SIM connected" has changed, an unsolicited result code is sent to the TE.</p> <p><b>^SCKS:</b> &lt;m&gt;</p> <p>Parameter</p> <p>See write command</p>
Reference Siemens	<p>Note</p> <p>Note that the connection status of &lt;m&gt; reflects only the status of the card holder tray. If an empty SIM card tray is inserted, two URCs will be output, indicating the status 1 and 0 (= SIM card connected and not connected).</p>

## 8.8 AT^SCNI List Call Number Information

Test command AT^SCNI=?	Response <b>OK</b>
Execute command AT^SCNI	<p>Response</p> <p>TA returns a list of current calls of ME.</p> <p>[^SCNI: &lt;id1&gt;[,&lt;cs&gt;[,&lt;number&gt;,&lt;type&gt;]]]</p> <p>[^SCNI: &lt;id2&gt;[,&lt;cs&gt;[,&lt;number&gt;,&lt;type&gt;]]]</p> <p>[...] <b>OK</b></p> <p>If error is related to ME functionality:</p> <p><b>+CME ERROR: &lt;err&gt;</b></p>
	<p>Parameter</p> <p><b>&lt;idx&gt;</b>      1–7    integer type; call identification number as described in GSM 02.30[19] subclause 4.5.5.1; this number can be used in +CHLD command operations</p> <p><b>&lt;cs&gt;</b>        Call status of respective call number (first parameter)</p> <p>              0      call hold</p> <p>              1      call in progress</p> <p>              2      Waiting call</p> <p><b>&lt;number&gt;</b>    string type phone number in format specified by &lt;type&gt;</p> <p><b>&lt;type&gt;</b>        type of address octet in integer format; 145 when dialling string includes international access code character "+", otherwise 129</p>
Reference Siemens	Note See also GSM 07.07: AT+CLCC

## 8.9 AT^SCTM Set critical operating temperature presentation mode or query temperature

Use this command to monitor the temperature range of the module and the battery. The write command enables or disables the presentation of URCs to report critical temperature limits.

CAUTION: During the first 15 seconds after start-up, the module operates in an automatic report mode: URCs can be always displayed regardless of the selected mode <n>.

Test command AT^SCTM=?	<p>Response</p> <p><b>^SCTM:</b> (list of supported &lt;n&gt;s) <b>OK</b></p> <p>Parameter</p> <p>See write command</p>
Read command AT^SCTM?	<p>Response</p> <p>TA returns the URC presentation mode and information about the current temperature range of the module. Please note that the Read command does not indicate the temperature range of the battery. The battery temperature can only be reported by an Unsolicited Result Code.</p> <p><b>^SCTM:</b> &lt;n&gt;, &lt;m&gt; <b>OK</b></p> <p>Parameters</p> <p>&lt;n&gt;      <u>0</u>    Presentation of URCs is disabled (except for &lt;m&gt; equal to -2 or +2).           1    Presentation of URCs is enabled.</p> <p>&lt;m&gt;      -2 Below lowest temperature limit (causes immediate switch-off)           -1 Below low temperature alert limit           0 Normal operating temperature           1 Above upper temperature alert limit           2 Above uppermost temperature limit (causes immediate switch-off)</p>
Write command AT^SCTM=<n>	<p>Select &lt;n&gt; to enable or disable the presentation of the URCs. Please note that the setting will not be stored upon Power Down, i.e. after restart or reset, the default &lt;n&gt;=0 will be restored. To benefit from the URCs &lt;n&gt;=1 needs to be selected every time you reboot the GSM engine.</p> <p>Response</p> <p><b>OK</b></p> <p>Parameters</p> <p>&lt;n&gt;      <u>0</u>      Suppress URCs (except for &lt;m&gt; equal to -2 or +2)           1      Enable presentation of URCs.</p> <p>Please see notes below for further details.</p>
	<p>Unsolicited result code</p> <p>URCs will be automatically sent to the TA when the temperature reaches or exceeds the critical level, or when it is back to normal.</p> <p><b>^SCTM_A:</b> &lt;m&gt;                      for battery temperature <b>^SCTM_B:</b> &lt;m&gt;                      for module (board) temperature</p>

Reference Siemens	<p>Note</p> <p><b>Important:</b></p> <ul style="list-style-type: none"> <li>• Please refer to [1] for specifications on critical temperature ranges.</li> <li>• To avoid damage the module will shut down once the critical temperature is exceeded. The procedure is equivalent to the power-down initiated with AT^SMSO.</li> <li>• URCs indicating the alert level "1" or "-1" are intended to enable the user to take appropriate precautions, such as protect the module or battery from exposure to extreme conditions, or save or back up data etc. The presentation of "1" or "-1" URCs depends on the settings selected with the write command: If &lt;n&gt;=0: Presentation is enabled for 15 s time after the module was switched on. After 15 s operation, the presentation will be disabled, i.e. no URCs will be generated. If &lt;n&gt;= 1: Presentation of "1" or "-1" URCs is always enabled.</li> <li>• Level "2" or "-2" URCs are followed by immediate shutdown. The presentation of these URCs is <u>always</u> enabled, i.e. they will be output even though the factory setting AT^SCTMC=0 was never changed.</li> <li>• If the temperature limit is exceeded while an emergency call is in progress the engine continues to measure the temperature and to deliver alert messages, but deactivates the shutdown functionality. Once the call is terminated full temperature control will be resumed. If the temperature is still out of range MC35 switches off immediately.</li> </ul>
Examples	<p>URCs issued when the operating temperature is out of range:</p> <p>^SCTM_A: 1      Caution: Battery close to overtemperature limit.</p> <p>^SCTM_A: 2      Alert: Battery above overtemperature limit. Engine switches off.</p> <p>^SCTM_B: 1      Caution: Engine close to overtemperature limit.</p> <p>^SCTM_B: 2      Alert: Engine is above overtemperature limit and switches off.</p> <p>^SCTM_A: -1      Caution: Battery close to undertemperature limit.</p> <p>^SCTM_A: -2      Alert: Battery below undertemperature limit. Engine switches off.</p> <p>^SCTM_B: -1      Caution: Engine close to undertemperature limit.</p> <p>^SCTM_B: -2      Alert: Engine is below undertemperature limit and switches off.</p>
Example	<p>URCs issued when the temperature is back to normal (URC is output once):</p> <p>^SCTM_A: 0      Battery temperature back to normal temperature.</p> <p>^SCTM_B: 0      Engine back to normal temperature</p>

### 8.10 AT^SDLD Delete the “last number redial” memory

Test command AT^SDLD=?	Response <b>OK</b>
Execute command AT^SDLD	The execute command deletes all numbers stored in the LD memory. Response <b>OK/ERROR/+CME ERROR</b>
Reference Siemens	Note

### 8.11 AT^SHOM Display Homezone

Test command AT^SHOM=?	Response <b>OK</b> Parameter See execute command						
Execute command AT^SHOM	Response TA returns homezone state <b>^SHOM: &lt;homezonestate&gt; OK</b>  Parameters <table><tr><td><b>&lt;homezonestate&gt;</b></td><td>0</td><td>ME is out of Homezone</td></tr><tr><td></td><td>1</td><td>ME is within the Homezone</td></tr></table>	<b>&lt;homezonestate&gt;</b>	0	ME is out of Homezone		1	ME is within the Homezone
<b>&lt;homezonestate&gt;</b>	0	ME is out of Homezone					
	1	ME is within the Homezone					
Reference Siemens	Note						

### 8.12 AT^SLCD Display Last Call Duration

Test command AT^SLCD=?	Response <b>OK</b> Parameter See execute command
Execute command AT^SLCD	Response TA returns last call duration or current call duration <b>^SLCD: &lt;time&gt; OK</b>  Parameter <b>&lt;time&gt;</b> string type value; format is "hh:mm:ss", where characters indicate hours, minutes, seconds; e.g. 22:10:00 "22:10:00", max values are 9999:59:59
Reference Siemens	Note

### 8.13 AT^SLCK Facility lock

Test command AT^SLCK=?	<p>Response</p> <p>^SLCK: (list of supported &lt;fac&gt;s) OK</p> <p>Parameter</p> <p>See write command</p>
Write command AT^SLCK= <fac>,<mode> [,<passwd> [,<class>]]	<p>Response</p> <p>This command is used to lock, unlock or interrogate a ME or a network facility &lt;fac&gt;.</p> <p>The command can be aborted while network facilities are being set or interrogated.</p> <p>If &lt;mode&gt;&lt;=2 and command is successful</p> <p><b>OK</b></p> <p>If &lt;mode&gt;=2 and command successful</p> <p>^SLCK: &lt;status&gt;[,&lt;class1&gt;[&lt;CR&gt;&lt;LF&gt;</p> <p>^SLCK: &lt;status&gt;, class2....]] OK</p> <p>If error is related to ME functionality:</p> <p>+CME ERROR: &lt;err&gt;</p> <p>Parameter</p> <p>&lt;fac&gt; <u>Phone security locks set by user / provider</u></p> <p>"PS" Phone locked to SIM card (phone code). ME requests password when other than current SIM card inserted; ME may remember certain number of previously used cards thus not requiring password when they are inserted.</p> <p>"SC" SIM (lock SIM cards). SIM requests password upon ME power-up and when this lock command issued.</p> <p>"FD" SIM fixed dialling memory: If the mobile is locked to FD, only the numbers stored to the FD memory can be dialled (up to 7 numbers). PIN2 is required as &lt;passwd&gt;.</p> <p>"CS" Keypad lock (not supported since keypad cannot be connected)</p> <p><u>Supplementary Service: Call barring</u></p> <p>"AO" BAOC (Bar All Outgoing Calls)</p> <p>"OI" BOIC (Bar Outgoing International Calls)</p> <p>"OX" BOIC-exHC (Bar Outgoing International Calls except to Home Country)</p> <p>"AI" BAIC (Bar All Incoming Calls)</p> <p>"IR" BIC-Roam (Bar Incoming Calls when Roaming outside the home country)</p> <p>"AB" All Barring services (applicable only for &lt;mode&gt;=0)</p> <p>"AG" All outGoing barring services (applicable only for &lt;mode&gt;=0)</p> <p>"AC" All inComing barring services (applicable only for &lt;mode&gt;=0)</p> <p><u>Factory set facility locks:</u></p> <p>"PF" lock Phone to the very First SIM card</p> <p>"PN" Network Personalisation</p> <p>"PU" Network subset Personalisation</p> <p>"PP" Service Provider Personalisation</p> <p>"PC" Corporate Personalisation</p>

	<p><b>&lt;mode&gt;</b> 0 unlock 1 lock 2 query status</p> <p><b>&lt;passwd&gt;</b> password</p> <p><b>&lt;class&gt;</b> integer or sum of integers each representing a <b>&lt;class&gt;</b> of information:</p> <ul style="list-style-type: none"> <li>1 voice</li> <li>2 data</li> <li>4 fax</li> <li>8 short message service</li> <li>16 data circuit sync</li> <li>32 data circuit async</li> <li>64 dedicated packet access</li> <li>128 dedicated PAD access</li> <li>x combination of some of the above classes.</li> </ul> <p>For example, the default setting <u>7</u> represents the sum of the integers 1, 2 and 4 (call barring for voice, data and fax). The value 255 covers all classes. If the <b>&lt;class&gt;</b> parameter is omitted, the default value <u>7</u> is used.</p> <p>See examples in 4.21.3 for the correct handling of class numbers.</p> <p><b>&lt;class&gt; 2</b> (data) comprises all those <b>&lt;class&gt;</b> values between 16 and 128, that are supported both by the network and the MS. This means, a setting made for <b>&lt;class&gt; 2</b> applies to all remaining data classes (if supported). In addition, you can assign a different setting to a specific class. For example, you can activate Call Barring for all data classes, but deactivate it for a specific data class.</p> <p><b>&lt;status&gt;</b> 0 off 1 on</p>
Reference GSM 07.07, GSM 02.04, GSM 02.88, Siemens	<p>Note</p> <p>See also specification of AT+CLCK in GSM 07.07 and further details in Chapter 4.21.</p> <p>The command has been implemented with the full set of <b>&lt;class&gt;</b> parameters according to the definition of "AT+CLCK" in GSM 07.07. For actual applicability of a specific "call forwarding" facility <b>&lt;fac&gt;</b> to a specific service or service group (a specific <b>&lt;class&gt;</b> value) please consult table A.1 of GSM 02.04.</p>



**8.14 AT^SMGL List SMS messages from preferred storage**

Test command AT^SMGL=?	Response See write command + CMGL Parameters See command +CMGL
Execute/Write command AT^SMGL [=<stat>]	Response TA returns messages with status value <stat> from message storage <mem1> to the TE. The status of the messages is u n c h a n g e d (unread remains unread). Otherwise: See command +CMGL Parameters See command +CMGL
Reference Siemens	Note See also GSM 07.05: +CMGL

## 8.15 AT^SMGO Set or query SMS overflow presentation mode or query SMS overflow

Test command AT^SMGO=?	<p>Response</p> <p><b>^SGMO:</b> (list of supported &lt;n&gt;s) <b>OK</b></p> <p>Parameter</p> <p>See write command</p>
Read command AT^SMGO?	<p>Response</p> <p>TA returns overflow presentation mode and SMS overflow status</p> <p><b>^SGMO:</b> &lt;n&gt;,&lt;mode&gt; <b>OK</b></p> <p>If error is related to ME functionality:</p> <p><b>+CME ERROR:</b> &lt;err&gt;</p> <p>Parameter</p> <p>See write command</p>
Write command AT^SMGO=<n>	<p>Response</p> <p>TA sets overflow presentation mode</p> <p><b>OK</b></p> <p>Parameter</p> <p><b>&lt;n&gt;</b> SMS overflow presentation mode</p> <p>0 disable (default)</p> <p>1 enable</p> <p><b>&lt;mode&gt;</b> SMS overflow status</p> <p>0 space available</p> <p>1 SMS buffer full (buffer for received short messages is &lt;mem3&gt;. See AT+CPMS in Chapter 5.11.</p> <p>2 Buffer full and new message waiting in SC for delivery to ME</p>
	<p>Unsolicited result code</p> <p>When the SIM overflow status changes, a URC is sent to TE. This requires a correct setting for SMS indications (AT+CNMI=3,1; see Chapter 5.10).</p> <p><b>^SMGO:</b> &lt;mode&gt;</p> <p>Parameter</p> <p>See write command</p> <p>During data calls, a status change is indicated via a Break (100 ms). The Break signal will be sent each time when a status change is detected.</p>
Reference Siemens	<p>Note</p> <ul style="list-style-type: none"> <li>Incoming Class 1 short messages (ME specific) will be preferably stored to "ME" and may be transferred to the "SM" storage if "ME" is used up. Incoming Class 2 messages (SIM specific) will be placed to the "SM" storage only. If messages with different classes are received, the <b>^SMGO: 2</b> indication may be presented, without prior indication of <b>^SMGO: 1</b>. The indication <b>^SMGO: 1</b> means that both buffers ("ME" and "SM") are full. See also Chapter 5.11.</li> <li>For more information regarding SIM and ME specific message classes refer to &lt;dcs&gt; and the following specifications: GSM 03.38 and 3GPP TS 23.038.</li> </ul>

### 8.16 AT^SMSO Switch off mobile station

Test command AT^SMSO=?	Response <b>OK</b>
Execute command AT^SMSO	Response <b>^SMSO: MS OFF OK</b> Device will be switched off (power down mode)
Reference Siemens	Note Do not send any command after this command

### 8.17 AT^SMGR Read SMS message without set to REC READ

Test command AT^SMGR=?	Response <b>OK</b>
Execute command AT^SMGR= <index>	Parameter <b>See AT+CMGR</b>
Reference GSM 07.05	Note The AT^SMGR command is a specific Siemens command with the same syntax as "AT+CMGR Read SMS message". The only difference is that the SMS Message, which has REC_UNREAD status, is not overwritten to REC_READ.

## 8.18 AT^SM20 Set M20 Compatibility

Test command AT^SM20=?	Response <b>OK</b>
Read command AT^SM20?	Response <b>^SM20: &lt;n&gt;,&lt;m&gt;</b> <b>OK</b> Parameters See write command
Write command AT^SM20=<n>	Response M20 is an earlier, widely used SIEMENS GSM engine. The AT^SM20 command controls the behaviour of the ATD and AT+CMGW commands as described below. Please note that the AT^SM20 command has no effect on any other features and is not intended to adjust other differences between M20 and MC35.  <b>OK</b> Parameters <b>&lt;n&gt;</b> Execution of the ATD command during voice calls 0      Compatible to x35 mobiles. If this mode is active, TA returns OK when dialling was completed.  1      Compatible to M20. If the M20 mode is active, TA returns OK once the call is successfully set up. Issuing any command before TA returns OK will cancel the call setup.  <b>&lt;m&gt;</b> Execution of AT+CMGW command (writing SMS to memory) 0      Compatible to x35 mobiles. If this mode is active, TA returns +CMS ERROR: <err> when writing of SMS fails. See Chapter 9.1.3 for a list of result codes.  1      Compatible to M20. If the M20 mode is active, TA returns OK, no matter whether or not AT+CMGW was successfully executed.
Reference Siemens	Note

## 8.19 AT^SNFA Set or query microphone attenuation

Test command AT^SNFA=?	<p>Response</p> <p><b>^SNFA:</b> (list of supported &lt;atten&gt;s)</p> <p>Parameter</p> <p>See read command</p>
Read command AT^SNFA?	<p>Response</p> <p>TA returns the current attenuation value on the microphone path for the current audio device (selected with AT^SNFS, see section 8.26).</p> <p><b>^SNFA: &lt;atten&gt; OK</b></p> <p>&lt;atten&gt; integer type value  0 (0x0) – 65535 (0xFFFF)  attenuation = <math>20 \log(&lt;atten&gt;/32767)</math>  0 =&gt; microphone is muted  32767 =&gt; no attenuation on the microphone path  values greater than 32767 are not used</p>
Write command AT^SNFA= <atten>	<p>TA controls the large-scale attenuation on the microphone path for the current audio device (selected with AT^SNFS, see 8.26) with the following restrictions:</p> <ul style="list-style-type: none"> <li>• It is not allowed for audio device 1</li> <li>• As long as the microphone is muted, the write command is temporarily disabled</li> <li>• Setting of value 0 is not allowed (use AT^SNFM=0 for this; see section 8.22).</li> <li>• For values greater than 32767, 32767 will be used</li> </ul> <p>Response</p> <p><b>OK</b></p> <p>If error is related to ME functionality</p> <p><b>+CME ERROR: &lt;err&gt;</b></p> <p>Parameter</p> <p>See read command</p>
Reference	<p>Note</p> <ul style="list-style-type: none"> <li>• The command is provided for compatibility with M20 and is an alternative to AT^SNFI (see Chapter 8.21) The parameter &lt;inCalibrate&gt; of AT+SNFI is identical with &lt;atten&gt; of AT^SNFA.</li> <li>• To make the changes persistent use AT^SNFW (see Chapter 8.28).</li> <li>• Command does not require a PIN.</li> </ul>
Examples	<pre> ^SYSSTART at^snfa=? ^SNFA: (0-65535) OK at^snfa? ^SNFA: 32767 OK at^snfs=4 OK at^snfa=1 </pre>

```

OK
at^snfa?
^SNFA: 1
OK
at^snfi?
^SNFI: 5,1
OK
at^snfi=5,45
OK
at^snfa?
^SNFA: 45
OK

```

## 8.20 AT^SNFD Set audio parameters to manufacturer default values

Execute command AT^SNFD	<p>TA resets the parameters currently selected in audio modes 2 – 6 to their factory values.</p> <p>The restored values are: &lt;inBbcGain&gt;, &lt;inCalibrate&gt;, &lt;outBbcGain&gt;, &lt;outCalibrate[0 to 4]&gt;, &lt;sideTone&gt;.</p> <p>&lt;outStep&gt; is not be reset to its default. Instead, the current value will be retained when the ME is powered down with AT^SMSO or restarted with AT+CFUN=1,1.</p> <p>Response <b>OK</b></p>
Reference Siemens	Note

## 8.21 AT^SNFI Set microphone path parameters

Test command AT^SNFI=?	<p>Response</p> <p><b>^SNFI: (list of supported &lt;inBbcGain&gt;s), (list of supported &lt;inCalibrate&gt;s) OK</b></p> <p>Parameters</p> <p>See write command</p>
Read command AT^SNFI?	<p>Response</p> <p><b>^SNFI: &lt; inBbcGain &gt;, &lt;inCalibrate&gt; OK</b></p> <p>Parameters</p> <p>See write command</p>
Write command AT^SNFI=<inBbcGain>,<inCalibrate>	<p>Response</p> <p>TA sets microphone path amplifying. <b>OK</b></p>
	<p>Parameters</p> <p><b>&lt;inBbcGain&gt;</b>      Setting for ADC gain Amplifier 0 - 7 (0=0dB, 7=42dB, 8 steps of 6 dB)</p> <p><b>&lt;inCalibrate&gt;</b>    Multiplication factor 0 – 32767 for input samples at- tenuation=20*log (inCalibrate/32767)</p>
Reference Siemens	<p>Note</p> <ul style="list-style-type: none"> <li>• The read and write commands refer to the active audio mode.</li> <li>• The write command works only in audio modes 2 to 6.</li> <li>• The range of &lt;inCalibrate&gt; is up to 65535 but will be suppressed to 32767. Values above &lt;inCalibrate&gt; = 65535 will cause a failure.</li> <li>• Changed values need to be stored with AT^SNFW for use after re-start.</li> <li>• Attention! When you adjust the audio parameters avoid exceeding the maximum allowed level. Bear in mind that exposure to excessive levels of noise can cause physical damage to users!</li> </ul>

## 8.22 AT^SNFM Mute microphone

Test command AT^SNFM=?	Response ^SNFM: (list of supported <mute>s) OK Parameter See write command
Read command AT^SNFM?	Response ^SNFM: <mute> OK Parameter See write command
Write command AT^SNFM=<mute>	Response TA switches on/off the microphone OK Parameter <mute> 0 Mute microphone 1 Microphone on
Reference Siemens	Note This command can be used in all audio modes (1 to 6) and during a voice call only. Users should be aware that when they switch back and forth between different audio modes (for example handsfree on/off) the value of <mute> does not change. This means that the status of mute operation is retained until explicitly changed. As alternative, you can use the AT+CMUT command described in Chapter 4.27

## 8.23 Audio programming model

The following figure illustrates how the signal path can be adjusted with the AT command parameters described in the Chapters 8.19 to 8.28.

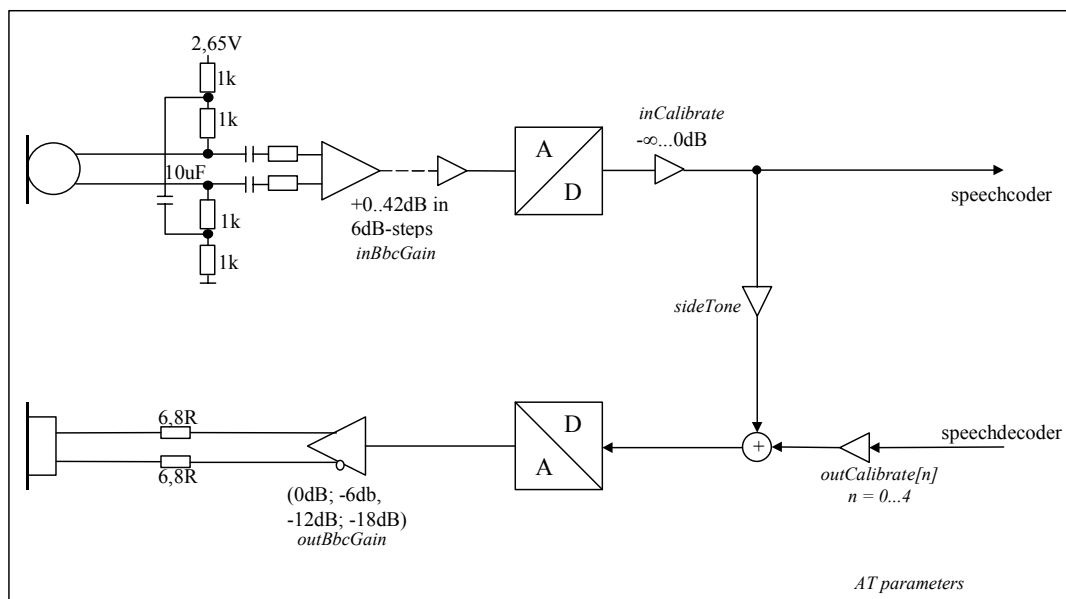


Figure 1: AT audio programming model



## 8.24 AT^SNFO Set audio output (= loudspeaker path) parameter

Test command AT^SNFO=?	<p>Response</p> <p>^SNFO: (list of supported &lt;outBbc Gain&gt;), (list of supported &lt;outCalibrate[0...4] &gt;), (list of supported &lt;outStep&gt;), (list of supported &lt;sideTone&gt;s)</p> <p>OK</p> <p>Parameter</p> <p>See write command</p>
Read command AT^SNFO?	<p>Response</p> <p>^SNFO: &lt;outBbcGain&gt;, &lt;outCalibrate[0]&gt;,...&lt;outCalibrate[4]&gt;, &lt;outStep&gt;, &lt;sideTone&gt;</p> <p>OK</p> <p>Parameter</p> <p>See write command</p>
Write command AT^SNFO=<outBbcGain>,<outCalibrate[0]>,...<outCalibrate[4]>,<outStep>,<sideTone>	<p>Set TA's loudspeaker path parameters.</p> <p>Response</p> <p>&lt;outBbcGain&gt; &lt;outCalibrate[0]&gt;...&lt;outCalibrate[4]&gt; &lt;(outStep)&gt; &lt;sideTone&gt;</p> <p>OK</p> <p>Parameters</p> <p>&lt;outBbcGain&gt;      Setting of DAC gain amplifier attenuation 0 – 3 (0=0 dB, 3=-18 dB, 4 steps of 6 dB)</p> <p>&lt;outCalibrate[0]&gt; ... &lt;outCalibrate[4]&gt;</p> <p>                         Multiplication factor 0 – 32767 for output samples                          Attenuation = <math>20 * \log (\text{outCalibrate}[n]/32767)</math></p> <p>&lt;outStep&gt;            Volume steps 0 – 4, each defined with &lt;outCalibrate[n]&gt;</p> <p>&lt;sideTone&gt;           Multiplication factor 0 – 32767 determining how much of the original microphone signal is added to the earpiece signal.                          Side Tone Gain/dB = <math>20 * \log (\text{sideTone}/32767)</math></p>
Reference Siemens	<p>Note</p> <ul style="list-style-type: none"> <li>• The read and write commands refer to the active audio mode.</li> <li>• The write command works only in audio modes 2 to 6.</li> <li>• &lt;outCalibrate&gt; specifies the amount of volume of each &lt;outStep&gt;. The range of &lt;outCalibrate&gt; is up to 65535, but will be suppressed to 32767. A value above &lt;outCalibrate&gt; = 65535 will cause an error.</li> <li>• Any change to &lt;outStep&gt; takes effect in audio modes 2 to 6. That is, when you change &lt;outStep&gt; and then select another mode with AT^SNFS, the same step will be applied. Nevertheless, the sound quality and the amount of volume are not necessarily the same, since all remaining audio parameters can use different values in either mode. Audio mode 1 is fixed to &lt;outStep&gt;=4.</li> <li>• The value of &lt;outStep&gt; is stored non-volatile when the ME is powered down with AT^SMSO or reset with AT+CFUN=1,1. Any other parameters changed with AT^SNFO need to be saved with AT^SNFW for use after restart.</li> <li>• CAUTION! When you adjust audio parameters avoid exceeding the maximum allowed level. Bear in mind that exposure to excessive levels of noise can cause physical damage to users!</li> <li>• &lt;outStep&gt; can also be selected with AT^SNFV (see Chapter 8.27 and AT+CLVL (see Chapter 4.24).</li> </ul>

## 8.25 AT^SNFPT Call progress tones

Test command AT^SNFPT=?	Response ^SNFPT: (list of supported <pt>s)  Parameter See write command
Read command AT^SNFPT?	Response ^SNFPT: <pt> OK  Parameter See write command
Write command AT^SNFPT= <pt>	The write command controls the Call Progress Tones generated at the beginning of a mobile originated call setup.  Response <b>OK</b>  Parameter <b>&lt;pt&gt;:</b> 0    Call Progress Tones off 1    Call Progress Tones on (audible tones shortly heard on the phone when ME starts to set up a call).  Please note that the setting is stored volatile, i.e. after restart or reset, the default value <u>1</u> will be restored. Also, there is no way to store AT^SNFPT to the user defined profile.
Reference Siemens	Note

## 8.26 AT^SNFS Select audio hardware set

Test command AT^SNFS=?	<p>Response</p> <p>^SNFS: (list of supported &lt;audMode&gt;s) OK</p> <p>Parameter</p> <p>See write command</p>												
Read command AT^SNFS?	<p>Response</p> <p>^SNFS: &lt;audMode&gt; OK</p> <p>Parameter</p> <p>See write command</p>												
Write command AT^SNFS= <audMode>	<p>The write command serves to set the audio mode required for the connected equipment. The selected audio mode is saved volatile and needs to be restored manually, if the GSM engine was powered down. Also, there is no way to store the audio mode to the user defined profile.</p> <p>Response</p> <p><b>OK</b></p> <p>If error is related to ME functionality: + CME ERROR: &lt;error&gt;</p> <p>Parameters</p> <table border="0"> <tr> <td style="vertical-align: top;">&lt;audMode&gt; <u>1</u></td><td> <p>Audio mode 1: Standard mode optimized for the default handset, that can be connected to the analog interface 1 (see your "Hardware Interface Description" for information on this handset.) To adjust the volume use the knob of the default handset. In audio mode 4 and 5, this handset can be used with user defined parameters.</p> <p>Note: The default parameters are determined for type approval and are not adjustable with AT commands.</p> </td></tr> <tr> <td style="vertical-align: top;">2</td><td>Audio mode 2: Customer specific mode for a basic handsfree device (Siemens Car Kit Portable) connected to the analog interface 2.</td></tr> <tr> <td style="vertical-align: top;">3</td><td>Audio mode 3: Customer specific mode for a mono-headset that connects to the analog interface 2.</td></tr> <tr> <td style="vertical-align: top;">4</td><td>Audio mode 4: Customer specific mode for a user handset that connects to the analog interface 1.</td></tr> <tr> <td style="vertical-align: top;">5</td><td>Audio mode 5: Customer specific mode intended for the analog interface 1.</td></tr> <tr> <td style="vertical-align: top;">6</td><td>Audio mode 6: Customer specific mode intended for the analog interface 2.</td></tr> </table> <p>In modes 2 – 6, audio parameters can be adjusted with AT commands.</p>	<audMode> <u>1</u>	<p>Audio mode 1: Standard mode optimized for the default handset, that can be connected to the analog interface 1 (see your "Hardware Interface Description" for information on this handset.) To adjust the volume use the knob of the default handset. In audio mode 4 and 5, this handset can be used with user defined parameters.</p> <p>Note: The default parameters are determined for type approval and are not adjustable with AT commands.</p>	2	Audio mode 2: Customer specific mode for a basic handsfree device (Siemens Car Kit Portable) connected to the analog interface 2.	3	Audio mode 3: Customer specific mode for a mono-headset that connects to the analog interface 2.	4	Audio mode 4: Customer specific mode for a user handset that connects to the analog interface 1.	5	Audio mode 5: Customer specific mode intended for the analog interface 1.	6	Audio mode 6: Customer specific mode intended for the analog interface 2.
<audMode> <u>1</u>	<p>Audio mode 1: Standard mode optimized for the default handset, that can be connected to the analog interface 1 (see your "Hardware Interface Description" for information on this handset.) To adjust the volume use the knob of the default handset. In audio mode 4 and 5, this handset can be used with user defined parameters.</p> <p>Note: The default parameters are determined for type approval and are not adjustable with AT commands.</p>												
2	Audio mode 2: Customer specific mode for a basic handsfree device (Siemens Car Kit Portable) connected to the analog interface 2.												
3	Audio mode 3: Customer specific mode for a mono-headset that connects to the analog interface 2.												
4	Audio mode 4: Customer specific mode for a user handset that connects to the analog interface 1.												
5	Audio mode 5: Customer specific mode intended for the analog interface 1.												
6	Audio mode 6: Customer specific mode intended for the analog interface 2.												
Reference Siemens	<p>Note</p> <p>The write command can be used during a voice call to switch back and forth between different modes. This allows the user, for example, to switch handsfree operation on and off.</p> <p>Users should be aware that &lt;outStep&gt; is a global setting, i.e. when selecting another audio mode the value of &lt;outStep&gt; does not change. This is also true for mute operation which can be set with AT^SNFM or AT+CMUT: If the microphone is muted and the user changes to another audio mode then the microphone remains muted until explicitly changed. Exception: In audio mode 1 &lt;outStep&gt;=4 is fix.</p>												

## 8.27 AT^SNFV Set loudspeaker volume

Test command AT^SNFV=?	<p>Response</p> <p>^SNFV: (list of supported &lt;outStep&gt;s) <b>OK</b></p> <p>Parameter</p> <p>See write command</p>
Read command AT^SNFV?	<p>Response</p> <p>^SNFV: &lt;outStep&gt; <b>OK</b></p> <p>Parameter</p> <p>See write command</p>
Write command AT^SNFV=<outStep>	<p>Response</p> <p>TA sets the volume of the loudspeaker to the value &lt;outCalibrate&gt; addressed by &lt;outStep&gt;. <b>OK</b></p> <p>Parameter</p> <p>&lt;outStep&gt;    Volume steps 0 to 4. The actual volume of each step is defined by the parameter &lt;outCalibrate[n]&gt; which can be set with AT^SNFO.</p>
Reference Siemens	<p>Note</p> <ul style="list-style-type: none"> <li>• The read and write commands refer to the active audio mode.</li> <li>• The write command works only in audio modes 2 to 6!</li> <li>• Any change to &lt;outStep&gt; takes effect in audio modes 2 to 6. That is, when you change &lt;outStep&gt; and then select another mode with AT^SNFS, the same step will be applied. Nevertheless, the actual volume can be quite different, depending on the values of &lt;outCalibrate[n]&gt; set in each mode. The only exception is audio mode 1 which is fixed to &lt;outStep&gt;=4.</li> <li>• &lt;outStep&gt; is stored non-volatile when the ME is powered down with AT^SMSO or reset with AT+CFUN=1,1.</li> <li>• &lt;outStep&gt; can also be selected with AT^SNFO (Chapter 8.24) and AT+CLVL (Chapter 4.24).</li> </ul>

## 8.28 AT^SNFW Write audio setting in non-volatile store

Test command AT^SNFW=?	<p>Response</p> <p><b>OK</b></p>
Execute command AT^SNFW	<p>TA writes the parameters currently selected in audio modes 2 – 6 to the non-volatile store.</p> <p>Response</p> <p><b>OK</b></p> <p>If error is related to ME functionality: + CME ERROR: &lt;error&gt; &lt;error&gt;    memory failure Flash write error</p>
Reference Siemens	<p>Note</p> <ul style="list-style-type: none"> <li>• Execute command works only in audio mode 2 to 6.</li> <li>• Saved parameters: &lt;inBbcGain&gt;, &lt;inCalibrate&gt;, &lt;outBbcGain&gt;, &lt;outCalibrate[0]&gt; ... &lt;outCalibrate[4]&gt;, &lt;side Tone&gt;</li> </ul>

**8.29 AT^SPBC Search the first entry in the sorted telephone book**

Test command AT^SPBC=?	Response ^SPBC: (list of sorted telephone books supported <mem>s) See AT+CPBS/AT^SPBS <b>OK/ERROR/+CME ERROR</b>
Write command AT^SPBC=<char>	Parameter <char>      First letter of searched entry <index>     Index in the sorted telephone book (access via AT^SPBG)
	Response ^SPBC: <index> <b>OK/ERROR/+CME ERROR</b>
Reference Siemens	Note There is no difference between small and capital letters.

### 8.30 AT^SPBG Read entry from active telephone book via sorted index

This command sorts the active phonebook records by name, in alphabetical order. Please note that the alphabetical order is assigned an index of its own which is *not identical with the location numbers used in the various phonebooks*.

CAUTION: The AT^SPBG command is *intended for reading only*. For example, it helps you find entries starting with matching characters. However, do not use the listed index numbers to dial out or modify entries.

<p>Test command</p> <p>AT^SPBG=?</p>	<p>Response</p> <p><b>^SPBG: (list of used &lt;index&gt;s), &lt;nlength&gt;, &lt;tlength&gt;</b>  <b>OK/ERROR/+CME ERROR</b></p> <p>Parameter</p> <p><b>&lt;index&gt;</b> Total number of entries stored in the active phonebook; displayed as a range of serial numbers (1 – n).</p> <p><b>&lt;nlength&gt;</b> Max. length of phone number</p> <p><b>&lt;tlength&gt;</b> Max. length of the text associated with the phone number</p>
<p>Execute command</p> <p>AT^SPBG=  &lt;index1&gt;  [, &lt;index2&gt;]</p>	<p>Response</p> <p><b>^SPBG: &lt;index1&gt;, &lt;number&gt;, &lt;type&gt;, &lt;text&gt;[&lt;CR&gt;&lt;CL&gt;</b>  <b>^SPBG: .....</b>  <b>^SPBG: &lt;index2&gt;, &lt;number&gt;, &lt;type&gt;, &lt;text&gt; ]</b>  <b>OK/ERROR/+CME ERROR</b></p> <p>Parameter</p> <p><b>&lt;index1&gt;</b> Serial number assigned to the position in the alphabetical list where reading of entries starts</p> <p><b>&lt;index2&gt;</b> Serial number assigned to the position in the alphabetical list where reading of entries ends</p> <p><b>&lt;number&gt;</b> Phone number</p> <p><b>&lt;type&gt;</b> Type of phone number</p> <p><b>&lt;text&gt;</b> Text associated with phone number</p>
<p>Reference</p> <p>Siemens</p>	<p>Note</p> <p>The AT^SPBG feature is able to sort by the first 6 <i>matching characters</i> only. All the following characters will be ignored.</p>
<p>Example</p>	<ol style="list-style-type: none"> <li>1. First, run the <i>Test command</i> to find out the range of phonebook entries stored in the active phonebook:  AT^SPBG=?  TA returns the number of entries in the format: ^SPBG: (1-33),20,17 where 33 is the total number of entries.</li> <li>2. Now, run the <i>Execute command</i> to display the phonebook entries by alphabetical order. It is recommended to enter the full range to obtain best results.  AT^SPBG=1,33            TA returns phonebook entries by alphabetical order:  ^SPBG: 1,"+9999999",145,"Arthur"  ^SPBG: 2,"+7777777",145,"Bill"  ^SPBG: 3,"+8888888",145,"Charlie" .....    The numbers at the beginning of each line are not the memory locations in the phonebook, but only serial numbers assigned to the alphabetical list.</li> </ol>

### 8.31 AT^SPBS Steps the selected phonebook alphabetically

This command can be used to flick through the active phonebook records in alphabetical order by name.

CAUTION: The AT^SBPS command is *intended for reading only*. For example, it helps you find entries starting with matching characters. However, do not use the listed index numbers to dial out or modify entries.

Test command AT^SPBS=?	<p>Response</p> <p>^SPBS: (list of supported &lt;value&gt;s)</p> <p><b>OK</b></p> <p>Parameter</p> <p>See write command</p>
Write command AT^SPBS= <value>	<p>Parameter</p> <p>&lt;value&gt; 1 to make a step downward in the alphabetically sorted phonebook 2 to make a step upward in the alphabetically sorted phonebook</p> <p>Response</p> <p>If &lt;value&gt;=1</p> <p>TA steps down one entry.</p> <p>^SPBS: &lt;index2&gt;,&lt;number&gt;,&lt;type&gt;,&lt;text&gt; &lt;CR,LF&gt;</p> <p>^SPBS: &lt;index3&gt;,&lt;number&gt;,&lt;type&gt;,&lt;text&gt; &lt;CR,LF&gt;</p> <p>^SPBS: &lt;index4&gt;,&lt;number&gt;,&lt;type&gt;,&lt;text&gt; &lt;CR,LF&gt;,&lt;CR,LF&gt;</p> <p><b>OK</b></p> <p>If &lt;value&gt;=2 (after &lt;value&gt;=1)</p> <p>TA steps up one entry.</p> <p>^SPBS: &lt;index1&gt;,&lt;number&gt;,&lt;type&gt;,&lt;text&gt; &lt;CR,LF&gt;</p> <p>^SPBS: &lt;index2&gt;,&lt;number&gt;,&lt;type&gt;,&lt;text&gt; &lt;CR,LF&gt;</p> <p>^SPBS: &lt;index3&gt;,&lt;number&gt;,&lt;type&gt;,&lt;text&gt; &lt;CR,LF&gt;,&lt;CR,LF&gt;</p> <p><b>OK</b></p> <p>If error is related to ME functionality:</p> <p>+CME ERROR: &lt;err&gt;</p> <p>The response parameters are explained in the specification of the "AT^SPBG" command.</p>
Reference Siemens	<p>Note</p> <p>This command can be used for the ME, SM and FD phonebook.</p>

### 8.32 AT^SPIC Display PIN counter

Test command AT^SPIC=?	<p>Response</p> <p><b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p> <p>Parameter</p>
Execute command AT^SPIC	<p>TA returns the number of attempts still available for entering a required password, e.g. the PIN, PUK, PH-SIM PUK etc. To check whether or not you need to enter a password use the "AT+CPIN?" command.</p> <p>Response</p> <p><b>^SPIC: &lt;counter&gt; OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b></p> <p>Parameter</p> <p><b>&lt;counter&gt;</b> Number of attempts counted down after each failure.</p>
Reference Siemens	<p>Note</p> <ul style="list-style-type: none"> <li>• When entering the SIM PIN or PUK you have a maximum of three attempts to enter each number.</li> <li>• For passwords associated to the phone lock ("PS" lock set by client or factory) or other factory set locks, such as "PF", "PN", "PU", "PP", "PC" the number of attempts is subject to a timing algorithm explained in Chapter 4.35.1. If these passwords are incorrectly entered the counter first returns 3, 2 and 1 remaining attempt(s), but then gives the total number of attempts which amounts to 63 (see example below).</li> <li>• See also Chapters 4.21, 4.35 4.36, 4.38, 8.13 for further information on locks and passwords.</li> </ul>
Example	<p>Though a mobile is locked to a specific SIM card (phone lock), the client attempts to operate it with another SIM card. The client correctly enters the SIM PIN of the SIM card currently inserted, but then fails to give the "PS" lock password (PH-SIM PUK):</p> <pre> at+cpin=9999 OK at+cpin? +CPIN: PH-SIM PIN      ME is waiting for the phone lock password OK  at^spic ^SPIC: 3 OK  at+cpin=4711 +CME ERROR: PH-SIM PIN required  at+cpin=4712 +CME ERROR: incorrect password </pre>



	<pre> at^spic ^SPIC: 1 OK  at+cpin=4713 +CME ERROR: incorrect password at^spic ^SPIC: 63 OK  at+cpin=4714 +CME ERROR: incorrect password at^spic ^SPIC: 63 </pre>
--	---

### 8.33 AT^SPLM Read the PLMN list

Test command AT^SPLM=?	Response <b>OK</b> Parameter See execute command
Execute command AT^SPLM	Response TA returns the list of operator names from the ME. Each operator code <b>&lt;numeric&gt;</b> that has an alphanumeric equivalent <b>&lt;alphan&gt;</b> in the ME memory is returned. <b>^SPLM:</b> numeric <b>&lt;numeric1&gt;</b> ,long alphanumeric <b>&lt;alpha1&gt;</b> <b>&lt;CR&gt;</b> <b>&lt;LF&gt;</b> <b>^SPLM:.....OK</b> If error is related to ME functionality: <b>+CME ERROR: &lt;err&gt;</b> Parameter <b>&lt;numeric&gt;</b> string type; operator in numeric form; GSM location area identification number <b>&lt;alphan&gt;</b> string type; operator in long alphanumeric format; can contain up to 16 characters
Reference Siemens	Note See also GSM 07.07: +COPN, +COPS

### 8.34 AT^SPLR Read entry from the preferred operators list

Test command AT^SPLR=?	<p>Response</p> <p>TA returns the whole index range supported by the SIM.  <b>^SPLR:</b> (list of supported &lt;index&gt;s) <b>OK</b></p> <p>If error is related to ME functionality:  <b>+CME ERROR:</b> &lt;err&gt;</p> <p>Parameter</p> <p>See write command</p>
Write command AT^SPLR= <index1>[, <index2>]	<p>Response</p> <p>TA returns used entries from the SIM list of preferred operators with &lt;index&gt; between &lt;index1&gt; and &lt;index2&gt;. If &lt;index2&gt; is not given, only entry with &lt;index1&gt; is returned.</p> <p><b>^SPLR:</b> &lt;index1&gt;, &lt;oper&gt;  <b>^SPLR:</b> .....  <b>^SPLR:</b> &lt;index2&gt;, &lt;oper&gt; <b>OK</b></p> <p>If error is related to ME functionality:  <b>+CME ERROR:</b> &lt;err&gt;</p> <p>Parameter</p> <p>&lt;index1&gt; location number to read from          &lt;index2&gt; location number to read to          &lt;oper&gt; string type; operator in numeric form; GSM location area identification number</p>
Reference Siemens	<p>Note</p> <p>GSM 07.07: AT+CPOL</p>

### 8.35 AT^SPLW Write an entry to the preferred operators list

Test command AT^SPLW=?	<p>Response</p> <p>TA returns the whole index range supported by the SIM. ^SPLW: (list of supported &lt;index&gt;s) OK</p> <p>If error is related to ME functionality: +CME ERROR: &lt;err&gt;</p> <p>Parameter</p> <p>See write command</p>
Write command AT^SPLW= <index> [,<oper>]	<p>Parameter</p> <p>TA writes an entry to the SIM list of preferred operators at location number &lt;index&gt;. If &lt;index&gt; is given but &lt;oper&gt; is left out, the entry is deleted. If &lt;oper&gt; is given but &lt;index&gt; is left out, &lt;oper&gt; is inserted in the next free location.</p> <p>&lt;index&gt; location number</p> <p>&lt;oper&gt; string type; operator in numeric form; GSM location area identification number</p> <p>Note: &lt;oper&gt; is a 5 digit number, 3 digits country code and 2 digits for the Network provider.</p> <p>Response</p> <p>OK</p> <p>If error is related to ME functionality: +CME ERROR: &lt;err&gt;</p>
Reference Siemens	<p>Note</p> <p>See also GSM 07.07: AT+CPOL</p>

### 8.36 AT^SPWD Change password for a lock

Test command AT^SPWD=?	<p>Response</p> <p><b>^SPWD:</b> (list of supported (&lt;fac&gt;, &lt;pwdlength&gt;)s) <b>OK</b></p> <p>If error is related to ME functionality: <b>+CME ERROR:</b> &lt;err&gt;</p> <p>Parameter</p> <p>&lt;fac&gt;        "P2"    PIN2                  otherwise see write command without "FD"</p> <p>&lt;pwdlength&gt; integer, max. length of password</p>
Write command AT^SPWD = <fac>, <oldp- wd>, <newpwd>	<p>Parameter</p> <p>&lt;fac&gt;        <u>Phone security passwords</u>                  "SC"    SIM card (PIN)                  "P2"    PIN 2                  "PS"    Phone locked to SIM (device code)</p> <p><u>Factory set locks</u>                  "PF"    lock Phone to the very first SIM card                  "PN"    Network Personalisation                  "PU"    Network subset Personalisation                  "PP"    Service Provider Personalisation                  "PC"    Corporate Personalisation</p> <p><u>Supplementary Service: Call barring</u>                  "AO"    BAOC ( Bar All Outgoing Calls)                  "OI"    BOIC ( Bar Outgoing International Calls)                  "OX"    BOIC-exHC (Bar Outgoing International Calls except to Home Country)                  "AI"    BAIC ( Bar All Incoming Calls)                  "IR"    BIC-Roam ( Bar Incoming Calls when Roaming outside the home country)                  "AB"    All Barring services                  "AG"    All outGoing barring services                  "AC"    All inComing barring services</p> <p>Note: All call barring types have usually the same ME &lt;password&gt; to lock and unlock. The default &lt;password&gt; is supplied from the network provider. TA sets a new password for the facility lock function.</p> <p>&lt;oldpwd&gt;    Password specified for the facility from the user interface or with command.                  Can be ignored if no old password was allocated to the facility. Take into account that a password may have already been set by factory, or that the service is subject to a password issued by the provider.</p>

	<p>See notes above or contact provider.</p> <p>if &lt;fac&gt; = "SC" then PIN</p> <p>if &lt;fac&gt; = "AO"... "AC" (barring) then network password (if needed)</p> <p>if &lt;fac&gt; = "P2" then PIN2</p> <p>&lt;newpwd&gt; new password</p> <p>Response</p> <p><b>OK</b></p> <p>If error is related to ME functionality:</p> <p><b>+CME ERROR: &lt;err&gt;</b></p>
Reference Siemens	<p>Note</p> <p>See also specification of AT+ CPWD in GSM 07.07 and further details in Chapter 4.38.</p>

### 8.37 AT^SRTC Select, query, test ring tone parameters

Test command AT^SRTC=?	<p>Response</p> <p><b>^SRTC:</b> (list of supported &lt;type&gt;s), (list of supported &lt;vol&gt;s) <b>OK</b></p>
Read command AT^SRTC?	<p>Response</p> <p><b>^SRTC:</b> &lt;type&gt;, &lt;vol&gt;, &lt;stat&gt; <b>OK</b></p> <p>Parameters</p> <p><b>&lt;type&gt;</b> Type of ringing tone. 7 different tones and melodies can be selected: 1 – 7 (factory setting is &lt;type&gt;=3)</p> <p><b>&lt;vol&gt;</b> Volume of ringing tone. Varies from low to high. 0 Mute (factory setting) 1 Very low (initial setting after firmware update) 2 Identical with 1 3 Low 4 Identical with 3 5 Middle 6 Identical with 5 7 High</p> <p><b>&lt;stat&gt;</b> Status of test ringing. Indicates whether or not a melody is currently being played back for testing. 0 Playback is off. 1 Playback is on.</p> <p>The Read command can be used while test playback is off or on. In the latter case, see Execute command for details.</p>
Write command AT^SRTC=[<type>][,<vol>]	<p>Response</p> <p><b>^SRTC:</b> &lt;type&gt;, &lt;vol&gt;<b>OK</b></p> <p>Parameters</p> <p>See Read command</p> <p>The Write command selects the type and volume of ringing tones. It can be used while test playback is off or on. In the latter case, see Execute command for details.</p> <p>The selected type and volume apply to all audio modes. Also they are saved in the non-volatile Flash memory and, thus, are retained after Power Down.</p> <p>Before first using ringing tones: We have chosen to let you decide your own preferences when you start using ringing tones. Therefore, factory setting is AT^SRTC=3,0,0 (ringing tones are muted). To activate ringing tones for the very first time, first enter the Write command and simply change the volume. After a firmware update the volume will be reset to &lt;vol&gt;=1. The &lt;type&gt; selected before the firmware update will be preserved.</p>

<p>Execute Command <b>AT^SRTC</b></p>	<p>The Execute command is intended for testing. It starts to play a melody from the audio output currently selected with the AT^SNFS command.</p> <p>Response <b>OK</b></p> <p>To stop the test use AT^SRTC again. During test playback, you can enter the Write command to select another melody and adjust the volume. Also, you can enter the Read command to check the type and volume of the current ringing tone, and to view the status of playback (on / off).</p> <p>The test ringing signal cannot be activated when an MTC is ringing (ERROR).</p> <p>If an MTC arrives during test playback, test ringing stops and “normal” ringing is activated (RING).</p> <p>Selecting &lt;vol&gt;=0 during the test, immediately stops playback. After this, ringing tones will be muted until you change &lt;vol&gt; using the Write command.</p>
<p>Reference <b>SIEMENS</b></p>	

### 8.38 AT^SSCONF SMS Configuration

Test command AT^SSCONF=?	<p>Response</p> <p>^SSCONF: (list of supported &lt;ra&gt;s)</p> <p>Parameter</p> <p>See write command</p>
Read command AT^SSCONF?	<p>Response</p> <p>^SSCONF: &lt;ra&gt; OK</p> <p>Parameter</p> <p>See write command</p>
Write command AT^SSCONF=<ra>	<p>The write command serves to control the presentation of the recipient address parameters &lt;ra&gt; and &lt;tora&gt;.</p> <p>Response</p> <p><b>OK</b></p> <p>Parameter</p> <p><b>&lt;ra&gt;: display recipient address</b></p> <p>    <u>0</u> the mobile station shall not display the parameter &lt;ra&gt; and &lt;tora&gt;.</p> <p>    1 the mobile station shall display the parameter &lt;ra&gt; and &lt;tora&gt;.</p> <p>Please note that the setting is stored volatile, i.e. after restart or reset, the default value <u>0</u> will be restored. Also, there is no way to store AT^SSCONF to the user defined profile.</p>
Reference Siemens	<p>Note</p> <p>The parameters &lt;ra&gt; and &lt;tora&gt; appear in the result codes of the AT commands AT+CMGL, AT^SMGL, AT+CMGR, AT^SMGR and the unsolicited result code +CDS.</p>



### 8.39 AT^SSDA Set Display Availability

Use the AT^SSDA command to specify whether your MC35 product is designed to provide a display. If there is one available, AT^SSDA enables or disables the mobile station to present incoming Class 0 short messages directly on the display. The command is not required for other short message Classes.

Test command AT^SSDA=?	<p>Response</p> <p><b>^SSDA:</b> (list of supported &lt;da&gt;s)</p> <p>Parameter</p> <p>See write command</p>
Read command AT^SSDA?	<p>Response</p> <p><b>^SSDA:</b> &lt;da&gt; <b>OK</b></p> <p>Parameter</p> <p>See write command</p>
Write command AT^SSDA= <da>	<p>Response</p> <p><b>OK</b></p> <p>Parameter</p> <p><b>&lt;da&gt;: display availability</b></p> <p>    <u>0</u> the mobile station is not capable of displaying short messages</p> <p>    1 the mobile station is capable of displaying short messages</p> <p>Please note that the setting is stored volatile, i.e. after restart or reset, the default value <u>0</u> will be restored. Also, there is no way to store AT^SSDA to the user defined profile.</p>
Reference Siemens	<p>Note</p> <p>If a mobile station is able to display short messages, class 0 messages can be displayed immediately. If the mobile station has no display, class 0 messages shall be treated as though there was no message class.</p> <p>Refer to GSM 03.38.</p> <p>The setting of &lt;da&gt; influences the behaviour of the &lt;mt&gt; parameter in the command AT+CNMI. This is the only effect of this command. If &lt;da&gt;=1 and &lt;mt&gt;=1 or 3, then Class 0 short messages will be treated as if &lt;da&gt;=0 and &lt;mt&gt;=2. For details on AT+CNMI refer to Chapter 5.10.</p> <p>Multiplex protocol:</p> <p>If using &lt;da&gt;=1 and &lt;mt&gt;=1 on one instance, all other instances have to use &lt;mt&gt;=0.</p>

## 8.40 AT^SSYNC Configure SYNC Pin

The ^SSYNC command serves to configure the SYNC pin in the ZIF connector of the GSM engine. Please note that the pin may be assigned different functions, depending on the design of the host application. MC35 Terminal supports only <mode>=1.

For detailed information on the SYNC pin of the MC35 module refer to [1]. Before changing the mode of the SYNC pin, carefully read the technical specifications.

Test command AT^SSYNC=?	Response <b>^SSYNC: (list of supported &lt;mode&gt;s) OK</b>  Parameter: See write command
Read command AT^SSYNC?	Response <b>+SSYNC: &lt;mode&gt; OK</b>  Parameter: See write command
Write command AT^SSYNC= <mode>	Response <b>OK</b> Parameter <mode> <u>0</u> MC35 <i>module</i> : Enables the SYNC pin to indicate growing power consumption during a transmit burst. You can make use of the signal generated by the SYNC pin, if power consumption is your concern. To do so, ensure that your application is capable of processing the signal. Your platform design must be such that the incoming signal causes other components to draw less current. In short, this allows your application to accomodate current drain and thus, supply sufficient current to the GSM engine if required. MC35 <i>Terminal</i> : not applicable (do not select mode 0).  <u>1</u> Enables the SYNC pin to control a status LED. On the MC35 <i>Terminal</i> , this is the LED placed on the front panel. If you use the MC35 module, the SYNC pin can control an LED installed in your application. The LED functions described in Table 12 are applicable both to the module and the terminal. Note: Mode 1 is the default mode for the MC35 Terminal.
Note	The SYNC pin mode is stored to the non-volatile Flash memory, and thus retained after Power Down.

Table 12: Operating modes of the ME indicated by status LED (if &lt;mode&gt; = 1):

LED mode	Function
Off	<p>MC35 <i>module</i>: ME is off or running in SLEEP, Alarm or Charge-only mode.</p> <p>MC35 <i>Terminal</i>: ME is off or in SLEEP mode.</p>
600 ms On / 600ms Off	No SIM card inserted or no PIN entered, or network search in progress, or ongoing user authentication, or network login in progress.
75 ms On / 3 s Off	Logged to network (monitoring control channels and user interactions). No call in progress.
75 ms on / 75 ms Off / 75 ms On / 3 s Off	One or more GPRS contexts activated.
Flashing	Indicates GPRS data transfer: When a GPRS transfer is in progress, the LED goes on within 1 second after data packets were exchanged. Flash duration is approximately 0.5 s.
On	<p>Depending on type of call:</p> <p><i>Voice call</i>: Connected to remote party.</p> <p><i>Data call</i>: Connected to remote party or exchange of parameters while setting up or disconnecting a call.</p>

**8.41 AT^STCD Display Total Call Duration**

Test command AT^STCD=?	Response <b>OK</b>
Execute command AT^STCD	<div>Response TA returns total call duration (accumulated duration of all calls) <b>^STCD: &lt;time&gt; OK</b></div> <div>Parameter <b>&lt;time&gt;</b>      string type value; format is "hh:mm:ss", where characters indicate hours, minutes, seconds; E.g. 22:10:00 "22:10:00" max value is 9999:59:59</div>
Reference Siemens	<div>Note</div> <div>The Total Call Duration will not be reset by power off or other means.</div>

## 9 APPENDIX

### 9.1 Summary of ERRORS and Messages

The final result codes **+CME ERROR: <err>** and **+CMS ERROR: <err>** indicate errors related to mobile equipment or network. The effect is similar to an **ERROR** result code.

A final result error code terminates the execution of the command and prevents the execution of all remaining commands that may follow on the same command line. If so, neither **ERROR** nor **OK** result code are returned. A 30 seconds timeout causes **ERROR** to be returned when the input of a command is not complete.

The format of <err> can be either numeric or verbose. This is set with the AT+CME command (see Chapter 4.25).

#### 9.1.1 Summary of CME ERRORS related to GSM 07.07

Code of <err>	Meaning
0	phone failure
1	no connection to phone
2	phone-adapter link reserved
3	Operation not allowed
4	Operation not supported
5	PH-SIM PIN required
6	PH-FSIM PIN required
7	PH-FSIM PUK required
10	SIM not inserted
11	SIM PIN required
12	SIM PUK required
13	SIM failure
14	SIM busy
15	SIM wrong
16	Incorrect password
17	SIM PIN2 required
18	SIM PUK2 required
20	Memory full
21	invalid index
22	not found
23	Memory failure
24	text string too long
25	invalid characters in text string
26	dial string too long
27	invalid characters in dial string
30	no network service
31	Network timeout
32	Network not allowed emergency calls only
40	Network personalization PIN required
41	Network personalization PUK required

Code of <err>	Meaning
42	Network subset personalization PIN required
43	Network subset personalization PUK required
44	service provider personalization PIN required
45	service provider personalization PUK required
46	Corporate personalization PIN required
47	Corporate personalization PUK required
48	PH-SIM PUK required (PH-SIM PUK may also be referred to as Master Phone Code. For further details see Chapters 4.21.2 and 4.35.1)
100	Unknown
256	Operation temporarily not allowed
257	call barred
258	phone is busy
259	user abort
260	invalid dial string
261	ss not executed
262	SIM blocked

Note: Values below 256 are reserved.

### 9.1.2 Summary of GPRS-related CME ERRORS

Code of <err>	Meaning
103	Illegal MS
106	Illegal ME
107	GPRS services not allowed
111	PLMN not allowed
112	Location area not allowed
113	Roaming not allowed in this location area
132	service option not supported
133	requested service option not subscribed
134	service option temporarily out of order
148	unspecified GPRS error
149	PDP authentication failure
150	invalid mobile class

### 9.1.3 Summary of CMS ERRORS related to GSM 07.05

Code of <err>	Meaning
1	Unassigned (unallocated) number
8	Operator determined barring
10	Call barred
21	Short message transfer rejected
27	Destination out of service
28	Unidentified subscriber
29	Facility rejected
30	Unknown subscriber
38	Network out of order
41	Temporary failure
42	Congestion
47	Resources unavailable, unspecified
50	Requested facility not subscribed
69	Requested facility not implemented
81	Invalid short message transfer reference value
95	Invalid message, unspecified
96	Invalid mandatory information
97	Message type non-existent or not implemented
98	Message not compatible with short message protocol state
99	Information element non-existent or not implemented
111	Protocol error, unspecified
127	Interworking, unspecified
128	Telematic interworking not supported
129	Short message Type 0 not supported
130	Cannot replace short message
143	Unspecified TP-PID error
144	Data coding scheme (alphabet) not supported
145	Message class not supported
159	Unspecified TP-DCS error
160	Command cannot be actioned
161	Command unsupported
175	Unspecified TP-Command error
176	TPDU not supported
192	SC busy
193	No SC subscription
194	SC system failure
195	Invalid SME address
196	Destination SME barred
197	SM Rejected-Duplicate SM
198	TP-VPF not supported
199	TP-VP not supported
208	D0 SIM SMS storage full
209	No SMS storage capability in SIM
210	Error in MS
211	Memory Capacity Exceeded
212	SIM Application Toolkit Busy

Code of <err>	Meaning
213	SIM data download error
255	Unspecified error cause
300	ME failure
301	SMS service of ME reserved
302	Operation not allowed
303	Operation not supported
304	Invalid PDU mode parameter
305	Invalid text mode parameter
310	SIM not inserted
311	SIM PIN required
312	PH-SIM PIN required
313	SIM failure
314	SIM busy
315	SIM wrong
316	SIM PUK required
317	SIM PIN2 required
318	SIM PUK2 required
320	Memory failure
321	Invalid memory index
322	Memory full
330	SMSC address unknown
331	no network service
332	Network timeout
340	NO +CNMA ACK EXPECTED
500	Unknown error
512	User abort
513	unable to store
514	invalid status
515	invalid character in address string
516	invalid length
517	invalid character in pdu
518	invalid parameter
519	invalid length or character
520	invalid character in text
521	timer expired

**Note:**

If you attempt to use SMS related AT commands before inserting a SIM card or entering the SIM PIN, the resulting errors will be delivered in the form of CME errors instead of CMS errors.

This is a normal behaviour since the GSM 07.05 based CMS errors are mapped to GSM 07.07 based CME errors if SIM PIN authentication has not been done.

Example 1	<p>The application tries to send a short message though the SIM card is not present:</p> <pre>AT+CMGF=1 OK</pre>
-----------	--



	<pre>AT+CMGS=123456 +CME ERROR: 10</pre> <p>// Equivalent to +CMS ERROR: 310</p>
Example 2	<p>The application tries to send a short message while the SIM card is present, but PIN authentication has not yet been done.</p> <pre>AT+CMGF=1 OK AT+CMGS=123456 +CME ERROR: 11</pre> <p>// Equivalent to +CMS ERROR: 311</p>

### 9.1.4 Summary of Unsolicited Result Codes (URC)

A URC is a report message sent from the ME to the TE. An unsolicited result code can either be delivered automatically when an event occurs or as a result of a query the ME received before. However, a URC is not issued as a *direct* response to an executed AT command.

Typical URCs may be information about incoming calls, received SMS, changing temperature, status of the battery etc. A summary of URCs is listed in Table 13 and Table 14.

When sending a URC the ME activates its Ring Line (Logic "1"), i.e. the line goes active low for 1 second.

If an event that delivers a URC coincides with the execution of an AT command, the URC will be output after command execution has completed.

For each of these messages, you can configure the ME whether or not to send an unsolicited result code. Remember that the presentation mode of URCs will be reset to the default values

- when you power down the GSM engine, e.g. with AT^SMSO or when disconnecting power supply,
- when you reset the engine with AT+CFUN=1,1
- when you restore the factory settings with AT&F.

To take advantage of the messages, you need to activate the desired URC every time you reboot the GSM engine or have the parameters included in the user profile saved with AT&W. If you do so, take into account that the presentation mode of some URCs cannot be saved to the user profile, for example ^SBC, ^SCTM, +CSSI and +CSSU.

The URCs SYSSTART, SYSSTART CHARGE-ONLY MODE and SYSSTART ALARM MODE are not user definable. This is also true for the Fax Class 2 URCS listed in Table 14.

Table 13: Summary of URCs

Message	Meaning	How to activate URC
RING	Incoming calls	Not defined by user
+CCCM: <ccm>	Current call meter value	AT^SACM=1
+CREG: <stat>[,<lac>,<ci>]	Registration to ME network changed	AT+CREG=1 or AT+CREG=2
+CRING: <type>	Indication of an incoming call	AT+CRC=1
+CLIP: <number>, <type>	Telephone number of caller	AT+CLIP=1
+CMTI:<mem>,<index>	Indication of a new short message (text and PDU mode)	AT+CNMI=1,1
+CMT:,<length><CR><LF><pdu>	Short message is output directly to the TE (in PDU mode)	Example: AT+CNMI=1,2
+CMT:<oa>,<scts>[,<toa>,<fo>,<pid>,<dc>,<sca>,<tosca>,<length>]<CR><LF><data>	Short message is output directly to the TE (in text mode)	Example: AT+CNMI=1,2
+CBM:<sn>,<mid>,<dc>,<page>,<pages><CR> <LF><data>	Cell broadcast message is output directly to the TE (in text mode)	Example: AT+CNMI=1,0,2
+CBM: <length><CR><LF><pdu>	Cell broadcast message is output directly to the TE (in PDU mode)	Examples: AT+CNMI=1,0,2
+CDS: <length><CR><LF><pdu>	SMS status report routed directly to TE (in PDU mode)	Example: AT+CNMI=1,0,0,1
+CDS: <fo>,<mr>,<ra>,<tora>,<scts>,<dt>,<st>	SMS status report routed directly to TE (in text mode)	
+CDSI: <mem>,<index>	SMS status report routed ME/TA. Can be queried from the memory with location index number (text and PDU mode)	Example: AT+CNMI=1,0,0,2

Message	Meaning	How to activate URC
+CSSI: <code1> +CSSU: <code2>	Supplementary service intermediate/unsolicited result code	AT+CSSN=1,1
^SMGO: <mode>	SMS overflow indicator	AT^SMGO=1
^SCKS: <m>	Indicates whether card has been removed or inserted	AT^SCKS=1
^SCTM_A: <m> ^SCTM_B: <m>	Battery (A) or board (B) is close to or beyond critical temperature limit. URC is issued repeatedly. If <m>=2 or <m>-2, ME switches off.	AT^SCTM=1
^SBC: Undervoltage	Undervoltage of battery detected. ME will be switched off within a minute.	AT^SBC=<current>
^SYSSTART	Indicates that ME has successfully been started. Note that this URC will not appear if autobauding is enabled.	Not defined by user
^SYSSTART CHARGE-ONLY MODE	Only applicable to battery operated MEs: URC indicates that ME has entered the Charge-only mode. Charge-only mode allows charging while ME is detached from network. Limited number of AT commands is accessible. Mode can be launched by connecting the battery charger to the POWER pins of the ZIF connector, before or after powering down ME with AT^SMSO. Note that this URC will not appear if autobauding is enabled.	Not defined by user
^SYSSTART ALARM MODE or, if individual text available: ^SYSSTART ALARM MODE +CALA: <text>	Indicates that ME has entered Alarm mode. RTC alert set with the AT+CALA command. Executed when ME has been powered down. Causes ME to wake up from Power Down mode. Preventing ME from unintentionally registering to the network, Alarm mode allows limited operation. Limited number of AT commands is accessible. Do not confuse with wake-up or reminder call. Note that this URC will not appear if autobauding is enabled.	Enabled when you configure Alarm mode
+CALA: <text>	Wake-up or reminder call set with AT+CALA command. Executed while ME is in normal operation. Do not confuse with Alarm mode.	Enabled when you set wake-up call
+CIEV: <text>	Reports changes from indicators listed in the AT+CIND command specification.	AT+CMER=2,0,0,2 AT+CMER=3,0,0,2

Table 14: Summary of Fax Class 2 URCs defined by EIA PN-2388

Message	Meaning
+FCON	Indicates connection with a fax machine
+FNSF:<param>	Reports non-standard setup frame
+FTSI:"<id>"	Reports the remote ID, transmit station ID
+FCSI:"<id>"	Reports the remote ID, called station ID
+FDCS:<VR>, ,<WD>,<LN>,<DF>,<EC>,<BF>,<ST>	Reports the current session parameter (refer to EIA PN-2388, table 3.10)
+FDIS:<VR>, ,<WD>,<LN>,<DF>,<EC>,<BF>,<ST>	Reports the remote station capabilities (refer to EIA PN-2388, table 3.10)
+FHNG:<stat>	Reports call terminated with status
+FPTS:<stat>	Reports received page status
+FET:<stat>	Reports post page message

### 9.1.5 Result codes

Indication	Numeric	Meaning
OK	0	Command executed, no errors, Wake up after reset
CONNECT	1	Link established
RING	2	Ring detected
NO CARRIER	3	Link not established or disconnected
ERROR	4	Invalid command or command line too long
NO DIALTONE	6	No dial tone, dialling impossible, wrong mode
BUSY	7	Remote station busy
CONNECT 2400/RLP	47	Link with 2400 bps and Radio Link Protocol
CONNECT 4800/RLP	48	Link with 4800 bps and Radio Link Protocol
CONNECT 9600/RLP	49	Link with 9600 bps and Radio Link Protocol
CONNECT 14400/RLP	50	Link with 14400 bps and Radio Link Protocol
ALERTING		Alerting at called phone
DIALING		Mobile phone is dialing

### 9.1.6 Cause Location ID for the extended error report (AT+CEER)

ID	Description
0	No error (default)
1	SIEMENS L2 cause
2	GSM cause for L3 Radio Resource Sublayer (GSM 04.08 annex F)
3	SIEMENS cause for L3 Radio Resource Sublayer
4	GSM cause for L3 Mobility Management (GSM 04.08 annex G)
5	SIEMENS cause for L3 Mobility Management
6	GSM cause for L3 Mobility Management via MMR-SAP (GSM 04.08 annex G)
7	SIEMENS cause for L3 Mobility Management via MMR-SAP
8	GSM cause for L3 Call Control (GSM 04.08 10.5.4.11 and annex H)
9	SIEMENS cause for L3 Call Control
11	SIEMENS cause for L3 Advice of Charge Entity
12	GSM cause for L3 SMS CP Entity
13	SIEMENS cause for L3 SMS CP Entity
14	GSM cause for L3 SMS RL Entity
15	SIEMENS cause for L3 SMS RL Entity
16	GSM cause for L3 SMS TL Entity
17	SIEMENS cause for L3 SMS TL Entity
18	SIEMENS cause for DSM Entity
21	GSM cause for L3 Call-related Supplementary Services
22	SIEMENS cause for L3 Call-related Supplementary Services
32	SIEMENS cause for Supplementary Services Entity
33	SIEMENS cause for Supplementary Services Manager
34	Network cause for Supplementary Services (GSM 04.08 10.5.4.11 and annex H)
35	Supplementary Services network error (GSM 04.80 3.6.6)
48	GSM cause for GPRS Mobility Management (GSM 04.08 annex G.6)
49	SIEMENS cause for GPRS Mobility Management
50	GSM cause for Session Management (GSM 04.08 annex I)

51	SIEMENS cause for Session Management
128	Supplementary Services general problem (GSM 04.80 3.6.7)
129	Supplementary Services invoke problem (GSM 04.80 3.6.7)
130	Supplementary Services result problem (GSM 04.80 3.6.7)
131	Supplementary Services error problem (GSM 04.80 3.6.7)
241	SIEMENS cause for GPRS API
242	SIEMENS cause for Link Management
243	SIEMENS cause for Embedded Netcore (Internet Protocol Stack)

### 9.1.7 GSM release cause for L3 Radio Resource (RR) (AT+CEER)

Number	Description
0	Normal event
1	Abnormal release, unspecified
2	Abnormal release, channel unacceptable
3	Abnormal release, timer expired
4	Abnormal release, no activity on the radio path
5	Pre-emptive release
8	Handover impossible, timing advance out of range
9	Channel mode unacceptable
10	Frequency not implemented
65	Call already cleared
95	Semantically incorrect message
96	Invalid mandatory information
97	Message type non-existent or not implemented
98	Message type not compatible with protocol state
100	Conditional information element error
101	No cell allocation available
111	Protocol error unspecified

### 9.1.8 SIEMENS release cause for L3 Radio Resource (RR) (AT+CEER)

Number	Description
1	Racchs not answered
2	Racchs rejected
3	Access class of the SIM is barred by the network provider
4	SABM failure
5	Radio link counter expiry or PerformAbnormalRelease
6	Confirm ABORT of the MM
7	Respond to DEACT_REQ
8	Loss of coverage
9	Reestablishment not possible

### 9.1.9 GSM release cause for Mobility Management (MM) (AT+CEER)

Number	Description
<i>Causes related to MS identification</i>	
2	IMSI unknown in HLR
3	Illegal MS
4	IMSI unknown in VLR
5	IMEI not accepted
6	Illegal ME
<i>Cause related to subscription options</i>	
11	PLMN not allowed
12	Location Area not allowed
13	Roaming not allowed in this location area
<i>Causes related to PLMN specific network failures and congestion</i>	
17	Network failure
22	Congestion
<i>Causes related to nature of request</i>	
32	Service option not supported
33	Requested service option not subscribed
34	Service option temporarily out of order
38	Call cannot be identified
<i>Causes related to invalid messages</i>	
95	Semantically incorrect message
96	Invalid mandatory information
97	Message type non-existent or not implemented
98	Message not compatible with protocol state
99	Information element non-existent or not implemented
100	Conditional information element error
101	Messages not compatible with protocol state
111	Protocol error, unspecified
<i>Causes related GPRS</i>	
7	GPRS services not allowed
8	GPRS services not allowed in combination with non-GPRS services
9	MS identity cannot be identified by the network
10	Implicitly detached
14	GPRS services not allowed in current PLMN
16	MSC temporarily unreachable

### 9.1.10 SIEMENS release cause for L3 Mobility Management (MM) (AT+CEER)

Number	Description
1	No SIM available
8	No MM connection
9	Authentication failure
11	MM performs detach
17	The registration failed and will be re-attempted in a short term
18	The CM connection establishment failed
19	The registration failed and will be re-attempt in a long term
20	The RR connection is released
21	The MS tries to register
22	The SPLMN is not available
23	An MTC is in progress
24	A PLMN scan is in progress
25	The MM is detached, the MS is in MS class C GPRS only

### 9.1.11 GSM release cause for L3 Call Control (CC) (AT+CEER)

Number	Description
0	No error
<i>Normal class</i>	
1	Unassigned (unallocated) number
3	No route to destination
6	Channel unacceptable
8	Operator determined barring
16	Normal call clearing
17	User busy
18	No user responding
19	User alerting, no answer
21	Call rejected
22	Number changed
25	Pre-emption
26	Non-selected user clearing
27	Destination out of order
28	Invalid number format (incomplete number)
29	Facility rejected
30	Response to STATUS ENQUIRY
31	Normal, unspecified
<i>Resource unavailable class</i>	
34	No circuit/channel available
38	Network out of order
41	Temporary failure
42	Switching equipment congestion
43	Access information discarded
44	Requested circuit/channel not available
47	Resource unavailable, unspecified



Number	Description
<i>Service or option not available class</i>	
49	Quality of service unavailable
50	Requested facility not subscribed
55	Incoming calls barred within the CUG
57	Bearer capability not authorized
58	Bearer capability presently not available
63	Service or option not available, unspecified
<i>Service or option not implemented</i>	
65	Bearer service not implemented
68	ACM equal or greater than ACMmax
69	Requested facility not implemented
70	Only restricted digital information bearer capability is available
79	service or option not implemented, unspecified
<i>Invalid message (e.g. parameter out of range) class</i>	
81	Invalid transaction identifier value
87	User not member of CUG
88	Incompatible destination
91	Invalid transit network selection
95	Semantically incorrect message
<i>Protocol error (e.g. unknown message) class</i>	
96	Invalid mandantory information
97	Message type non-existant or not implemented
98	Message type not comaptible with protocol state
99	Information element non-existent or not implemented
100	Conditional information element error
101	Message not compatible with protocol
102	Recovery on timer expiry
111	Protocol error, unspecified
<i>Interworking class</i>	
127	Interworking, unspecified

### 9.1.12 SIEMENS release cause for L3 Call Control (CC) (AT+CEER)

Number	Description
1	Call dropped
2	Service not available
3	Hold procedure not available
4	Temporary no service, previous procedure not yet finished
5	No speech service available
6	Call reestablishment procedure active
7	Mobile received a release (complete) message during a modify procedure (modify reject)
8	Call clearing, because loss of radio connection, if no reestablishment is allowed (call not active)
10	Number not included in FDN list
<i>Notifications</i>	
300	Called party barred incoming call

### 9.1.13 SIEMENS release cause for L3 Advice of Charge (AOC) (AT+CEER)

Number	Description
1	SIM data not available
2	SIM does not support AOC
3	SIM data access error
4	ACM limit almost reached ACM range overflow
5	ACM range overflow

### 9.1.14 GSM release cause for Supplementary Service call (AT+CEER)

Number	Description
0	No error (default)
1	UnknownSubscriber
9	IllegalSubscriber
10	BearerServiceNotProvisioned
11	TeleserviceNotProvisioned
12	IllegalEquipment
13	CallBarred
15	CUGReject
16	IllegalSSOperation
17	SSErrorStatus
18	SSNotAvailable
19	SSSubscriptionViolation
20	SSIncompatibility
21	FacilityNotSupported
27	AbsentSubscriber
29	ShortTermDenial
30	LongTermDenial
34	SystemFailure
35	DataMissing
36	UnexpectedDataValue
37	PWRegistrationFailure
38	NegativePWCheck
43	NumberOfPWAttemptsViolation
71	UnknownAlphabet
72	USSDBusy
126	MaxNumsOfMPTYCallsExceeded
127	ResourcesNotAvailable
<i>General Problem Codes</i>	
300	Unrecognized Component
301	Mistyped Component
302	Badly Structured Component
<i>Invoke Problem Codes</i>	
303	Duplicate Invoke ID
304	Unrecognized Operation
305	Mistyped Parameter

Number	Description
306	Resource Limitation
307	Initiating Release
308	Unrecognized Linked ID
309	Linked Response Unexpected
310	Unexpected Linked Operation
<i>Return Result Problem Codes</i>	
311	Unrecognize Invoke ID
312	Return Result Unexpected
313	Mistyped Parameter
<i>Return Error Problem Codes</i>	
314	Unrecognized Invoke ID
315	Return Error Unexpected
316	Unrecognized Error
317	Unexpected Error
318	Mistyped Parameter

#### 9.1.15 Siemens release cause for Call related Supplementary Services (CRSS) (AT+CEER)

Number	Description
0	ECT procedure failed (timer expired)
1	Call has been cleared without receiving an answer to ECT request
2	Initial conditions not fulfilled (one active, one held call)
3	Received "return error"
4	Call has been cleared without receiving an answer to CCBS request
5	Initial conditions for CCBS not fulfilled (Idle CRSS)

#### 9.1.16 GSM release cause for Session Management (SM) (AT+CEER)

Number	Description
<i>Causes related to nature of request</i>	
25	LLC or SMDCP failure
26	Insufficient resources
27	Unknown or missing access point name
28	Unknown PDP address or PDP type
29	User authentication failed
30	Activation rejected by GGSN
31	Activation rejected, unspecified
32	Service option not supported
33	Requested service option not subscribed
34	Service option temporarily out of order
35	NSAPI already used

Number	Description
36	Regular PDP context deactivation
37	QoS not accepted
38	Network failure
39	Reactivation requested
40	Feature not supported
<i>Causes related to invalid messages</i>	
81	Invalid transaction identifier value
95	Semantically incorrect message
96	Invalid mandatory information
97	Message type non-existent or not implemented
98	Message type not compatible with protocol state
99	Information element non-existent or not implemented
100	Conditional information element error
101	Message not compatible with protocol
111	Protocol error, unspecified

### 9.1.17 SIEMENS release cause for Session Management (SM) (AT+CEER)

Number	Description
3	The MS has not got any answer to the ACTIVATE PDP CONTEXT request message sent five times to the network
4	A MT PDP context which is active or in the activation process is deactivated because another MT PDP context with the same TI is requested by the network to be activated
5	A MT PDP context which is active or in the activation process is deactivated because another MT PDP context with the same TI is requested by the network to be activated. The activation request is rejected by the SM sending the cause 'insufficient resources' to the network because the SM was not able to perform the necessary comparisons for a static PDP address collision detection.
6	A MT PDP context which is active or in the activation process is deactivated because another MT PDP context with the same TI is requested by the network to be activated. As a static PDP address collision with an MO activating PDP context has been detected by the SM the SM discards the activation request
7	A MT PDP context request has been indicated but could not be processed in time. The activation request is rejected by the SM sending the cause 'insufficient resources' to the network.

### 9.1.18 SIEMENS release cause for GPRS API (AT+CEER)

Number	Description
0	Regular deactivation of the call
1	Action temporarily not allowed
2	Wrong connection type
3	Specified data service profile invalid
4	PDP type or address is unknown
255	Undefined

**9.1.19 SIEMENS release cause for Embedded Netcore (AT+CEER)**

Number	Description
0	Regular call deactivation
1	LCP stopped
255	Undefined

## 9.2 Summary of PIN requiring AT Commands

The following table lists all the AT commands that are available after the PIN was entered.

AT command	Required PIN
<i>Standard V25.ter AT commands</i>	
ATA	PIN 1
ATD	PIN 1
ATH	PIN 1
AT+ILRR	PIN 1
AT+VTS	PIN 1
<i>AT commands originating from GSM 07.07</i>	
AT+CACM	PIN 1, PIN 2
AT+CAMM	PIN 1, PIN 2
AT+CAOC	PIN 1
AT+CCFC	PIN 1
AT+CCUG	PIN 1
AT+CCWA	PIN 1
AT+CEER	PIN 1
AT+CGACT	PIN 1
AT+CGATT	PIN 1
AT+CGDATA	PIN 1
AT+CGDCONT	PIN 1
AT+CGQMIN	PIN 1
AT+CGQREQ	PIN 1
AT+CHLD	PIN 1
AT+CHUP	PIN 1
AT+CIMI	PIN 1
AT+CLCC	PIN 1
AT+CLCK	PIN 1
AT+CLIP read	PIN 1
AT+CLIR	PIN 1
AT+CMER	PIN 1
AT+CMGC	PIN 1
AT+CMGD	PIN 1
AT+CMGL	PIN 1
AT+CMGR	PIN 1
AT+CMGS	PIN 1
AT+CMGW	PIN 1
AT+CMSS	PIN 1
AT+CNMA	PIN 1
AT+CNMI	PIN 1
AT+COPN	PIN 1
AT+CPIN2	PIN1
AT+CPBR	PIN 1
AT+CPBS	PIN 1
AT+CPBW	PIN 1
AT+CPMS	PIN 1
AT+CPUC	PIN 1, PIN 2

AT command	Required PIN
AT+CPWD	PIN 1, PIN 2
AT+CR	PIN 1
AT+CRSM	PIN 1
AT+CSCA	PIN 1
AT+CSCB	PIN 1
AT+CSDH	PIN 1
AT+CSMP	PIN 1
AT+CSMS	PIN 1
AT+CUSD	PIN 1
<i>Siemens defined AT commands</i>	
AT^MONP	PIN 1
AT^MONI	PIN 1
AT^SACM	PIN 1, PIN 2
AT^SCNI	PIN 1
AT^SDLD	PIN 1
AT^SLCD	PIN 1
AT^SLCK	PIN 1
AT^SMGL	PIN 1
AT^SMGO	PIN 1
AT^SMGR	PIN 1
AT^SPBC	PIN 1
AT^SPBG	PIN 1
AT^SPBS	PIN 1
AT^SPLM	PIN 1
AT^SPLR	PIN 1
AT^SPLW	PIN 1
AT^SPWD	PIN 1, PIN 2
AT^SSDA	PIN 1
AT^STCD	PIN 1

### 9.3 AT commands available before entering the SIM PIN

The following table summarizes the AT commands you can use before the SIM PIN has been entered.

Explanation:

- AT command usable without PIN
- not usable without PIN
- n.a. AT command not available at all

AT command	Test	Read	Write / Execute	Note
<i>Standard V.25ter AT commands</i>				
ATD	n.a.	n.a	●	For emergency calls only
ATE	n.a.	n.a	●	
ATI	n.a.	n.a	●	
ATO	n.a.	n.a	●	
ATQ	n.a.	n.a	●	
ATS3	n.a.	●	●	
ATS4	n.a.	●	●	
ATS5	n.a.	●	●	
ATQ	n.a.	n.a.	●	
ATSn	n.a.	●	●	
ATS18	●	n.a	●	
ATV	n.a.	n.a	●	
ATX	n.a.	n.a	●	
ATZ	n.a.	n.a	●	
AT&C	n.a.	n.a	●	
AT&D	n.a.	n.a	●	
AT&F	n.a.	n.a	●	
AT&V	n.a.	n.a	●	
AT+IPR	●	●	●	
<i>AT commands originating from GSM 07.07</i>				
AT+CALA	●	●	●	
AT+CBST	●	●	●	
AT+CCLK	●	●	●	
AT+CFUN	●	●	●	
AT+CGMI	●	n.a.	●	
AT+CGMM	●	n.a.	●	
AT+CGMR	●	n.a.	●	
AT+CGSN	●	n.a.	●	
AT+CIND	●	●	●	
AT+CLIP	●	---	●	
AT+CLVL	●	●	●	Write command in audio mode 2-6 only
AT+CMEE	●	●	●	
AT+CMGF	●	●	●	
AT+CMUT	●	●	●	Write command depending on audio mode
AT+CMUX	●	●	Error	Only mode 0



AT command	Test	Read	Write / Execute	Note
AT+COPS	Phone busy	Unknown	---	Not useful without PIN
AT+CPAS	●	n.a.	●	Only 0
AT+CPIN	●	●	●	
AT+CR	●	●	●	
AT+CRC	●	●	●	
AT+CREG	●	●	●	
AT+CRLP	●	●	●	
AT+CSCS	●	●	●	
AT+CSNS	●	●	●	
AT+CSQ	●	---	●	
AT+CSSN	●	●	●	
AT+GCAP	●	n.a.	●	
AT+GMI	●	n.a.	●	
AT+GMM	●	n.a.	●	
AT+GMR	●	n.a.	●	
AT+GSN	●	n.a.	●	
AT+VTD	●	●	●	
AT+VTS	●	n.a.	●	
AT+WS46	●	●	●	12 (GSM digital cellular)
<i>Siemens defined AT commands</i>				
AT+CXXCID	●	n.a.	●	
AT^SBC	●	●	●	
AT^SCID	●	n.a.	●	
AT^SBC	●	●	●	
AT^SCKS	●	●	●	
AT^SCTM	●	●	●	
AT^SGAUTH	●	●	●	
AT^SHOM	●		●	
AT^SMSO	●	●	●	
AT^SM20	●	●	●	
AT^SNFA	●	●	●	
AT^SNFD	●	n.a.	●	
AT^SNFI	●	●	●	Write commd. in audio mode 2-6 only
AT^SNFM	●	●	●	Write commd. in audio mode 2-6 only
AT^SNFO	●	●	●	Write commd. in audio mode 2-6 only
AT^SNFPT	●	●	●	
AT^SNFS	●	●	●	
AT^SNFV	●	●	●	
AT^SNFW	●	n.a.	●	
AT^SPIC	●	n.a.	●	
AT^SRTC	●	●	●	
AT^SSCONF	●	●	●	
AT^SSYNC	●	●	●	

## 9.4 Standard GSM service codes

The following GSM command strings can be sent with the ATD command. Reference: GSM 2.30

Table 15: GSM service codes

*# code	Functionality	Possible response(s)
Phone security		
*#06#	Query IMEI	<IMEI> OK
**04*oldPIN*newPIN*newPIN#	Change PIN1	+CME ERROR: <err> / OK  See also Chapters 4.21, 4.35, 4.35.1, 4.36.
**042*oldPIN2*newPIN2*newPIN2#	Change PIN2	
**05*unblKey*newPIN*newPIN#	Unlock PIN 1. (Unlock SIM card after 3 failed attempts to enter PIN1)	
**052*unblKey*newPIN*newPIN#	Unlock PIN2 (after 3 failed attempts to enter PIN2)	
*#0003*MasterPhoneCode#	Unlock “PS” lock with Master Phone Code	
*[*]03*[ZZ]*oldPw*newPw*newPw#	Registration of net password (change call barring password)	
Phone number presentation		
*#30#	Check status of CLIP (Calling Line Identification Presentation)	+CLIP : <n>,<m> OK (Chapter 4.22, p. 94)
*#31#	Check status of CLIR (Calling Line Identification Restriction)	+CLIR : <n>,<m> OK (Chapter 4.23, p.95)
*31#<Phonenumber>[:]	Suppress CLIR	(Chapter 4.23, p.95)
#31#<Phonenumber>[:]	Activate CLIR	(Chapter 4.23, p.95)
*#76#	Check status of COLP (Connected Line Identification Presentation)	+COLP: 0,<m> OK (where <m> = active or not active)
*#77#	Check status of COLR (Connected Line Identification Restriction)	+COLR: 0,<m> OK (where <m> = active or not active)
Call forwarding (see also Chapter 9.4.1)		
(choice of *,#,*#,*#)21*DN*BS#	Act/deact/int/reg/eras CFU	^SCCFC : <reason>, <status>, <class> [... ] like +CCFC (Chapter 4.6, p. 70)
(choice of *,#,*#,*#)67*DN*BS#	Act/deact/int/reg/eras CF busy	
(choice of *,#,*#,*#)61*DN*BS*T#	Act/deact/int/reg/eras CF no reply	
(choice of *,#,*#,*#)62*DN*BS#	Act/deact/int/reg/eras CF no reach	
(choice of *,#,*#,*#)002*DN*BS*T#	Act/deact/int/reg/eras CF all	
(choice of *,#,*#,*#)004*DN*BS*T#	Act/deact/int/reg/eras CF all cond.	
Call waiting (see also Chapter 9.4.1)		
(choice of *,#,*#)43*BS#	Activation/deactivation/int WAIT	+CCWA: <status>, <class> *)
Call barring (see also Chapter 9.4.1)		
(choice of *,#,*#)33*Pw*BS#	Act/deact/int BAOC	^SCLCK: <fac>, <status>, <class> [, ... ] like +CLCK *) (see Chapter 4.21, p. 88)
(choice of *,#,*#)331*Pw*BS#	Act/deact/int BAOIC	
(choice of *,#,*#)332*Pw*BS#	Act/deact/int BAOIC exc.home	
(choice of *,#,*#)35*Pw*BS#	Act/deact/int. BAIC	
(choice of *,#,*#)351*Pw*BS#	Act/deact/int BAIC roaming	
#330*Pw*BS#	Deact. All Barring Services	
#333*Pw*BS#	Deact. All Outg.Barring Services	
#353*Pw*BS#	Deactivation. All Inc.Barring Services	
Call Hold / Multiparty		
C[C] in call	Call hold and multiparty	+CME ERROR: <err> / OK (see Chapter 4.16, p. 83)

*# code	Functionality	Possible response(s)
USSD messages		
[C]...[C]# (varies with the serving network)	Send USSD message	+CME ERROR: <err> / OK (see Chapter 4.48, p. 132)
C[C] (excluded 1[C]) (varies with the serving network)	Send USSD message	+CME ERROR: <err> / OK (see Chapter 4.48, p. 132)

#### Abbreviations of codes and responses used in Table 15

Codes / parameters to be sent with ATD		
ZZ = type of supplementary services:	Barring services	330
	All services	Not specified
DN = dialling number:	String of digits 0-9	
BS = basic service equivalent to parameter <class>	Voice	11
	FAX	13
	SMS	16
	SMS +FAX	12
	Voice + FAX	19
	Voice + SMS + FAX	10
	Data circuit asynchron	25
	Data circuit synchron	24
	PAD	27
	Packet	26
	Data circuit asynchron + PAD	21
	Data circuit synchron + packet	22
	Data circuit asynchron + synchron. + PAD	20
	All Services	---
T = time in seconds		
PW = Password		
C = character of TE character set (e.g. asterix, hash or digit in case of USSD, or digits in case of held calls or multiparty calls)		
Possible responses		
<m>	Mode: 0 = not active, 1 = active	
<n>	Unsolicited result code: 0 = presentation disabled, 1 = presentation enabled	
<status>	Status: 0 = not active, 1 = active	
<class>	Represents BS = basic service See Chapters 4.6 (AT+CCFC), 4.21 (AT+CLCK) and 9.4.1.	
<fac>	Facility lock. See Chapter 4.21 (AT+CLCK)	
<reason>	Call forwarding reason	

#### Function of \*# codes for Supplementary Services

*# code	Abbreviation used in Chapter 9.4	Function
*	act	Activate (except for CLIR, see list above)
**	reg	Register and activate
*#	int	Check status (interrogate)
#	deact	Deactivate (except for CLIR, see list above)
##	eras	Unregister and deactivate

### 9.4.1 Additional notes on ^SCCFC, ^SCCWA, ^SCLCK

The output of ^SCCFC, ^SCCWA, ^SCLCK depends on the teleservices coded in <class>. If no tele-service or bearer service is active for a given interrogation "7" is generated as default value for the <class> parameter, with only line being displayed (see example 1 below). If a service is activated for one or several classes, only the active classes will be displayed (see example 2).

The number of parameters displayed in the ^SCCFC and ^SCLCK output strings differs from the equivalent +CCFC and +CLCK output strings: In contrast to the +CCFC string, ^SCCFC also includes the <reason>. Likewise, the ^SCLCK string includes additionally <fac>.

Example 1	<p>When you check the CFU status of all classes, while none is active the following responses will be displayed:</p> <p>Using <code>at+ccfc=0,2</code>  <code>+CCFC: 0,1</code>  <code>+CCFC: 0,2</code>  <code>+CCFC: 0,4</code>  OK</p> <p>Using <code>atd*#21#</code>  <code>^SCCFC: 0,0,7</code>  OK</p>
Example 2	<p>To register and activate CFU for voice calls:  <code>at+ccfc=0,3,01771234567</code>  OK</p> <p>As an alternative you can use the ATD command:  <code>atd**21*01771234567*11#</code>  <code>^SCCFC: 0,1,1,"+491771234567",,145</code>  OK</p> <p>To check the status of all CFU settings using ATD (only active class will be displayed):  <code>atd*#21#</code>  <code>^SCCFC: 0,1,1,"+491771234567",145</code>  OK</p> <p>To check the status of all CFU settings using AT+CCFC (all classes will be displayed)  <code>at+ccfc=0,2</code>  <code>+CCFC: 1,1,"+491771234567",145</code>  <code>+CCFC: 0,2</code>  <code>+CCFC: 0,4</code>  OK</p>
Example 3	<p>To query the status of CFU for voice calls:  <code>atd*#21**11#;</code>  <code>^SCCFC: 0,1,1,"+491771234567",145</code>  OK</p>

Example 4	<p>To query the status of CFU for voice + SMS + data:</p> <pre>atd*#21**10#; ^SCCFC: 0,1,1,"+493038649027",145 ^SCCFC: 0,1,4,"+493038649027",145 OK</pre> <p>The response does not include SMS, since no call forwarding for SMS is not active.</p>
Example 5	<p>To query the status of CFU for voice + SMS + data:</p> <pre>atd*#21**10#; ^SCCFC: 0,0,7 OK</pre> <p>No CFU enabled for voice + SMS + data.</p>
Example 6	<p>To register and activate CFU for asynchronous data mode ("Data circuit asynchronous"):</p> <pre>atd**21*0301234567*25# ^SCCFC: 0,1,2,"+49301234567",145 OK</pre>
Example 7	<p>To query the status of CFU for asynchronous data mode:</p> <p>If CFU is not active the response is not specific to asynchronous data mode.</p> <pre>atd*#21**25#; ^SCCFC: 0,0,7 OK</pre> <p>If CFU is enabled for asynchronous data mode the response is as follows:</p> <pre>atd*#21**25# ^SCCFC: 0,1,2,"+49301234567",145 OK</pre>

## 9.5 GSM and UCS2 alphabet tables

This section provides tables for the special GSM 03.38 alphabet supported by the ME (see chapter 1.5). Below each GSM character you can find the corresponding two byte UCS2 character value.

Main character table of GSM 03.38 alphabet				b7	0	0	0	0	1	1	1	1
				b6	0	0	1	1	0	0	1	1
				b5	0	1	0	1	0	1	0	1
b4	b3	b2	b1		0	1	2	3	4	5	6	7
0	0	0	0	0	@ 0040	Δ 0394	SP 0020	0 0030	i 00A1	P 0050	¿ 00BF	p 0070
0	0	0	1	1	£ 00A3	_ 005F	! 0021	1 0031	A 0041	Q 0051	a 0061	q 0071
0	0	1	0	2	\$ 0024	Φ 03A6	" 0022	2 0032	B 0042	R 0052	b 0062	r 0072
0	0	1	1	3	¥ 00A5	Γ 0393	# 0023	3 0033	C 0043	S 0053	c 0063	s 0073
0	1	0	0	4	è 00E8	Λ 039B	¤ 00A4	4 0034	D 0044	T 0054	d 0064	t 0074
0	1	0	1	5	é 00E9	Ω 03A9	% 0025	5 0035	E 0045	U 0055	e 0065	u 0075
0	1	1	0	6	ù 00F9	Π 03A0	& 0026	6 0036	F 0046	V 0056	f 0066	v 0076
0	1	1	1	7	ì 00EC	Ψ 03A8	' 0027	7 0037	G 0047	W 0057	g 0067	w 0077
1	0	0	0	8	ò 00F2	Σ 03A3	( 0028	8 0038	H 0048	X 0058	h 0068	x 0078
1	0	0	1	9	ç 00E7	Θ 0398	) 0029	9 0039	I 0049	Y 0059	i 0069	y 0079
1	0	1	0	10 /A	LF [LF] <sup>2)</sup>	Ξ 039E	* 002A	: 003A	J 004A	Z 005A	j 006A	z 007A
1	0	1	1	11 /B	Ø 00D8	<sup>1)</sup>	+ 002B	; 003B	K 004B	Ä 00C4	k 006B	ä 00E4
1	1	0	0	12 /C	ø 00F8	Æ 00C6	, 002C	< 003C	L 004C	Ö 00D6	l 006C	ö 00F6
1	1	0	1	13 /D	CR [CR] <sup>2)</sup>	æ 00E6	- 002D	= 003D	M 004D	Ñ 00D1	m 006D	ñ 00F1
1	1	1	0	14 /E	À 00C5	ß 00DF	. 002E	> 003E	N 004E	Ü 00DC	n 006E	ü 00FC
1	1	1	1	15 /F	å 00E5	É 00C9	/ 002F	? 003F	O 004F	Ş 00A7	o 006F	à 00E0

<sup>1)</sup> This code is an escape to the following extension of the 7 bit default alphabet table.

<sup>2)</sup> This code is not a printable character and therefore not defined for the UCS2 alphabet. It shall be treated as the accompanying control character.

Extension character table of GSM 03.38 alphabet				b7	0	0	0	0	1	1	1	1
				b6	0	0	1	1	0	0	1	1
				b5	0	1	0	1	0	1	0	1
b4	b3	b2	b1		0	1	2	3	4	5	6	7
0	0	0	0	0					 007C			
0	0	0	1	1								
0	0	1	0	2								
0	0	1	1	3								
0	1	0	0	4		^ 005E						
0	1	0	1	5							€ <sup>2)</sup> 20AC	
0	1	1	0	6								
0	1	1	1	7								
1	0	0	0	8			{ 007B					
1	0	0	1	9			} 007D					
1	0	1	0	10 /A	<sup>3)</sup> [LF]							
1	0	1	1	11 /B		<sup>1)</sup>						
1	1	0	0	12 /C				[ 005B				
1	1	0	1	13 /D				~ 007E				
1	1	1	0	14 /E				] 005D				
1	1	1	1	15 /F			\ 005C					

In the event that an MS receives a code where a symbol is not represented in the above table then the MS shall display the character shown in the main default 7 bit alphabet table.

- 1) This code value is reserved for the extension to another extension table. On receipt of this code, a receiving entity shall display a space until another extension table is defined.

- 2) This code represents the EURO currency symbol. The code value is the one used for the character 'e'. Therefore a receiving entity which is incapable of displaying the EURO currency symbol will display the character 'e' instead.
- 3) This code is defined as a Page Break character and may be used for example in compressed CBS messages. Any mobile which does not understand the 7 bit default alphabet table extension mechanism will treat this character as Line Feed.